



ZPL II Programming

Guide

For Firmware Version x.14 and Later



© 2007 ZIH Corp. The copyrights in this manual and the software and/or firmware in the label printer described therein are owned by ZIH Corp. Unauthorized reproduction of this manual or the software and/or firmware in the label printer may result in imprisonment of up to one year and fines of up to \$10,000 (17 U.S.C.506). Copyright violators may be subject to civil liability.

This product may contain ZPL[®], ZPL II[®], and ZebraLink[™] programs; Element Energy Equalizer[®] Circuit; E³[®]; and Monotype Imaging fonts. Software © ZIH Corp. All rights reserved worldwide.

ZebraLink and all product names and numbers are trademarks, and Zebra, the Zebra logo, ZPL, ZPL II, Element Energy Equalizer Circuit, and E³ Circuit are registered trademarks of ZIH Corp. All rights reserved worldwide.

All other brand names, product names, or trademarks belong to their respective holders. For additional trademark information, please see “Trademarks” on the product CD.

Proprietary Statement This manual contains proprietary information of Zebra Technologies Corporation and its subsidiaries (“Zebra Technologies”). It is intended solely for the information and use of parties operating and maintaining the equipment described herein. Such proprietary information may not be used, reproduced, or disclosed to any other parties for any other purpose without the express, written permission of Zebra Technologies.

Product Improvements Continuous improvement of products is a policy of Zebra Technologies. All specifications and designs are subject to change without notice.

Liability Disclaimer Zebra Technologies takes steps to ensure that its published Engineering specifications and manuals are correct; however, errors do occur. Zebra Technologies reserves the right to correct any such errors and disclaims liability resulting therefrom.

Limitation of Liability In no event shall Zebra Technologies or anyone else involved in the creation, production, or delivery of the accompanying product (including hardware and software) be liable for any damages whatsoever (including, without limitation, consequential damages including loss of business profits, business interruption, or loss of business information) arising out of the use of, the results of use of, or inability to use such product, even if Zebra Technologies has been advised of the possibility of such damages. Some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

Contents



Contents	iii
About This Document	xix
Who Should Use This Document	xx
How This Document Is Organized	xx
Contacts	xxi
Web Site	xxi
The Americas	xxi
Europe, Africa, Middle East, and India	xxi
Asia Pacific	xxi
Document Conventions	xxii
1 • Introduction	1
2 • ZPL Commands	3
Basic ZPL Exercises and Examples	5
Before you begin	5
^A Scalable/Bitmapped Font	13
^A@ Use Font Name to Call Font	15
^B0 Aztec Bar Code Parameters	17
^B1 Code 11 Bar Code	19
^B2 Interleaved 2 of 5 Bar Code	21
^B3 Code 39 Bar Code	23
^B4 Code 49 Bar Code	27
^B5 Planet Code bar code	31
^B7 PDF417 Bar Code	32
^B8 EAN-8 Bar Code	36
^B9 UPC-E Bar Code	38
^BA Code 93 Bar Code	40

^BB	CODABLOCK Bar Code	44
^BC	Code 128 Bar Code (Subsets A, B, and C)	48
^BD	UPS MaxiCode Bar Code	61
^BE	EAN-13 Bar Code	64
^BF	MicroPDF417 Bar Code	66
^BI	Industrial 2 of 5 Bar Codes	68
^BJ	Standard 2 of 5 Bar Code	70
^BK	ANSI Codabar Bar Code	72
^BL	LOGMARS Bar Code	74
^BM	MSI Bar Code	76
^BO	Aztec Bar Code Parameters	78
^BP	Plessey Bar Code	80
^BQ	QR Code Bar Code	82
^BR	RSS (Reduced Space Symbology) Bar Code	90
^BS	UPC/EAN Extensions	92
^BT	TLC39 bar code	95
^BU	UPC-A Bar Code	97
^BX	Data Matrix Bar Code	99
^BY	Bar Code Field Default	103
^BZ	POSTNET Bar Code	105
^CC	~CC Change Carets	107
^CD	~CD Change Delimiter	108
^CF	Change Alphanumeric Default Font	109
^CI	Change International Font/Encoding	110
^CM	Change Memory Letter Designation	114
^CO	Cache On	115
^CT	~CT Change Tilde	117
^CV	Code Validation	118
^CW	Font Identifier	120
~DB	Download Bitmap Font	122
~DE	Download Encoding	124
^DF	Download Format	126
~DG	Download Graphics	127
~DN	Abort Download Graphic	130
~DS	Download Intellifont (Scalable Font)	131
~DT	Download Bounded TrueType Font	132
~DU	Download Unbounded TrueType Font	133
~DY	Download Graphics / Native TrueType or OpenType Font	134
~EG	Erase Download Graphics	137
^FB	Field Block	138

^FC Field Clock (for Real-Time Clock)	141
^FD Field Data	142
^FH Field Hexadecimal Indicator	143
^FL Font Linking	145
^FM Multiple Field Origin Locations	148
^FN Field Number	151
^FO Field Origin	152
^FP Field Parameter	153
^FR Field Reverse Print	154
^FS Field Separator	155
^FT Field Typeset	156
^FV Field Variable	158
^FW Field Orientation	159
^FX Comment	161
^GB Graphic Box	162
^GC Graphic Circle	164
^GD Graphic Diagonal Line	165
^GE Graphic Ellipse	166
^GF Graphic Field	167
^GS Graphic Symbol	169
~HB Battery Status	170
~HD Head Diagnostic	171
^HF Host Format	172
^HG Host Graphic	173
^HH Configuration Label Return	174
~HI Host Identification	175
~HM Host RAM Status	176
~HS Host Status Return	177
^HT Host Linked Fonts List	180
~HU Return ZebraNet Alert Configuration	181
^HV Host Verification	182
^HW Host Directory List	183
^HY Upload Graphics	185
^HZ Display Description Information	186
^ID Object Delete	188
^IL Image Load	190
^IM Image Move	191
^IS Image Save	192
~JA Cancel All	194
^JB Initialize Flash Memory	195

~JB	Reset Optional Memory	196
~JC	Set Media Sensor Calibration	197
~JD	Enable Communications Diagnostics	198
~JE	Disable Diagnostics	199
~JF	Set Battery Condition	200
~JG	Graphing Sensor Calibration	201
^JJ	Set Auxiliary Port	202
~JL	Set Label Length	204
^JM	Set Dots per Millimeter	205
~JN	Head Test Fatal	206
~JO	Head Test Non-Fatal	207
~JP	Pause and Cancel Format	208
~JR	Power On Reset	209
^JS	Sensor Select	210
~JS	Change Backfeed Sequence	211
^JT	Head Test Interval	213
^JU	Configuration Update	214
^JW	Set Ribbon Tension	215
~JX	Cancel Current Partially Input Format	216
^JZ	Reprint After Error	217
~KB	Kill Battery (Battery Discharge Mode)	218
^KD	Select Date and Time Format (for Real Time Clock)	219
^KL	Define Language	220
^KN	Define Printer Name	221
^KP	Define Password	222
^LF	List Font Links	223
^LH	Label Home	224
^LL	Label Length	225
^LR	Label Reverse Print	226
^LS	Label Shift	227
^LT	Label Top	228
^MC	Map Clear	229
^MD	Media Darkness	230
^MF	Media Feed	231
^ML	Maximum Label Length	232
^MM	Print Mode	233
^MN	Media Tracking	235
^MP	Mode Protection	236
^MT	Media Type	238
^MU	Set Units of Measurement	239

^MW	Modify Head Cold Warning	241
~NC	Network Connect	242
^NI	Network ID Number	243
~NR	Set All Network Printers Transparent	244
^NS	Change Networking Settings	245
~NT	Set Currently Connected Printer Transparent	246
^PA	Advanced Text Properties	247
^PF	Slew Given Number of Dot Rows	248
^PH	~PH Slew to Home Position	249
^PM	Printing Mirror Image of Label	250
^PO	Print Orientation	251
^PP	~PP Programmable Pause	252
^PQ	Print Quantity	253
^PR	Print Rate	254
~PR	Applicator Reprint	256
~PS	Print Start	257
^PW	Print Width	258
~RO	Reset Advanced Counter	259
^SC	Set Serial Communications	260
~SD	Set Darkness	261
^SE	Select Encoding Table	262
^SF	Serialization Field (with a Standard ^FD String)	263
^SL	Set Mode and Language (for Real-Time Clock)	267
^SN	Serialization Data	269
^SO	Set Offset (for Real-Time Clock)	271
^SP	Start Print	272
^SQ	Halt ZebraNet Alert	274
^SR	Set Printhead Resistance	276
^SS	Set Media Sensors	277
^ST	Set Date and Time (for Real-Time Clock)	279
^SX	Set ZebraNet Alert	280
^SZ	Set ZPL	282
~TA	Tear-off Adjust Position	283
^TB	Text Blocks	284
^TO	Transfer Object	285
~WC	Print Configuration Label	287
^WD	Print Directory Label	288
^XA	Start Format	290
^XB	Suppress Backfeed	291
^XF	Recall Format	292

^XG Recall Graphic	293
^XZ End Format	294
^ZZ Printer Sleep	295
3 • RFID Commands	297
RFID Command Overview	298
Printer and Firmware Compatibility	299
^HL or ~HL Return RFID Data Log to Host	300
^HR Calibrate RFID Transponder Position	301
^RA Read AFI or DSFID Byte	304
^RB Define EPC Data Structure	306
^RE Enable/Disable E.A.S. Bit	308
^RF Read or Write RFID Format	309
^RI Get RFID Tag ID	311
^RM Enable RFID Motion	312
^RN Detect Multiple RFID Tags in Encoding Field	313
~RO Reset Advanced Counters	314
^RR Specify RFID Retries for a Block	316
^RS Set Up RFID Parameters	317
^RT Read RFID Tag	323
~RV Report RFID Encoding Results	325
^RW Set RFID Read and Write Power Levels	326
^RZ Set RFID Tag Password and Lock Tag	327
^WF Encode AFI or DSFID Byte	329
^WT Write (Encode) Tag	331
^WV Verify RFID Encoding Operation	333
4 • Wireless Commands	335
^KC Set Client Identifier (Option 61)	336
^NB Search for Wired Print Server during Network Boot	337
^NN Set SNMP	338
^NP Set Primary/Secondary Device	339
^NS Change Wired Networking Settings	340
^NT Set SMTP	341
^NW Set Web Authentication Timeout Value	342
^WA Set Antenna Parameters	343
^WE Set WEP Mode	344
^WI Change Wireless Network Settings	346
^WL Set LEAP Parameters	348
~WL Print Network Configuration Label	349
^WP Set Wireless Password	350

^WR Set Transmit Rate	351
~WR Reset Wireless Radio Card and Print Server	352
^WS Set Wireless Radio Card Values	353
^WX Configure Wireless Securities	355
Supporting Parameters for Different Security Types	358
5 • Set/Get/Do Commands	363
Overview	364
setvar Command	364
getvar Command	364
do Command	365
Command Structure	366
How to Send Multiple SGD Commands	366
card.inserted	367
card.mac_addr	368
ip.addr	369
ip.arp_interval	370
ip.bootp.enable	371
ip.dhcp.cid_all	372
ip.dhcp.cid_enable	373
ip.dhcp.cid_prefix	374
ip.dhcp.cid_suffix	375
ip.dhcp.cid_type	376
ip.dhcp.enable	377
ip.ftp.enable	378
ip.gateway	379
ip.http.enable	380
ip.lpd.enable	381
ip.netmask	382
ip.pop3.enable	383
ip.pop3.password	384
ip.pop3.poll	385
ip.pop3.server_addr	386
ip.pop3.username	387
ip.port	388
ip.smtp.domain	389
ip.smtp.enable	390
ip.smtp.server_addr	391
ip.snmp.enable	392
ip.snmp.get_community_name	393
ip.snmp.set_community_name	394
ip.tcp.enable	395
ip.telnet.enable	396
ip.udp.enable	397
wlan.adhocautomode	398

wlan.adhocchannel	399
wlan.associated.....	400
wlan.channel_mask	401
wlan.essid.....	403
wlan.firmware_version	404
wlan.keep_alive.enable	405
wlan.keep_alive.timeout.....	406
wlan.kerberos.kdc	407
wlan.kerberos.password	408
wlan.kerberos.realm.....	409
wlan.kerberos.username	410
wlan.operating_mode.....	411
wlan.password	413
wlan.preamble	414
wlan.private_key_password	415
wlan.roam.interval.....	416
wlan.roam.signal.....	417
wlan.security.....	418
wlan.signal_noise	420
wlan.signal_quality.....	421
wlan.signal_strength.....	422
wlan.station_name	423
wlan.tx_power	424
wlan.tx_rate	425
wlan.username	426
wlan.wep.auth_type.....	427
wlan.wep.index.....	428
wlan.wep.key1	429
wlan.wep.key2	430
wlan.wep.key3	431
wlan.wep.key4	432
wlan.wep.key_format.....	433
wlan.wpa.psk	434
A • Zebra Code Pages	435
Zebra Code Page 850.....	436
Zebra Code Page 1252.....	438
B • ASCII	441
ASCII Code Chart.....	442
C • Fonts and Bar Codes	445
Standard Printer Fonts	446
Proportional and Fixed Spacing	447

Scalable Versus Bitmapped Fonts	449
Scalable Fonts	449
Bitmapped Fonts	449
Font Matrices	451
6 dot/mm printhead	451
8 dot/mm (203 dpi) printhead	451
12 dot/mm (300 dpi) printhead	452
24 dot/mm (600 dpi) printhead	452
Bar Codes	453
Basic Format for Bar Codes	453
Bar Code Field Instructions	455
Bar Code Command Groups	457
D • Mod 10 and Mod 43 Check Digits	459
Mod 10 Check Digit	460
Mod 43 Check Digit	461
E • ZB64 Encoding and Compression	463
Introduction to B64 and Z64	464
B64 and Z64 Encoding	466
F • Field Interactions	469
Normal Orientation	470
Rotated Orientation	471
Bottom Up Orientation	472
Inverted Orientation	473
G • Features	475
Firmware x.15	476
Wireless Securities	476
ZPL and SGD Commands	477
SNMP	477
Set/Get/Do Support	477
Firmware x.14	478
Global Printing Solution	479
Glossary	481
Glossary of Terms	482
Index	485



Notes •



Functional Table of Contents

Abort Download Graphic	130
Advanced Text Properties	247
ANSI Codabar Bar Code	72
Applicator Reprint	256
Aztec Bar Code Parameters	17
Aztec Bar Code Parameters	78
Bar Code Field Default	103
Battery Status	170
Cache On	115
Calibrate RFID Transponder Position	301
Cancel All	194
Cancel Current Partially Input Format	216
Change Alphanumeric Default Font	109
Change Backfeed Sequence	211
Change Carets	107
Change Delimiter	108
Change International Font/Encoding	110
Change Memory Letter Designation	114
Change Networking Settings	245
Change Tilde	117
Change Wired Networking Settings	340
Change Wireless Network Settings	346
CODABLOCK Bar Code	44
Code 11 Bar Code	19
Code 128 Bar Code (Subsets A, B, and C)	48
Code 39 Bar Code	23
Code 49 Bar Code	27
Code 93 Bar Code	40
Code Validation	118

Comment	161
Configuration Label Return	174
Configuration Update	214
Configure Wireless Securities	355
Data Matrix Bar Code	99
Define EPC Data Structure	306
Define Language	220
Define Password	222
Define Printer Name	221
Detect Multiple RFID Tags in Encoding Field	313
Disable Diagnostics	199
Display Description Information	186
Download Bitmap Font	122
Download Bounded TrueType Font	132
Download Encoding	124
Download Format	126
Download Graphics	127
Download Graphics / Native TrueType or OpenType Font	134
Download Intellifont (Scalable Font)	131
Download Unbounded TrueType Font	133
EAN-13 Bar Code	64
EAN-8 Bar Code	36
Enable Communications Diagnostics	198
Enable RFID Motion	312
Enable/Disable E.A.S. Bit	308
Encode AFI or DSFID Byte	329
End Format	294
Erase Download Graphics	137
Field Block	138
Field Clock (for Real-Time Clock)	141
Field Data	142
Field Hexadecimal Indicator	143
Field Number	151
Field Orientation	159
Field Origin	152
Field Parameter	153
Field Reverse Print	154
Field Separator	155
Field Typeset	156
Field Variable	158
Font Identifier	120
Font Linking	145
Get RFID Tag ID	311
Graphic Box	162

Graphic Circle	164
Graphic Diagonal Line	165
Graphic Ellipse	166
Graphic Field	167
Graphic Symbol	169
Graphing Sensor Calibration	201
Halt ZebraNet Alert	274
Head Diagnostic	171
Head Test Fatal	206
Head Test Interval	213
Head Test Non-Fatal	207
Host Directory List	183
Host Format	172
Host Graphic	173
Host Identification	175
Host Linked Fonts List	180
Host RAM Status	176
Host Status Return	177
Host Verification	182
Image Load	190
Image Move	191
Image Save	192
Industrial 2 of 5 Bar Codes	68
Initialize Flash Memory	195
Interleaved 2 of 5 Bar Code	21
Kill Battery (Battery Discharge Mode)	218
Label Home	224
Label Length	225
Label Reverse Print	226
Label Shift	227
Label Top	228
List Font Links	223
LOGMARS Bar Code	74
Map Clear	229
Maximum Label Length	232
Media Darkness	230
Media Feed	231
Media Tracking	235
Media Type	238
MicroPDF417 Bar Code	66
Mode Protection	236
Modify Head Cold Warning	241
MSI Bar Code	76
Multiple Field Origin Locations	148

Network Connect	242
Network ID Number	243
Object Delete	188
Pause and Cancel Format	208
PDF417 Bar Code	32
Planet Code bar code	31
Plessey Bar Code	80
POSTNET Bar Code	105
Power On Reset	209
Print Configuration Label	287
Print Directory Label	288
Print Mode	233
Print Network Configuration Label	349
Print Orientation	251
Print Quantity	253
Print Rate	254
Print Start	257
Print Width	258
Printer Sleep	295
Printing Mirror Image of Label	250
Programmable Pause	252
QR Code Bar Code	82
Read AFI or DSFID Byte	304
Read or Write RFID Format	309
Read RFID Tag	323
Recall Format	292
Recall Graphic	293
Report RFID Encoding Results	325
Reprint After Error	217
Reset Advanced Counter	259
Reset Advanced Counters	314
Reset Optional Memory	196
Reset Wireless Radio Card and Print Server	352
Return RFID Data Log to Host	300
Return ZebraNet Alert Configuration	181
RSS (Reduced Space Symbolology) Bar Code	90
Scalable/Bitmapped Font	13
Search for Wired Print Server during Network Boot	337
Select Date and Time Format (for Real Time Clock)	219
Select Encoding Table	262
Sensor Select	210
Serialization Data	269
Serialization Field (with a Standard ^FD String)	263
Set All Network Printers Transparent	244

Set Antenna Parameters	343
Set Auxiliary Port	202
Set Battery Condition	200
Set Client Identifier (Option 61)	336
Set Currently Connected Printer Transparent	246
Set Darkness	261
Set Date and Time (for Real-Time Clock)	279
Set Dots per Millimeter	205
Set Label Length	204
Set LEAP Parameters	348
Set Media Sensor Calibration	197
Set Media Sensors	277
Set Mode and Language (for Real-Time Clock)	267
Set Offset (for Real-Time Clock)	271
Set Primary/Secondary Device	339
Set Printhead Resistance	276
Set RFID Read and Write Power Levels	326
Set RFID Tag Password and Lock Tag	327
Set Ribbon Tension	215
Set Serial Communications	260
Set SMTP	341
Set SNMP	338
Set Transmit Rate	351
Set Units of Measurement	239
Set Up RFID Parameters	317
Set Web Authentication Timeout Value	342
Set WEP Mode	344
Set Wireless Password	350
Set Wireless Radio Card Values	353
Set ZebraNet Alert	280
Set ZPL	282
Slew Given Number of Dot Rows	248
Slew to Home Position	249
Specify RFID Retries for a Block	316
Standard 2 of 5 Bar Code	70
Start Format	290
Start Print	272
Suppress Backfeed	291
Tear-off Adjust Position	283
Text Blocks	284
TLC39 bar code	95
Transfer Object	285
UPC/EAN Extensions	92
UPC-A Bar Code	97

UPC-E Bar Code	38
Upload Graphics	185
UPS MaxiCode Bar Code	61
Use Font Name to Call Font	15
Verify RFID Encoding Operation	333
Write (Encode) Tag.....	331

About This Document



This section provides you with contact information, document structure and organization, and additional reference documents.

Contents

Who Should Use This Document	xx
How This Document Is Organized	xx
Contacts	xxi
Document Conventions	xxii

Who Should Use This Document

This Guide is for programmers who are familiar working with programming languages.

How This Document Is Organized

The Guide is set up as follows:

Section	Description
<i>Introduction</i>	Provides a high-level overview about this guide and Zebra Programming Language (ZPL).
<i>ZPL Commands</i>	Provides an alphabetical, detailed description of each ZPL command.
<i>RFID Commands</i>	Provides an alphabetical, detailed description of each ZPL RFID command, and some examples of how to use them.
<i>Wireless Commands</i>	This section provides you with contact information, document structure and organization, and additional reference documents.
<i>Set/Get/Do Commands</i>	Provides an alphabetical, detailed description of each SGD command.
Appendixes	The appendixes include: <i>Zebra Code Pages</i> <i>ASCII</i> <i>Fonts and Bar Codes</i> <i>Mod 10 and Mod 43 Check Digits</i> <i>ZB64 Encoding and Compression</i> <i>Field Interactions</i> <i>Features</i>
<i>Glossary</i>	Glossary of terms.

Contacts

You can contact Zebra Technologies at the following:

Web Site

<http://www.zebra.com>

Technical Support via the Internet is available 24 hours per day, 365 days per year. Go to <http://www.zebra.com/support>.

The Americas

Regional Headquarters	Technical Support	Customer Service Dept.
Zebra Technologies International, LLC 333 Corporate Woods Parkway Vernon Hills, Illinois 60061.3109 U.S.A T: +1 847 793 2600 Toll-free +1 800 423 0422 F: +1 847 913 8766	T: +1 847 913 2259 F: +1 847 913 2578 Hardware: hwtsamerica@zebra.com Software: swtsamerica@zebra.com	For printers, parts, media, and ribbon, please call your distributor, or contact us. T: +1 866 230 9494 E: VHCustServ@zebra.com

Europe, Africa, Middle East, and India

Regional Headquarters	Technical Support	Internal Sales Dept.
Zebra Technologies Europe Limited Zebra House The Valley Centre, Gordon Road High Wycombe Buckinghamshire HP13 6EQ, UK T: +44 (0)1494 472872 F: +44 (0) 1494 450103	T: +44 (0) 1494 768298 F: +44 (0) 1494 768210 Germany: Tsgermany@zebra.com France: Tsfrance@zebra.com Spain/Portugal: Tspain@zebra.com All other areas: Tseurope@zebra.com	For printers, parts, media, and ribbon, please call your distributor, or contact us. T: +44 (0) 1494 768316 F: +44 (0) 1494 768244 E: mseurope@zebra.com

Asia Pacific

Regional Headquarters	Technical Support	Customer Service
Zebra Technologies Asia Pacific, LLC 16 New Industrial Road #05-03 Hudson TechnoCentre Singapore 536204 T: +65 6858 0722 F: +65 6885 0838	T: +65 6858 0722 F: +65 6885 0838 E: tsasiapacific@zebra.com	For printers, parts, media, and ribbon, please call your distributor, or contact us. T: +65 6858 0722 F: +65 6885 0837

Document Conventions

The following conventions are used throughout this document to convey certain information.

Alternate Color (online only) Cross-references contain hot links to other sections in this guide. If you are viewing this guide online in .pdf format, you can click the cross-reference ([blue text](#)) to jump directly to its location.

LCD Display Examples Text from a printer's Liquid Crystal Display (LCD) appears in **Bubbledot ICG** font.

Command Line Examples Command line examples appear in **Courier New** font. For example, type `ZTools` to get to the Post-Install scripts in the `bin` directory.

Files and Directories File names and directories appear in **Courier New** font. For example, the `Zebra<version number>.tar` file and the `/root` directory.

Icons Used



Identifies features that are available in printers with firmware version V60.15.x, V50.15.x, or later.



Identifies features that are available in printers with firmware version V60.14.x, V50.14.x, or later.



Important • Advises you of information that is essential to complete a task.




Note • Indicates neutral or positive information that emphasizes or supplements important points of the main text.



Example • Provides an example, often a scenario, to better clarify a section of text.

Illustration Callouts Callouts are used when an illustration contains information that needs to be labeled and described. A table that contains the labels and descriptions follows the graphic. [Figure 1](#) provides an example.

Figure 1 • Sample Figure with Callouts

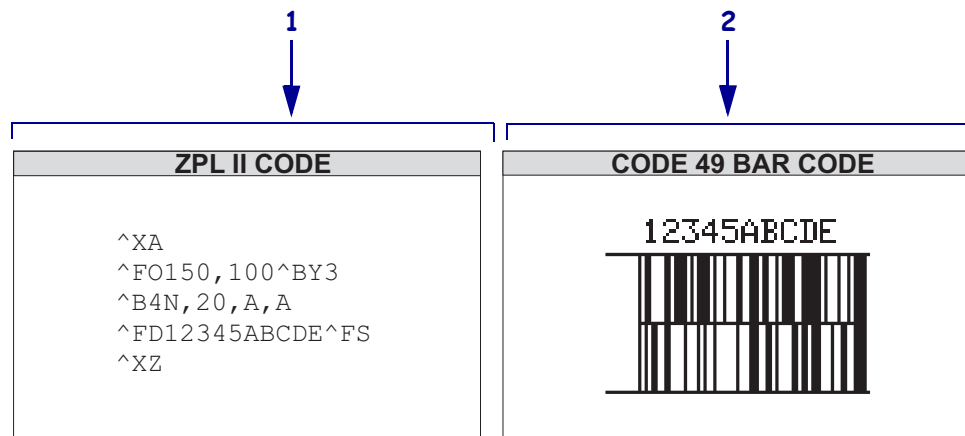

1	ZPL Code
2	Generated Label



Notes • _____



Introduction

This guide is the unabridged, alphabetical reference of all ZPL and SGD programming commands supported in the firmware.



Important • These are important points to note when using ZPL and SGD commands:

- ZPL and SGD commands should be sent to the printer as separate files.
- Certain settings can be controlled by both ZPL and SGD. Configuration changes made in ZPL can affect configuration changes made in SGD.

Firmware You can get the printer's firmware version by printing out a configuration label. For instructions to do so, see your printer's user guide.



Note • For firmware upgrades go to: www.zebra.com.

Many word processors or a text editor is capable of creating ASCII files can be used to recreate most examples in this guide. However, for other encodings such as Unicode, a text editor such as Microsoft Notepad is needed.

If there are any terms used in this guide that you need clarification on, please see the [Glossary on page 481](#).



Notes • _____



ZPL Commands

This section contains the complete alphabetical listing of ZPL II commands.

Description This heading provides an explanation of how the command is used, what it is capable of, and any defining characteristics it has.

Format Format explains how the command is syntactically arranged and what parameters it contains.

For Example The ^B8 command prints a EAN-8 bar code. The format of the ^B8 command is: ^B8o, h, f, g. It is arranged with the caret symbol (^), the command code (B8), and the parameters and are replaced with supported values.

Parameters If a command has values that can be defined to make its function more specific, these are outlined as parameters. Parameters typically have *Accepted Values* and *Default Values*.

Still using the ^B8 example, the h parameter is defined as:

h = bar code height (in dots)

Accepted Values: 1 to 32000

Default Value: value set by ^BY

If the command has no parameters – for example ~JA (Cancel All) – the parameter heading is removed, indicating that the format of the command (~JA) is acceptable ZPL II code.



Example • When the command is best clarified in context, an example of the ZPL II code is provided. Text indicating exact code entered is printed in an easily recognizable Courier font. An example of code using the ^B8 command looks like this:

```
^XA
^FO50,50
^B8N,100,Y,N
^FD1234567^FS
^XZ
```

Notice that the ^B8 parameter letters have been replaced with real values that apply to the command. In this example N,100,Y,N have been entered.

Comment This section is reserved for notes that are of value to a programmer, warnings of potential command interactions, or command-specific information that should be taken into consideration.



Example • An example comment is: **This command works only when the printer is idle, or This command is ignored if a value exceeds the parameter limits.**

Comments are also included next to parameters if they apply directly to a particular setting.

Basic ZPL Exercises and Examples

The purpose of these exercises is to introduce basic ZPL commands to novice ZPL users.

Make sure this checklist is complete:

- ☐ Load the printer with labels that are big enough to give you ample space to work with.
- ☐ Print a configuration label (CANCEL test).
- ☐ Look at the configuration label and make sure that the `LEFT POSITION` is set to 000 and `LABEL TOP` is set to 000.
- ☐ Determine the printer's resolution. It is listed on the configuration label. $8/\text{MM} = 200 \text{ dpi}$, $12/\text{MM} = 300 \text{ dpi}$ and $24/\text{MM} = 600 \text{ dpi}$.

Tips

These are some tips when using ZPL:

- Use the DOS text editor to write ZPL files.
- Save the file as a `.txt` file and copy it to the printer from DOS command line.

Before you begin

Some things that are important to understand before you begin are:

- 200 dpi means the resolution of the printhead is 200 dots per inch. If you program the printer to draw a line 100 dots long that equals a half inch. 100 dots on a 300 dpi printer prints a line 1/3 inch long.
- The home position that all your coordinates are referencing is at the left-hand trailing edge of the label as the label comes out of the printer. (There are some exceptions to this.)

Exercises

The exercises start simple and gradually progress to give you an opportunity to try a variety of commonly used ZPL commands. Not all commands are covered, but this should be a good core of commands to learn. Some commands may not be supported due to the firmware version in your printer.

Exercise 1 • This exercise shows you how to specify a location for an entered name.

1. Print your name on the label.
2. Start by printing just your name on the label. Use this format as a model:



Important • Your name goes where you see **xxxxxxxxxxxx** in the second line of code.

3. Send this format to the printer:

```

1 → ^XA
2 → ^FO50,50^ADN,36,20^FDxxxxxxxxxxxx
3 → ^FS
4 → ^XZ
                    ↑
                    5
  
```

1	Every format starts with the ^XA command
2	^FO (field origin) command
3	^FS (field separator) command
4	Every format ends with the ^XZ command
5	^FD (field data) command

4. When the label prints correctly, alter the first number after the ^FOx . See how that change affects the print position. Alter the second number after the ^FO50 , x and see how that the print position.

Font instruction

^ADN

1. Alter the numbers after the ^ADN , x , x command.
 - 18,10 is the smallest size you can make the **D** font.
 - The first number is the height of the font in dots. The second number is the width in dots.
 - You can use direct multiples up to ten times that size as a maximum.



Example • 180,100 is the largest you can make the **D** font.

- 25,18 would not be a valid size. The printer rounds to the next recognizable size.
2. Check the font matrices tables for other fonts to try. See [Fonts and Bar Codes on page 445](#).
 3. Try the zero scalable font ^AON , x , x.
This font is scalable, and you can choose any height and width.

Rotation commands

1. Change ^ADN to ^ADR, and then ^ADI, and then ^ADB.
See how the print position changes.
2. Add more fields.
3. Add two more fields to print directly under your name using the ^ADN, 36, 20 font and size:
Your street address
Your city, state, zip
4. You must add two more lines of code that start off with:
^XA
^FO50,50^ADN,36,20^FDxxxxxxxxxxxx^FS
^FO (fill in the rest)
^FO (fill in the rest)
^XZ

Make sure all these fields print in the same font and size and left side of fields has same vertical alignment.

Your name
1200 W Main Street
Anytown, IL 60061

Exercise 2 • Boxes and lines

1. Use the address format from **Exercise 1**.
2. Add this new line to your existing format:
^FO50,200^GB200,200,2^FS
This prints a box one wide by one inch long and the thickness of the line is 2 dots.
3. Reposition and resize the square so that it goes around the name and address uniformly.
4. Print a line by adding:
^FO50,300^GB400,0,4,^FS
This prints a horizontal line two inches wide by 4 dots thick.
5. Print a vertical line using this code:
^F0100,50^GBO,400,4^FS

Exercise 3 • Bar codes — ^B3 code 39 bar code

1. Write the following format and send to the printer:

```
^XA
^FO50,50^B3N,N,100,Y,N^FD123456^FS
^XZ
```

2. Try changing each of the parameters in the ^B3 string so you can see the effects.



Important • For valid parameter choices, see [^B3 on page 23](#).

```
^B3o,e,h,f,g
^BY
```

3. Insert the ^BY command just before the ^B3 to see how the narrow bar width can be altered.

```
^FO50,50^BY2^B3..etc ^BYx, acceptable values for x are 1
through 10
```

4. Alter the ratio of the narrow to wide bar.

```
^FO50,50^BY2,3^B3..etc ^BY2,x acceptable values for x are
2.1 through 3 in .1 increments
```

5. Print out a ^B3 bar code with the interpretation line on top of the bar code and the bar code rotated 90 degrees.

6. Add a ^PQ just before the ^XZ to print several labels.

```
^PQ4
^XZ
^PR Print rate (in inches per second)
```

7. Add a ^PR command after the ^XA at the beginning of the format to change the print rate (print speed).

```
^XA
^PR4 then try ^PR6 ^PRx acceptable values for x are 2 through
12 (check printer specs)
```

See how the print speed affects the print quality of the bar code. You may need to increase the printer darkness setting at higher print speeds.

Exercise 4 • ^SN — Serial Number command

1. Send this format to the printer:

```
^XA
^FO100,100^ADN,36,20^SN001,1,Y^FS
^PQ3
^XZ
```

To vary the ^SNv, n, z to exercise increment/decrement and leading zeros functions, consult this guide.

If your serial number contains alpha and numeric characters, you can increment or decrement a specific segment of the data even if it is in the middle, as this sample sequence shows:

```
ABCD1000EFGH, ABCD1001EFGH, ABCD1002EFGH
```

2. Send this file to the printer and to see how it increments the serial number. The ^SF command can also work with alpha characters.

```
^XA
^FO100,100^ADN,36,20^FDABCD1000EFGH^SF%%d%%,10000^FS
^PQ15
^XZ
```

Notice how the field data character position aligns with the ^SF data string:

^	F	D	A	B	C	D	1	0	0	0	E	F	G	H
^	S	F	%	%	%	%	d	d	d	d	%	%	%	%
										1	0	0	0	0
										2	0	0	0	0
										3	0	0	0	0

And on through...

							1	0	1	4	0	0	0	0
--	--	--	--	--	--	--	---	---	---	---	---	---	---	---

The last label prints **ABCD1014EFGH**.

The % is placed in positions that you do not want to increment or decrement,
d = decimal, 10000 = increment value.

For more details on ^SF, see [^SF on page 263](#).

Exercise 5 • Saving a template to memory. ^IS and image save and image load.



Note • This exercise helps you troubleshoot your code against the errors you see on your labels.

1. Send this format to the printer:

```
^XA
^FO20,30^GB750,1100,4^FS
^FO20,30^GB750,200,4^FS
^FO20,30^GB750,400,4^FS
^FO20,30^GB750,700,4^FS
^FO20,226^GB325,204,4^FS
^FO30,40^ADN,36,20^FDShip to:^FS
^FO30,260^ADN,18,10^FDPart number #^FS
^FO360,260^ADN,18,10^FDDescription:^FS
^FO30,750^ADN,36,20^FDFrom:^FS
^ISR:SAMPLE.GRF^FS
^XZ
```

2. Send this format:

```
^XA
^ILR:SAMPLE.GRF^FS
^FO150,125^ADN,36,20^FDAcme Printing^FS
^FO60,330^ADN,36,20^FD14042^FS
^FO400,330^ADN,36,20^FDScrew^FS
^FO70,480^BY4^B3N,,200^FD12345678^FS
^FO150,800^ADN,36,20^FDMacks Fabricating^FS
^XZ
```


In this way the template only needs to be sent one time to the printer's memory. Subsequent formats can be sent recalling the template and merging variable data into the template. In this exercise, the file was saved in the printers R : memory, which is volatile.

Exercise 6 • ^DF and ^XF — Download format and recall format

Similar concept to ^IS and ^IL command. ^IS and ^IL processes faster in the printer than ^DF and ^XF.

This is how the ^DF and ^XF format structure produces a label similar to the ^IS/^IL sample you just tried.

Figure 2 • Download and Recall Format

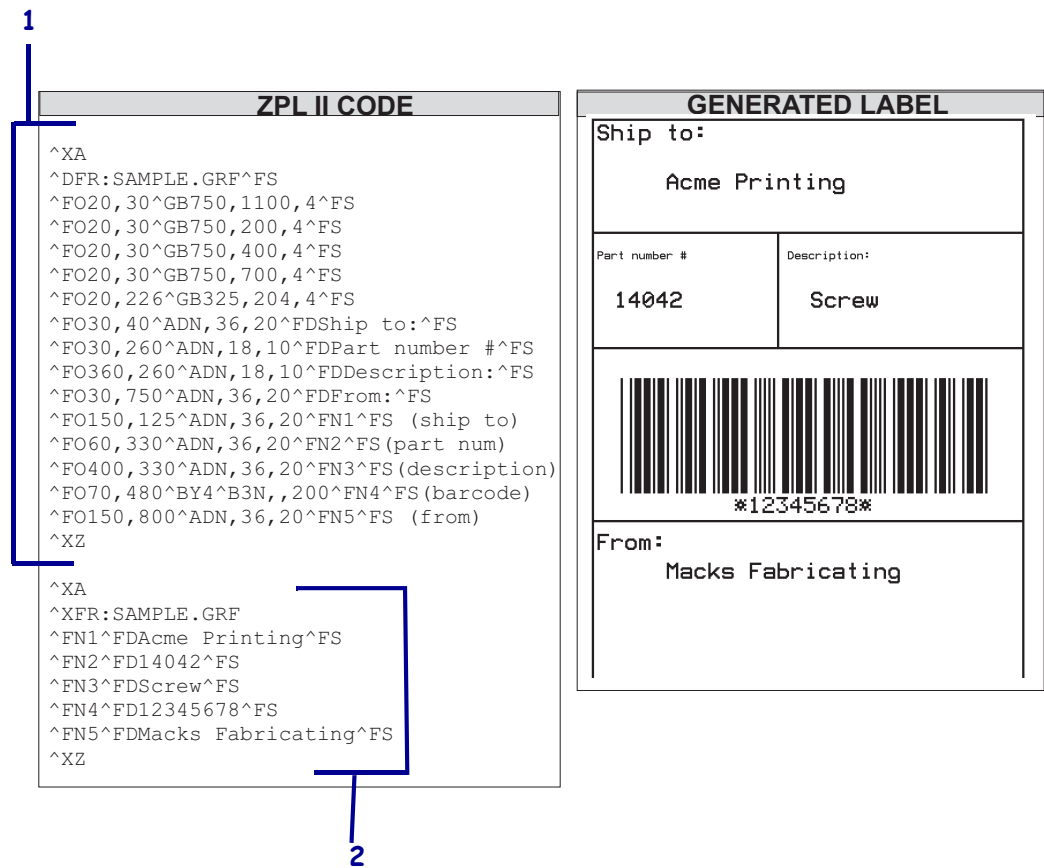

1	Download format code
2	Recall format call that generates the generated label in Figure 2 .

Exercise 7 • Asian and Unicode Encodings



This exercise works in printers with firmware version V60.14.x, V50.14.x, or later.

In each of the following examples, the format is saved in the corresponding encoding before being sent down to the printer and the ZPL script was made in Microsoft Notepad, a basic text editor. The characters were inserted from the character map in Windows or typed from the keyboard.



Example • This is an example of using an Asian encoding, such as UHANGUL, with ASCII text. Using the CI26 command tells the printer to recognize any byte less than 7F as ASCII text and every byte above as the first byte of UHANGUAL encoding:

ZPL II CODE	GENERATED LABEL
<pre> ^XA^CW1,B:ANMDK.TTF ^SEB:UHANGUL.DAT^CI26 ^FO100,100^A1,50,50^FDASCII 한국어 ^FS ^XZ </pre>	<div>ASCII한국어</div>



Example • This is an example of using the Unicode encoding, UTF-8:

ZPL II CODE
<pre> ^XA^CW1,ANMDJ.TTF^CI28 ^FO100,50^A1,30,30^FDENGLISH/日本語/한국어/简体中文/繁體中文^FS ^XZ </pre>
GENERATED LABEL
<div>ENGLISH/日本語/한국어/简体中文/繁體中文</div>



Scalable/Bitmapped Font

Description The ^A command specifies the font to use in a text field. ^A designates the font for the current ^FD statement or field. The font specified by ^A is used only once for that ^FD entry. If a value for ^A is not specified again, the default ^CF font is used for the next ^FD entry.

Format ^Af \circ ,h,w




Important • Parameter **f** is required. If **f** is omitted it defaults to the last value of the ^CF command.

This table identifies the parameters for this format:

Command	Details
f = font name	<p><i>Accepted Values:</i> A through Z, and 0 to 9</p> <p>Any font in the printer (downloaded, EPROM, stored fonts, fonts A through Z and 0 to 9).</p>
\circ = field orientation	<p><i>Accepted Values:</i></p> <p>N = normal</p> <p>R = rotated 90 degrees (clockwise)</p> <p>I = inverted 180 degrees</p> <p>B = read from bottom up, 270 degrees</p> <p><i>Default Value:</i> the last accepted ^FW value or the ^FW default</p>
h = Character Height (in dots)	<p>Scalable</p> <p><i>Accepted Values:</i> 10 to 32000</p> <p><i>Default Value:</i> last accepted ^CF</p> <p>Bitmapped</p> <p><i>Accepted Values:</i> multiples of height from 1 to 10 times the standard height, in increments of 1</p> <p><i>Default Value:</i> last accepted ^CF</p>
w = width (in dots)	<p>Scalable</p> <p><i>Accepted Values:</i> 10 to 32000</p> <p><i>Default Value:</i> last accepted ^CF</p> <p>Bitmapped</p> <p><i>Accepted Values:</i> multiples of width from 1 to 10 times the standard width, in increments of 1</p> <p><i>Default Value:</i> last accepted ^CF</p>


Scalable Font Command

→ **Example** • This is an example of a scalable font command:

ZPL II CODE	GENERATED LABEL
<pre> ^XA ^FO50,50 ^A0,32,25 ^FDZEBRA^FS ^FO50,150 ^A0,32,25 ^FDPROGRAMMING^FS ^FO50,250 ^A0,32,25^FDLANGUAGE^FS ^XZ </pre>	

Bitmap Font Command

→ **Example** • This is an example of a bitmap font command:

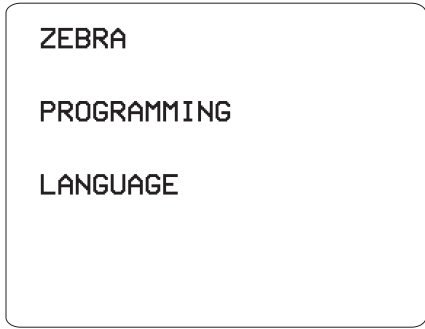ZPL II CODE	GENERATED LABEL
<pre> ^XA ^FO50,50 ^ADN,36,20 ^FDZEBRA^FS ^FO50,150 ^ADN,36,20 ^FDPROGRAMMING^FS ^FO50,250 ^ADN,36,20^FDLANGUAGE^FS ^XZ </pre>	

For reference, see [Standard Printer Fonts on page 446](#), [Zebra Code Page 850 on page 436](#), [Fonts and Bar Codes on page 445](#), and [ASCII on page 441](#).

Comments Fonts are built using a matrix that defines standard height-to-width ratios. If you specify only the height or width value, the standard matrix for that font automatically determines the other value. If the value is not given or a 0 (zero) is entered, the height or width is determined by the standard font matrix.



This command interacts with the justification parameters of ^FO and ^FT and with the field direction parameter of ^FP. For output and examples, see [Field Interactions on page 469](#).

^A@


Use Font Name to Call Font

Description The ^A@ command uses the complete name of a font, rather than the character designation used in ^A. Once a value for ^A@ is defined, it represents that font until a new font name is specified by ^A@.

Format ^A@o, h, w, d: o.x

This table identifies the parameters for this format:

Parameters	Details
o = field orientation	<p><i>Accepted Values:</i></p> <ul style="list-style-type: none"> N = normal R = rotates 90 degrees (clockwise) I = inverted 180 degrees B = read from bottom up, 270 degrees <p><i>Default Value:</i> N or the last ^FW value</p>
h = character height (in dots)	<p><i>Default Value:</i> specifies magnification by w (character width) or the last accepted ^CF value. Uses the base height if none is specified.</p> <p>Scalable The value is the height in dots of the entire character block. Magnification factors are unnecessary, because characters are scaled.</p> <p>Bitmapped The value is rounded to the nearest integer multiple of the font's base height, then divided by the font's base height to give a magnification nearest limit.</p>
w = width (in dots)	<p><i>Default Value:</i> specifies magnification by h (height) or the last accepted ^CF value. Specifies the base width is used if none is specified.</p> <p>Scalable The value is the width in dots of the entire character block. Magnification factors are unnecessary, because characters are scaled.</p> <p>Bitmapped The value rounds to the nearest integer multiple of the font's base width, then divided by the font's base width to give a magnification nearest limit.</p>
d = drive location of font	<p><i>Accepted Values:</i> R:, E:, B:, and A:</p> <p><i>Default Value:</i> R:</p>

Parameters	Details
o = font name	<p><i>Accepted Values:</i> any valid font</p> <p><i>Default Value:</i> if an invalid or no name is entered, the default set by ^CF is used. If no font has been specified in ^CF, font A is used.</p> <p>The font named carries over on all subsequent ^A@ commands without a font name.</p>
x = extension  .14↑ .TTE is only supported in firmware version V60.14.x, V50.14.x, or later.	<p><i>Accepted Values:</i></p> <p>.FNT = font</p> <p>.TTF = TrueType Font</p> <p>.TTE = TrueType Extension</p>



Example • This example is followed by a table that identifies the called out lines of code:

	ZPL II CODE	GENERATED LABEL
1	^XA	<div style="border: 1px solid black; padding: 10px; text-align: center;"> Zebra Printer Fonts This uses B:CYRI_UB.FNT </div>
2	^A@N,50,50,B:CYRI_UB.FNT	
3	^FO100,100	
4	^FDZebra Printer Fonts^FS	
5	^A@N,40,40	
6	^FO100,150	
7	^FDThis uses B:CYRI_UB.FNT^FS	
8	^XZ	

1	Starts the label format.
2	Searches non-volatile printer memory (B :) for CYRI_UB.FNT. When the font is found, the ^A@ command sets the print orientation to normal and the character size to 50 dots by 50 dots.
3	Sets the field origin at 100,100.
4	Prints the field data, <i>Zebra Printer Fonts</i> on the label.
5	Calls the font again and character size is decreased to 40 dots by 40 dots.
6	Sets the new field origin at 100,150.
7	Prints the field data, <i>This uses the B:CYRI_UB.FNT</i> on the label.
8	Ends the label format.

For reference, see [Zebra Code Page 850 on page 436](#), [Fonts and Bar Codes on page 445](#), and [ASCII on page 441](#).

^B0

Aztec Bar Code Parameters

Description The ^B0 command creates a two-dimensional matrix symbology made up of square modules arranged around a bulls-eye pattern at the center.



Note • The Aztec bar code works with firmware version V60.13.0.11A or later.

Format ^B0a,b,c,d,e,f,g


This table identifies the parameters for this format:

Parameters	Details
a = orientation	<p><i>Accepted Values:</i></p> <p>N = normal</p> <p>R = rotated</p> <p>I = inverted 180 degrees</p> <p>B = read from bottom up, 270 degrees</p> <p><i>Default Value:</i> current ^FW value</p>
b = magnification factor	<p><i>Accepted Values:</i> 1 to 10</p> <p><i>Default Value:</i></p> <p>1 on 150 dpi printers</p> <p>2 on 200 dpi printers</p> <p>3 on 300 dpi printers</p> <p>6 on 600 dpi printers</p>
c = extended channel interpretation code indicator	<p><i>Accepted Values:</i></p> <p>Y = if data contains ECICs</p> <p>N = if data does not contain ECICs</p> <p><i>Default Value:</i> N</p>
d = error control and symbol size/type indicator	<p><i>Accepted Values:</i></p> <p>0 = default error correction level</p> <p>01 to 99 = error correction percentage (minimum)</p> <p>101 to 104 = 1 to 4-layer compact symbol</p> <p>201 to 232 = 1 to 32-layer full-range symbol</p> <p>300 = a simple Aztec “Rune”</p> <p><i>Default Value:</i> 0</p>
e = menu symbol indicator	<p><i>Accepted Values:</i></p> <p>Y = if this symbol is to be a menu (bar code reader initialization) symbol</p> <p>N = if it is not a menu symbol</p> <p><i>Default Value:</i> N</p>

Parameters	Details
f = number of symbols for structured append	<i>Accepted Values:</i> 1 through 26 <i>Default Value:</i> 1
g = <i>optional</i> ID field for structured append	The ID field is a text string with 24-character maximum <i>Default Value:</i> no ID



Example • This is an example of the ^B0 command:

ZPL II CODE	GENERATED LABEL
<pre> ^XA ^B0R,7,N,0,N,1,0 ^FD 7. This is testing label 7^FS ^XZ </pre>	

^B1

Code 11 Bar Code

Description The ^B1 command produces the Code 11 bar code, also known as USD-8 code. In a Code 11 bar code, each character is composed of three bars and two spaces, and the character set includes 10 digits and the hyphen (-).

- ^B1 supports print ratios of 2.0:1 to 3.0:1.
- Field data (^FD) is limited to the width (or length, if rotated) of the label.

Format ^B1o,e,h,f,g




Important • If additional information about the Code 11 bar code is required, go to www.aimglobal.org.

This table identifies the parameters for this format:

Parameters	Details
o = orientation	<p><i>Accepted Values:</i></p> <p>N = normal</p> <p>R = rotated 90 degrees (clockwise)</p> <p>I = inverted 180 degrees</p> <p>B = read from bottom up, 270 degrees</p> <p><i>Default Value: current ^FW value</i></p>
e = check digit	<p><i>Accepted Values:</i></p> <p>Y = 1 digit</p> <p>N = 2 digits</p> <p><i>Default Value: N</i></p>
h = bar code height (in dots)	<p><i>Accepted Values: 1 to 32000</i></p> <p><i>Default Value: value set by ^BY</i></p>
f = print interpretation line	<p><i>Accepted Values:</i></p> <p>Y = yes</p> <p>N = no</p> <p><i>Default Value: Y</i></p>
g = print interpretation line above code	<p><i>Accepted Values:</i></p> <p>Y = yes</p> <p>N = no</p> <p><i>Default Value: N</i></p>

➔ **Example •** This is an example of the Code 11 bar code:

ZPL II CODE	CODE 11 BAR CODE
<div><div><div>^XA</div><div>^FO100,100^BY3</div><div>^B1N,N,150,Y,N</div><div>^FD123456^FS</div><div>^XZ</div></div></div>	<div></div>
CODE 11 BAR CODE CHARACTERS	
<div><div>0123456789-</div><div>Internal Start/Stop Character:△</div><div>When used as a stop character:</div><div>△ is used with 1 check digit</div><div>△ is used with 2 check digits</div></div>	

^B2

Interleaved 2 of 5 Bar Code

Description The ^B2 command produces the Interleaved 2 of 5 bar code, a high-density, self-checking, continuous, numeric symbology.

Each data character for the Interleaved 2 of 5 bar code is composed of five elements: five bars or five spaces. Of the five elements, two are wide and three are narrow. The bar code is formed by interleaving characters formed with all spaces into characters formed with all bars.

- ^B2 supports print ratios of 2.0:1 to 3.0:1.
- Field data (^FD) is limited to the width (or length, if rotated) of the label.

Format ^B2o,h,f,g,e,j




Important • If additional information about the Interleaved 2 of 5 bar code is required, go to www.aimglobal.org.

This table identifies the parameters for this format:

Parameters	Details
o = orientation	<p><i>Accepted Values:</i></p> <p>N = normal</p> <p>R = rotated 90 degrees (clockwise)</p> <p>I = inverted 180 degrees</p> <p>B = read from bottom up, 270 degrees</p> <p><i>Default Value:</i> current ^FW value</p>
h = bar code height (in dots)	<p><i>Accepted Values:</i> 1 to 32000</p> <p><i>Default Value:</i> value set by ^BY</p>
f = print interpretation line	<p><i>Accepted Values:</i></p> <p>Y = yes</p> <p>N = no</p> <p><i>Default Value:</i> Y</p>
g = print interpretation line above code	<p><i>Accepted Values:</i></p> <p>Y = yes</p> <p>N = no</p> <p><i>Default Value:</i> N</p>
e = calculate and print Mod 10 check digit	<p><i>Accepted Values:</i></p> <p>Y = yes</p> <p>N = no</p> <p><i>Default Value:</i> N</p>

➔ **Example •** This is an example of an Interleaved 2 of 5 bar code:

ZPL II CODE	INTERLEAVED 2 OF 5 BAR CODE
<div><pre>^XA ^FO100,100^BY3 ^B2N,150,Y,N,N ^FD123456^FS ^XZ</pre></div>	<div> <p>123456</p></div>
INTERLEAVED 2 OF 5 BAR CODE CHARACTERS	
<div>0123456789</div> <div>Start/Stop (internal)</div>	

Comments The total number of digits in an Interleaved 2 of 5 bar code must be even. The printer automatically adds a leading 0 (zero) if an odd number of digits is received.

The Interleaved 2 of 5 bar code uses the Mod 10 check-digit scheme for error checking. For more information on Mod 10 check digits, see [Mod 10 Check Digit on page 460](#).

^B3

Code 39 Bar Code

Description The Code 39 bar code is the standard for many industries, including the U.S. Department of Defense. It is one of three symbologies identified in the American National Standards Institute (ANSI) standard MH10.8M-1983. Code 39 is also known as USD-3 Code and 3 of 9 Code.

Each character in a Code 39 bar code is composed of nine elements: five bars, four spaces, and an inter-character gap. Three of the nine elements are wide; the six remaining elements are narrow.

- ^B3 supports print ratios of 2.0:1 to 3.0:1.
- Field data (^FD) is limited to the width (or length, if rotated) of the label.
- Code 39 automatically generates the start and stop character (*).
- Asterisk (*) for start and stop character prints in the interpretation line, if the interpretation line is turned on.
- Code 39 is capable of encoding the full 128-character ASCII set.

Format ^B3o,e,h,f,g,j,m,n



Important • If additional information about the Code 39 bar code is required, go to www.aimglobal.org.


This table identifies the parameters for this format:

Parameters	Details
o = orientation	<p><i>Accepted Values:</i></p> <p>N = normal</p> <p>R = rotated 90 degrees (clockwise)</p> <p>I = inverted 180 degrees</p> <p>B = read from bottom up, 270 degrees</p> <p><i>Default Value:</i> current ^FW value</p>
e = Mod-43 check digit	<p><i>Accepted Values:</i></p> <p>Y = yes</p> <p>N = no</p> <p><i>Default Value:</i> N</p>
h = bar code height (in dots)	<p><i>Accepted Values:</i> 1 to 32000</p> <p><i>Default Value:</i> value set by ^BY</p>

Parameters	Details
f = print interpretation line	<p><i>Accepted Values:</i></p> <p>Y = yes</p> <p>N = no</p> <p><i>Default Value:</i> Y</p>
g = print interpretation line above code	<p><i>Accepted Values:</i></p> <p>Y = yes</p> <p>N = no</p> <p><i>Default Value:</i> N</p>




Example • This is an example of a Code 39 bar code:

ZPL II CODE	CODE 39 BAR CODE																																																		
<pre>^XA ^FO100,100^BY3 ^B3N,N,100,Y,N ^FD123ABC^FS ^XZ</pre>	 *123ABC*																																																		
CODE 39 BAR CODE CHARACTERS																																																			
<table><tr><td>0</td><td>1</td><td>2</td><td>3</td><td>4</td><td>5</td><td>6</td><td>7</td><td>8</td><td>9</td></tr><tr><td>A</td><td>B</td><td>C</td><td>D</td><td>E</td><td>F</td><td>G</td><td>H</td><td>I</td><td>J</td></tr><tr><td>K</td><td>L</td><td>M</td><td>N</td><td>O</td><td>P</td><td>Q</td><td>R</td><td>S</td><td>T</td></tr><tr><td>U</td><td>V</td><td>W</td><td>X</td><td>Y</td><td>Z</td><td>-</td><td>.</td><td>\$</td><td>/</td></tr><tr><td>+</td><td>%</td><td>Space</td><td></td><td></td><td></td><td></td><td></td><td></td><td></td></tr></table>		0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z	-	.	\$	/	+	%	Space							
0	1	2	3	4	5	6	7	8	9																																										
A	B	C	D	E	F	G	H	I	J																																										
K	L	M	N	O	P	Q	R	S	T																																										
U	V	W	X	Y	Z	-	.	\$	/																																										
+	%	Space																																																	

Comments Extended ASCII is a function of the scanner, not of the bar code. Your scanner must have extended ASCII enabled for this feature to work. To enable extended ASCII in the Code 39, you must first encode +\$ in your ^FD statement. To disable extended ASCII, you must encode -\$ in your ^FD statement.



Example • This example encodes a carriage return with line feed into a Code 39 bar code:

ZPL II CODE	GENERATED LABELS
<pre> ^XA ^FO20,20 ^B3N,N,100,Y ^FDTEST+\$M\$J-\$^FS ^XZ </pre>	 <p>*TEST+\$M\$J-\$*</p>

Full ASCII Mode for Code 39

Code 39 can generate the full 128-character ASCII set using paired characters as shown in these tables:

Table 1 • Code 39 Full ASCII Mode

ASCII	Code 39	ASCII	Code 39
SOH	\$A	SP	Space
STX	\$B	!	/A
ETX	\$C	"	/B
EOT	\$D	#	/C
ENQ	\$E	\$	/D
ACK	\$F	%	/E
BEL	\$G	&	/F
BS	\$H	'	/G
HT	\$I	(/H
LF	\$J)	/I
VT	\$K	*	/J
FF	\$L	++	/K
CR	\$M	,	/L
SO	\$N	-	-
SI	\$O	.	.
DLE	\$P	/	/O
DC1	\$Q	0	O
DC2	\$R	1	1
DC3	\$S	2	2
DC4	\$T	3	3
NAK	\$U	4	4
SYN	\$V	5	5
ETB	\$W	6	6
CAN	\$X	7	7
EM	\$Y	8	8
SUB	\$Z	9	9
ESC	%A	:	/Z
FS	%B	;	%F
FS	%C	<	%G
RS	%D	=	%H
US	%E	>	%I
		?	%J

Table 2 • Code 39 Full ASCII Mode

ASCII	Code 39	ASCII	Code 39
@	%V	'	%W
A	A	a	+A
B	B	b	+B
C	C	c	+C
D	D	d	+D
E	E	e	+E
F	F	f	+F
G	G	g	+G
H	H	h	+H
I	I	i	+I
J	J	j	+J
K	K	k	+K
L	L	l	+L
M	M	m	+M
N	N	n	+N
O	O	o	+O
P	P	p	+P
Q	Q	q	+Q
R	R	r	+R
S	S	s	+S
T	T	t	+T
U	U	u	+U
V	V	v	+V
W	W	w	+W
X	X	x	+X
Y	Y	y	+Y
Z	Z	z	+Z
[%K	{	%P
\	%L		%Q
]	%M	}	%R
^	%N	~	%S
_	%O	DEL	%T, %X

^B4

Code 49 Bar Code

Description The ^B4 command creates a multi-row, continuous, variable-length symbology capable of encoding the full 128-character ASCII set. It is ideally suited for applications requiring large amounts of data in a small space.

The code consists of two to eight rows. A row consists of a leading quiet zone, four symbol characters encoding eight code characters, a stop pattern, and a trailing quiet zone. A separator bar with a height of one module separates each row. Each symbol character encodes two characters from a set of Code 49 characters.

- ^B4 has a fixed print ratio.
- Rows can be scanned in any order.

Format ^B4 \circ ,h,f,m



Important • For additional information about the Code 49 bar code is required, go to www.aimglobal.org.

This table identifies the parameters for this format:

Parameters	Details
\circ = orientation	<p><i>Accepted Values:</i></p> <p>N = normal</p> <p>R = rotated 90 degrees (clockwise)</p> <p>I = inverted 180 degrees</p> <p>B = read from bottom up, 270 degrees</p> <p><i>Default Value:</i> current ^FW value</p>
h = height multiplier of individual rows	<p><i>Accepted Values:</i> 1 to height of label</p> <p><i>Default Value:</i> value set by ^BY</p> <p>This number multiplied by the module equals the height of the individual rows in dots. 1 is not a recommended value.</p>

Parameters	Details
f = print interpretation line	<p><i>Accepted Values:</i></p> <ul style="list-style-type: none"> N = no line printed A = print interpretation line above code B = print interpretation line below code <p><i>Default Value:</i> N</p> <p>When the field data exceeds two rows, expect the interpretation line to extend beyond the right edge of the bar code symbol.</p>
m = starting mode	<p><i>Accepted Values:</i></p> <ul style="list-style-type: none"> 0 = Regular Alphanumeric Mode 1 = Multiple Read Alphanumeric 2 = Regular Numeric Mode 3 = Group Alphanumeric Mode 4 = Regular Alphanumeric Shift 1 5 = Regular Alphanumeric Shift 2 A = Automatic Mode. The printer determines the starting mode by analyzing the field data. <p><i>Default Value:</i> A</p>



Example • This is an example of a Code 49 bar code:


ZPL II CODE	CODE 49 BAR CODE
<pre> ^XA ^F0150,100^BY3 ^B4N,20,A,A ^FD12345ABCDE^FS ^XZ </pre>	

Table 3 • Code 49

Field Data Set	Unshifted Character Set	Shift 1 Character Set	Shift 2 Character Set
0	0	,	
1	1	ESC	;
2	2	FS	<
3	3	GS	=
4	4	RS	>
5	5	US	?
6	6	!	@
7	7	"	[
8	8	#	\
9	9	&]
A	A	SOH	a
B	B	STX	b
C	C	ETX	c
D	D	EOT	d
E	E	ENQ	e
F	F	ACK	f
G	G	BEL	g
H	H	BS	h
I	I	HT	i
J	J	LF	j
K	K	VT	k
L	L	FF	l
M	M	CR	m
N	N	SO	n
O	O	SI	o
P	P	DLE	p
Q	Q	DC1	q
R	R	DC2	r
S	S	DC3	s
T	T	DC4	t
U	U	NAK	u
V	V	SYN	v
W	W	ETB	w
X	X	CAN	x
Y	Y	EM	y
Z	Z	SUB	z
-	-	(~
.	.)	
SPACE	SPACE	Null	DEL
\$	\$	*	{
/	/	,	
++	++	:	}
%	%	reserved	~
< (Shift 1)			
> (Shift 2)			
: (N.A.)			
; (N.A.)			
? (N.A.)			
= (Numeric Shift)			

Code 49 Shift 1 and 2 Character Substitutions

Code 49 Field Data Character Set

The ^FD data sent to the printer when using starting modes 0 to 5 is based on the Code 49 Internal Character Set. This is shown in the first column of the Code 49 table on the previous page. These characters are Code 49 control characters:

: ; < = > ?

Valid field data must be supplied when using modes 0 to 5. Shifted characters are sent as a two-character sequence of a shift character followed by a character in the unshifted character set.



Example • To encode a lowercase **a**, send **a** > (Shift 2) followed by an uppercase **A**. If interpretation line printing is selected, a lowercase *a* prints in the interpretation line. This reflects what the output from the scanner reads. Code 49 uses uppercase alphanumeric characters only.

If an invalid sequence is detected, the Code 49 formatter stops interpreting field data and prints a symbol with the data up to the invalid sequence. These are examples of invalid sequences:

- Terminating numeric mode with any characters other than 0 to 9 or a Numeric Space.
- Starting in Mode 4 (Regular Alphanumeric Shift 1) and the first field data character is not in the Shift 1 set.
- Starting in Mode 5 (Regular Alphanumeric Shift 2) and the first field data character is not in the Shift 2 set.
- Sending Shift 1 followed by a character not in the Shift 1 set.
- Sending Shift 2 followed by a character not in the Shift 2 set.
- Sending two Shift 1 or Shift 2 control characters.

Advantages of Using the Code 49 Automatic Mode

Using the default (Automatic Mode) completely eliminates the need for selecting the starting mode or manually performing character shifts. The Automatic Mode analyzes the incoming ASCII string, determines the proper mode, performs all character shifts, and compacts the data for maximum efficiency.

Numeric Mode is selected or shifted only when five or more continuous digits are found. Numeric packaging provides no space advantage for numeric strings consisting of fewer than eight characters.

^B5

Planet Code bar code

Description The ^B5 command is supported in all printers as a resident bar code.



Note • Accepted bar code characters are 0 - 9.

Format ^B5o,h,f,g

This table identifies the parameters for this format:

Parameters	Details
o = orientation code	<i>Accepted Values:</i> N = normal R = rotated I = inverted 180 degrees B = read from bottom up, 270 degrees <i>Default Value:</i> current ^FW value
h = bar code height (in dots)	<i>Accepted Values:</i> 1 to 9999 <i>Default Value:</i> value set by ^BY
f = interpretation line	<i>Accepted Values:</i> N = no Y = yes <i>Default Value:</i> N
g = determines if the interpretation line is printed above the bar code	<i>Accepted Values:</i> N = no Y = yes <i>Default Value:</i> N



Example • This is an example of a Planet Code bar code:

ZPL II CODE	GENERATED LABEL
<pre>^XA ^FO150,100^BY3 ^B5N,100,Y,0 ^FD12345678901^FS ^XZ</pre>	

^B7

PDF417 Bar Code

Description The ^B7 command produces the PDF417 bar code, a two-dimensional, multirow, continuous, stacked symbology. PDF417 is capable of encoding over 1,000 characters per bar code. It is ideally suited for applications requiring large amounts of information at the time the bar code is read.

The bar code consists of three to 90 stacked rows. Each row consists of start and stop patterns and symbol characters called *code-words*. A code-word consists of four bars and four spaces. A three code-word minimum is required per row.

The PDF417 bar code is also capable of using the structured append option (^FM), which allows you to extend the field data limitations by printing multiple bar codes. For more information on using structured append, see [^FM on page 148](#).

- PDF417 has a fixed print ratio.
- Field data (^FD) is limited to 3K of character data.

Format ^B7o,h,s,c,r,t

This table identifies the parameters for this format:

Parameters	Details
o = orientation	<p><i>Accepted Values:</i></p> <p>N = normal</p> <p>R = rotated 90 degrees (clockwise)</p> <p>I = inverted 180 degrees</p> <p>B = read from bottom up, 270 degrees</p> <p><i>Default Value:</i> current ^FW value</p>
h = bar code height for individual rows (in dots)	<p><i>Accepted Values:</i> 1 to height of label</p> <p><i>Default Value:</i> value set by ^BY</p> <p>This number multiplied by the module equals the height of the individual rows in dots. If this number is not specified, the overall bar code height, divided by the number of rows, equals the height of the individual rows in dots, where the overall bar code height is defined by the ^BY command. 1 is not a recommended value.</p>
s = security level	<p><i>Accepted Values:</i> 1 to 8 (error detection and correction)</p> <p><i>Default Value:</i> 0 (error detection only)</p> <p>This determines the number of error detection and correction code-words to be generated for the symbol. The default level provides only error detection without correction. Increasing the security level adds increasing levels of error correction and increases the symbol size.</p>


Parameters	Details
<code>c</code> = number of data columns to encode	<i>Accepted Values:</i> 1 to 30 <i>Default Value:</i> 1 : 2 (row-to-column aspect ratio) You can specify the number of code-word columns giving control over the width of the symbol.
<code>r</code> = number of rows to encode	<i>Accepted Values:</i> 3 to 90 <i>Default Value:</i> 1 : 2 (row-to-column aspect ratio) You can specify the number of symbol rows giving control over the height of the symbol. For example, with no row or column values entered, 72 code-words would be encoded into a symbol of six columns and 12 rows. Depending on code-words, the aspect ratio is not always exact.
<code>t</code> = truncate right row indicators and stop pattern	<i>Accepted Values:</i> N = no truncation Y = perform truncation <i>Default Value:</i> N



Example • This is an example of a PDF417 bar code:

ZPL II CODE	PDF417 BAR CODE
<pre>^XA ^BY2,3 ^FO10,10^B7N,5,5,,83,N ^FDZebra Technologies Corporation strives to be the expert supplier of innovative solutions to speciality demand labeling and ticketing problems of business and government. We will attract and retain the best people who will understand our customer's needs and provide them with systems, hardware, software, consumables and service offering the best value, high quality, and reliable performance, all delivered in a timely manner. ^FS^XZ</pre>	

➔ **Example** • This is an example of a PDF417 without and with truncation selected:

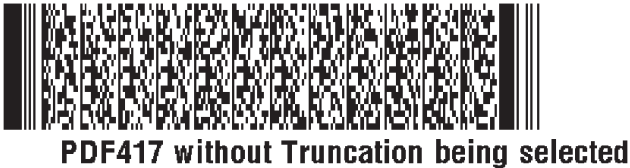

➔ **Example** • This example shows the ^B7 command used with field hex (^FH) characters:

ZPL II CODE	GENERATED LABEL
^XA ^FO50,50^BY3,3.0^B7N,8,5,7,21,N ^FH_ ^FD[>_1E06_1DP12345678_1DQ160 _1D1JUN123456789A2B4C6D8E_1D20LA6-987 _1D21L54321_ZES_1D15KG1155 _1DBSC151208_1D7Q10GT_1E_04^FS ^XZ	

- Comments** Noted in this bulleted list:
- If both columns and rows are specified, their product must be less than 928.
 - No symbol is printed if the product of columns and rows is greater than 928.
 - No symbol is printed if total code-words are greater than the product of columns and rows.
 - Serialization is not allowed with this bar code.
 - The truncation feature can be used in situations where label damage is not likely. The right row indicators and stop pattern is reduced to a single module bar width. The difference between a non truncated and a truncated bar code is shown in the previous examples.

Special Considerations for ^BY When Using PDF417

When used with ^B7, the parameters for the ^BY command are:

w = module width (in dots)

Accepted Values: 2 to 10

Default Value: 2

r = ratio

Fixed Value: 3 (ratio has no effect on PDF417)

h = height of bars (in dots)

Accepted Values: 1 to 32000

Default Value: 10

PDF417 uses this only when row height is not specified in the ^B7 h parameter.

Special Considerations for ^FD When Using PDF417

The character set sent to the printer with the ^FD command includes the full ASCII set, except for those characters with special meaning to the printer.

See [Zebra Code Page 850 on page 436](#), [^CC ~CC on page 107](#), and [^CT ~CT on page 117](#).

- CR and LF are also valid characters for all ^FD statements. This scheme is used:
 - \& = carriage return/line feed
 - \\ = backslash (\)
- ^CI13 must be selected to print a backslash (\).

^B8

EAN-8 Bar Code

Description The ^B8 command is the shortened version of the EAN-13 bar code. EAN is an acronym for European Article Numbering. Each character in the EAN-8 bar code is composed of four elements: two bars and two spaces.

- ^B8 supports a fixed ratio.
- Field data (^FD) is limited to exactly seven characters. ZPL II automatically pads or truncates on the left with zeros to achieve the required number of characters.
- When using JAN-8 (Japanese Article Numbering), a specialized application of EAN-8, the first two non-zero digits sent to the printer are always 49.

Format ^B8o,h,f,g




Important • If additional information about the EAN-8 bar code is required, go to www.aimglobal.org.

This table identifies the parameters for this format:

Parameters	Details
o = orientation	<p><i>Accepted Values:</i></p> <p>N = normal</p> <p>R = rotated 90 degrees (clockwise)</p> <p>I = inverted 180 degrees</p> <p>B = read from bottom up, 270 degrees</p> <p><i>Default Value:</i> current ^FW value</p>
h = bar code height (in dots)	<p><i>Accepted Values:</i> 1 to 32000</p> <p><i>Default Value:</i> value set by ^BY</p>
f = print interpretation line	<p><i>Accepted Values:</i></p> <p>N = no</p> <p>Y = yes</p> <p><i>Default Value:</i> Y</p>
g = print interpretation line above code	<p><i>Accepted Values:</i></p> <p>N = no</p> <p>Y = yes</p> <p><i>Default Value:</i> N</p>



Example • This is an example of an EAN-8 bar code:

ZPL II CODE	EAN-8 BAR CODE								
<div><div>^XA</div><div>^FO100,100^BY3</div><div>^B8N,100,Y,N</div><div>^FD1234567^FS</div><div>^XZ</div></div>	<div> 1234 5670</div>								
EAN-8 BAR CODE CHARACTERS									
0	1	2	3	4	5	6	7	8	9

^B9

UPC-E Bar Code

Description The ^B9 command produces a variation of the UPC symbology used for number system 0. It is a shortened version of the UPC-A bar code, where zeros are suppressed, resulting in codes that require less printing space. The 6 dot/mm, 12 dot/mm, and 24 dot/mm printheads produce the UPC and EAN symbologies at 100 percent of their size. However, an 8 dot/mm printhead produces the UPC and EAN symbologies at a magnification factor of 77 percent.

Each character in a UPC-E bar code is composed of four elements: two bars and two spaces. The ^BY command must be used to specify the width of the narrow bar.

- ^B9 supports a fixed ratio.
- Field data (^FD) is limited to exactly 10 characters, requiring a five-digit manufacturer's code and five-digit product code.
- When using the zero-suppressed versions of UPC, you must enter the full 10-character sequence. ZPL II calculates and prints the shortened version.

Format ^B9, h, f, g, e



Important • If additional information about the UPC-E bar code is required, go to www.aimglobal.org.


This table identifies the parameters for this format:

Parameters	Details
o = orientation	<p><i>Accepted Values:</i></p> <p>N = normal</p> <p>R = rotated 90 degrees (clockwise)</p> <p>I = inverted 180 degrees</p> <p>B = read from bottom up, 270 degrees</p> <p><i>Default Value:</i> current ^FW value</p>
h = bar code height (in dots)	<p><i>Accepted Values:</i> 1 to 32000</p> <p><i>Default Value:</i> value set by ^BY</p>
f = print interpretation line	<p><i>Accepted Values:</i></p> <p>N = no</p> <p>Y = yes</p> <p><i>Default Value:</i> Y</p>

Parameters	Details
g = print interpretation line above code	<i>Accepted Values:</i> N = no Y = yes <i>Default Value:</i> N
e = print check digit	<i>Accepted Values:</i> N = no Y = yes <i>Default Value:</i> Y



Example • This is an example of a UPC-E bar code:

ZPL II CODE	UPC-E BAR CODE
^XA ^F0150,100^BY3 ^B9N,100,Y,N,Y ^FD1230000045^FS ^XZ	 0 1 2 3 4 5 6 7 8 9
UPC-E BAR CODE CHARACTERS	
0 1 2 3 4 5 6 7 8 9	

Rules for Proper Product Code Numbers

- If the last three digits in the manufacturer's number are 000, 100, or 200, valid product code numbers are 00000 to 00999.
- If the last three digits in the manufacturer's number are 300, 400, 500, 600, 700, 800, or 900, valid product code numbers are 00000 to 00099.
- If the last two digits in the manufacturer's number are 10, 20, 30, 40, 50, 60, 70, 80, or 90, valid product code numbers are 00000 to 00009.
- If the manufacturer's number does not end in zero (0), valid product code numbers are 00005 to 00009.

^BA

Code 93 Bar Code

Description The ^BA command creates a variable length, continuous symbology. The Code 93 bar code is used in many of the same applications as Code 39. It uses the full 128-character ASCII set. ZPL II, however, does not support ASCII control codes or escape sequences. It uses the substitute characters shown below.

Control Code	ZPL II Substitute
Ctrl \$	&
Ctrl %	'
Ctrl /	(
Ctrl +)

Each character in the Code 93 bar code is composed of six elements: three bars and three spaces. Although invoked differently, the human-readable interpretation line prints as though the control code has been used.

- ^BA supports a fixed print ratio.
- Field data (^FD) is limited to the width (or length, if rotated) of the label.

Format ^BA \circ , h, f, g, e



Important • If additional information about the Code 93 bar code is required, go to www.aimglobal.org.


This table identifies the parameters for this format:

Parameters	Details
\circ = orientation	<p><i>Accepted Values:</i></p> <p>N = normal</p> <p>R = rotated 90 degrees (clockwise)</p> <p>I = inverted 180 degrees</p> <p>B = read from bottom up, 270 degrees</p> <p><i>Default Value:</i> current ^FW value</p>
h = bar code height (in dots)	<p><i>Accepted Values:</i> 1 to 32000</p> <p><i>Default Value:</i> value set by ^BY</p>
f = print interpretation line	<p><i>Accepted Values:</i></p> <p>N = no</p> <p>Y = yes</p> <p><i>Default Value:</i> Y</p>

Parameters	Details
g = print interpretation line above code	<p><i>Accepted Values:</i></p> <p>N = no</p> <p>Y = yes</p> <p><i>Default Value:</i> N</p>
e = print check digit	<p><i>Accepted Values:</i></p> <p>N = no</p> <p>Y = yes</p> <p><i>Default Value:</i> N</p>



Example • This is an example of a Code 93 bar code:

CODE 93 BAR CODE	ZPL II CODE
 <p>012345ABCDE0</p>	<pre> ^XA ^FO100,75^BY3 ^BAN,100,Y,N,N ^FD12345ABCDE^FS ^XZ </pre>

CODE 93 BAR CODE CHARACTERS	
0	1
2	3
4	5
6	7
8	9
A	B
C	D
E	F
G	H
I	J
K	L
M	N
O	P
Q	R
S	T
U	V
W	X
Y	Z
-	.
\$	/
+	%
&	'
()
SPACE	

□ Denotes an internal start/stop character that must precede and follow every bar code message.

Comments All control codes are used in pairs.

Code 93 is also capable of encoding the full 128-character ASCII set. For more details, see [Table 4 on page 42](#).

Full ASCII Mode for Code 93

Code 93 can generate the full 128-character ASCII set using paired characters as shown in *Table 4 on page 42*.

Table 4 • Code 93 Full ASCII Mode

ASCII	Code 93	ASCII	Code 93
NUL	'U	SP	Space
SOH	&A	!	(A
STX	&B	"	(B
ETX	&C	#	(C
EOT	&D	\$	(D
ENQ	&E	%	(E
ACK	&F	&	(F
BEL	&G	'	(G
BS	&H	((H
HT	&I)	(I
LF	&J	*	(J
VT	&K	++	++
FF	&L	'	(L
CR	&M	-	-
SO	&N	.	.
SI	&O	/	/
DLE	&P	0	O
DC1	&Q	1	1
DC2	&R	2	2
DC3	&S	3	3
DC4	&T	4	4
NAK	&U	5	5
SYN	&V	6	6
ETB	&W	7	7
CAN	&X	8	8
EM	&Y	9	9
SUB	&Z	:	(Z
ESC	'A	;	'F
FS	'B	<	'G
FS	'C	=	'H
RS	'D	>	'I
US	'E	?	'J

Table 5 • Code 93 Full ASCII Mode

ASCII	Code 93	ASCII	Code 93
@	'V	'	'W
A	A	a)A
B	B	b)B
C	C	c)C
D	D	d)D
E	E	e)E
F	F	f)F
G	G	g)G
H	H	h)H
I	I	l)I
J	J	j)J
K	K	k)K
L	L	l)L
M	M	m)M
N	N	n)N
O	O	o)O
P	P	p)P
Q	Q	q)Q
R	R	r)R
S	S	s)S
T	T	t)T
U	U	u)U
V	V	v)V
W	W	w)W
X	X	x)X
Y	Y	y)Y
Z	Z	z)Z
['K	{	'P
\	'L		'Q
]	'M	}	'R
^	'N	~	'S
_	'O	DEL	'T

^BB

CODABLOCK Bar Code

Description The ^BB command produces a two-dimensional, multirow, stacked symbology. It is ideally suited for applications that require large amounts of information.

Depending on the mode selected, the code consists of one to 44 stacked rows. Each row begins and ends with a start and stop pattern.

- CODABLOCK A supports variable print ratios.
- CODABLOCK E and F support only fixed print ratios.

Format ^BB \circ , h, s, c, r, m



Important • If additional information about the CODABLOCK bar code is required, go to www.aimglobal.org.


This table identifies the parameters for this format:

Parameters	Details
\circ = orientation	<p><i>Accepted Values:</i></p> <p>N = normal</p> <p>R = rotated 90 degrees (clockwise)</p> <p>I = inverted 180 degrees</p> <p>B = read from bottom up, 270 degrees</p> <p><i>Default Value:</i> N</p>
h = bar code height for individual rows (in dots)	<p><i>Accepted Values:</i> 2 to 32000</p> <p><i>Default Value:</i> 8</p> <p>This number, multiplied by the module, equals the height of the individual row in dots.</p>
s = security level	<p><i>Accepted Values:</i></p> <p>N = no</p> <p>Y = yes</p> <p><i>Default Value:</i> Y</p> <p>Security level determines whether symbol check-sums are generated and added to the symbol. Check sums are never generated for single-row symbols. This can be turned off only if parameter m is set to A.</p>
c = number of characters per row (data columns)	<p><i>Accepted Values:</i> 2 to 62 characters</p> <p>This is used to encode a CODABLOCK symbol. It gives the you control over the width of the symbol.</p>

Parameters	Details
r = number of rows to encode	<p><i>Accepted Values:</i></p> <p>for CODABLOCK A: 1 to 22</p> <p>for CODABLOCK E and F: 2 to 4</p> <ul style="list-style-type: none">• If values for c and r are not specified, a single row is produced.• If a value for r is not specified, and c exceeds the maximum range, a single row equal to the field data length is produced.• If a value for c is not specified, the number of characters per row is derived by dividing the field data by the value of r.• If both parameters are specified, the amount of field data must be less than the product of the specified parameters. If the field data exceeds the value of the product, either no symbol or an error code is printed (if ^CV is active).• If the data field contains primarily numeric data, fewer than the specified rows might be printed. If the field data contains several shift and code-switch characters, more than the specified number of rows might be printed.
m = mode	<p><i>Accepted Values:</i> A, E, F</p> <p>CODABLOCK A uses the Code 39 character set.</p> <p>CODABLOCK F uses the Code 128 character set.</p> <p>CODABLOCK E uses the Code 128 character set and automatically adds FNC1.</p> <p><i>Default Value:</i> F</p>



Example • This is an example of a CODABLOCK bar code:

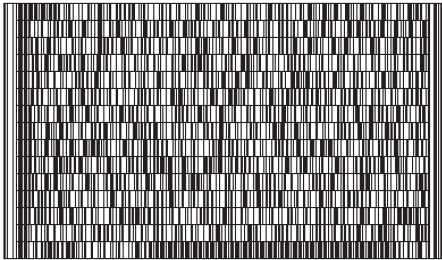CODABLOCK BAR CODE	ZPL II CODE
	<pre> ^XA ^BY2,3 ^FO10,10^BBN,30,,30,44,E ^FDZebra Technologies Corporation strives to be the expert supplier of innovative solutions to speciality demand labeling and ticketing problems of business and government. We will attract and retain the best people who will understand our customer's needs and provide them with systems, hardware, software, consumables and service offering the best value, high quality, and reliable performance, all delivered in a timely manner.^FS ^XZ </pre>

Special Considerations for the ^BY Command When Using ^BB

The parameters for the ^BYw, r, h command, when used with a ^BB code, are as follows:

w = module width (in dots)

Accepted Values: 2 to 10 (CODABLOCK A only)

Default Value: 2

r = ratio

Fixed Value: 3 (ratio has no effect on CODABLOCK E or F)

h = height of bars (in dots)

Accepted Values: 1 to 32, 32000

Default Value: 10

CODABLOCK uses this as the overall symbol height only when the row height is not specified in the ^BB h parameter.

Special Considerations for ^FD Character Set When Using ^BB

The character set sent to the printer depends on the mode selected in parameter m.

CODABLOCK A: CODABLOCK A uses the same character set as Code 39. If any other character is used in the ^FD statement, either no bar code is printed or an error message is printed (if ^CV is active).

CODABLOCK E: The Automatic Mode includes the full ASCII set except for those characters with special meaning to the printer. Function codes or the Code 128 Subset A <nul> character can be inserted using of the ^FH command.

<fnc1> = 80 hex	<fnc3> = 82 hex
<fnc2> = 81 hex	<fnc4> = 83 hex
<nul> = 84 hex	

For any other character above 84 hex, either no bar code is printed or an error message is printed (if ^CV is active).

CODABLOCK F: CODABLOCK F uses the full ASCII set, except for those characters with special meaning to the printer. Function codes or the Code 128 Subset A <nul> character can be inserted using of the ^FH command.

<fnc1> = 80 hex	<fnc3> = 82 hex
<fnc2> = 81 hex	<fnc4> = 83 hex
<nul> = 84 hex	

^BC

Code 128 Bar Code (Subsets A, B, and C)

Description The ^BC command creates the Code 128 bar code, a high-density, variable length, continuous, alphanumeric symbology. It was designed for complexly encoded product identification.

Code 128 has three subsets of characters. There are 106 encoded printing characters in each set, and each character can have up to three different meanings, depending on the character subset being used. Each Code 128 character consists of six elements: three bars and three spaces.

- ^BC supports a fixed print ratio.
- Field data (^FD) is limited to the width (or length, if rotated) of the label.

Format ^BC \circ ,h,f,g,e,m



Important • If additional information about the Code 128 bar code is required, go to www.aimglobal.org.


This table identifies the parameters for this format:

Parameters	Details
\circ = orientation	<p><i>Accepted Values:</i></p> <p>N = normal</p> <p>R = rotated 90 degrees (clockwise)</p> <p>I = inverted 180 degrees</p> <p>B = read from bottom up, 270 degrees</p> <p><i>Default Value:</i> current ^FW value</p>
h = bar code height (in dots)	<p><i>Accepted Values:</i> 1 to 32000</p> <p><i>Default Value:</i> value set by ^BY</p>
f = print interpretation line	<p><i>Accepted Values:</i> Y (yes) or N (no)</p> <p><i>Default Value:</i> Y</p> <p>The interpretation line can be printed in any font by placing the font command before the bar code command.</p>
g = print interpretation line above code	<p><i>Accepted Values:</i> Y (yes) or N (no)</p> <p><i>Default Value:</i> N</p>

Parameters	Details
e = UCC check digit	<p><i>Accepted Values:</i> Y (turns on) or N (turns off)</p> <p>Mod 103 check digit is always there. It cannot be turned on or off. Mod 10 and 103 appear together with e turned on.</p> <p><i>Default Value:</i> N</p>
m = mode	<p><i>Accepted Values:</i></p> <p>N = no selected mode</p> <p>U = UCC Case Mode</p> <ul style="list-style-type: none"> More than 19 digits in ^FD or ^SN are eliminated. Fewer than 19 digits in ^FD or ^SN add zeros to the right to bring the count to 19. This produces an invalid interpretation line. <p>A = Automatic Mode</p> <p>This analyzes the data sent and automatically determines the best packing method. The full ASCII character set can be used in the ^FD statement — the printer determines when to shift subsets. A string of four or more numeric digits causes an automatic shift to Subset C.</p> <p>D = UCC/EAN Mode (x.11.x and newer firmware)</p> <p>This allows dealing with UCC/EAN with and without chained application identifiers. The code starts in the appropriate subset followed by FNC1 to indicate a UCC/EAN 128 bar code. The printer automatically strips out parentheses and spaces for encoding, but prints them in the human-readable section. The printer automatically determines if a check digit is required, calculate it, and print it. Automatically sizes the human readable.</p> <p><i>Default Value:</i> N</p>



Example • This is an example of a Code 128 bar code:

ZPL II CODE	CODE 128 BAR CODE
<pre> ^XA ^FO100,100^BY3 ^BCN,100,Y,N,N ^FD123456^FS ^XZ </pre>	

Code 128 Subsets

The Code 128 character subsets are referred to as Subset A, Subset B, and Subset C. A subset can be selected in these ways:

- A special Invocation Code can be included in the field data (^FD) string associated with that bar code.
- The desired Start Code can be placed at the beginning of the field data. If no Start Code is entered, Subset B are used.

To change subsets within a bar code, place the Invocation Code at the appropriate points within the field data (^FD) string. The new subset stays in effect until changed with the Invocation Code. For example, in Subset C, >7 in the field data changes the Subset to A.

Table 6 shows the Code 128 Invocation Codes and Start Characters for the three subsets.

Table 6 • Code 128 Invocation Characters

Invocation Code	Decimal Value	Subset A Character	Subset B Character	Subset C Character
<<	62			
>0	30	>	>	
>=	94		~	
>1	95	USQ	DEL	
>2	96	FNC 3	FNC 3	
>3	97	FNC 2	FNC 2	
>4	98	SHIFT	SHIFT	
>5	99	CODE C	CODE C	
>6	100	CODE B	FNC 4	CODE B
>7	101	FNC 4	CODE A	CODE A
>8	102	FNC 1	FNC 1	FNC 1
Start Characters				
>9	103	Start Code A	(Numeric Pairs give Alpha/Numerics)	
>:	104	Start Code B	(Normal Alpha/Numeric)	
>;	105	Start Code C	(All numeric (00 - 99))	

Table 7 shows the character sets for Code 128:



Table 7 • Code 128 character sets

Value	Code A	Code B	Code C
0	SP	SP	00
1	!	!	01
2	"	"	02
3	#	#	03
4	\$	\$	04
5	%	%	05
6	&	&	06
7	'	'	07
8	((08
9))	09
10	*	*	10
11	++	++	11
12	,	,	12
13	-	-	13
14	.	.	14
15	/	/	15
16	0	0	16
17	1	1	17
18	2	2	18
19	3	3	19
20	4	4	20
21	5	5	21
22	6	6	22
23	7	7	23
24	8	8	24
25	9	9	25
26	:	:	26
27	;	;	27
28	<	<	28
29	=	=	29
30	>	>	30
31	?	?	31
32	@	@	32
33	A	A	33
34	B	B	34
35	C	C	35
36	D	D	36
37	E	E	37
38	F	F	38
39	G	G	39
40	H	H	40
41	I	I	41
42	J	J	42
43	K	K	43
44	L	L	44
45	M	M	45
46	N	N	46
47	O	O	47
48	P	P	48
49	Q	Q	49
50	R	R	50
51	S	S	51
52	T	T	52


Value	Code A	Code B	Code C
53	U	U	53
54	V	V	54
55	W	W	55
56	X	X	56
57	Y	Y	57
58	Z	Z	58
59	[[59
60	\	\	60
61]]	61
62	^	^	62
63	—	—	63
64	NUL	.	64
65	SOH	a	65
66	STX	b	66
67	ETX	c	67
68	EOT	d	68
69	ENQ	e	69
70	ACK	f	70
71	BEL	g	71
72	BS	h	72
73	HT	i	73
74	LF	j	74
75	VT	k	75
76	FF	l	76
77	CR	m	77
78	SO	n	78
79	SI	o	79
80	DLE	p	80
81	DC1	q	81
82	DC2	r	82
83	DC3	s	83
84	DC4	t	84
85	NAK	u	85
86	SYN	v	86
87	ETB	w	87
88	CAN	x	88
89	EM	y	89
90	SUB	z	90
91	ESC	{	91
92	FS		92
93	GS	}	93
94	RS	~	94
95	US	DEL	95
96	FNC3	FNC3	96
97	FNC2	FNC2	97
98	SHIFT	SHIFT	98
99	Code C	Code C	99
100	Code B	FNC4	Code B
101	FNC4	Code A	Code A
102	FNC1	FNC1	FNC1
103	START (Code A)		
104	START (Code B)		
105	START (Code C)		



Example • Figures A and B are examples of identical bar codes, and Figure C is an example of switching from Subset C to B to A, as follows:

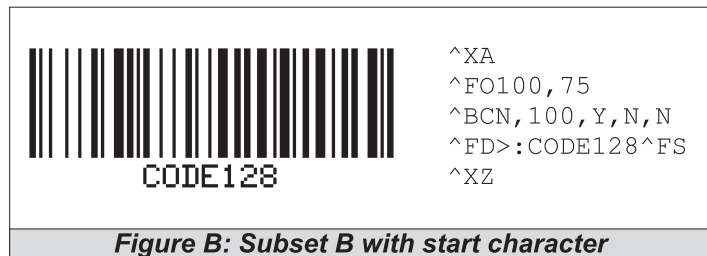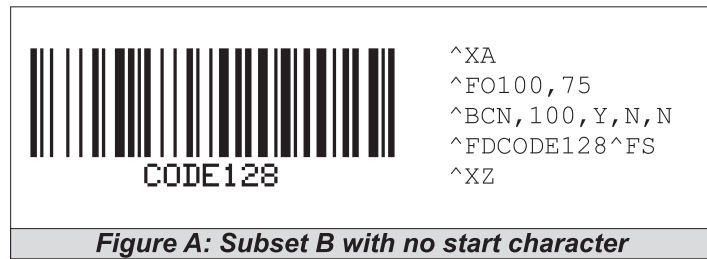

Because Code 128 Subset B is the most commonly used subset, ZPL II defaults to Subset B if no start character is specified in the data string.

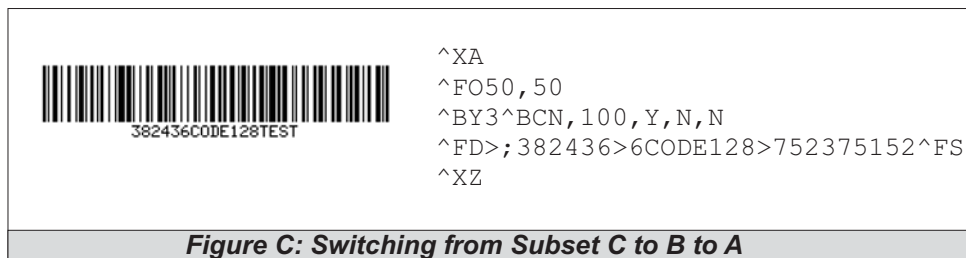

How ^BC Works Within a ZPL II Script

^XA – the first command starts the label format.

^FO100,75 – the second command sets the field origin at 100 dots across the x-axis and 75 dots down the y-axis from the upper-left corner.

^BCN,100,Y,N,N – the third command calls for a Code 128 bar code to be printed with no rotation (N) and a height of 100 dots. An interpretation line is printed (Y) below the bar code (N). No UCC check digit is used (N).

^FDCODE128^FS (Figure A) **^FD>:CODE128^FS** (Figure B) – the field data command specifies the content of the bar code.

^XZ – the last command ends the field data and indicates the end of the label.

The interpretation line prints below the code with the UCC check digit turned off.

The ^FD command for Figure A does not specify any subset, so Subset B is used. In Figure B, the ^FD command specifically calls Subset B with the >: Start Code. Although ZPL II defaults to Code B, it is good practice to include the Invocation Codes in the command.

Code 128 – Subset B is programmed directly as ASCII text, except for values greater than 94 decimal and a few special characters that must be programmed using the invocation codes. Those characters are:

^ > ~






Example • Code 128 – Subsets A and C

Code 128, Subsets A and C are programmed in pairs of digits, 00 to 99, in the field data string. For details, see [Table 6 on page 50](#).

In Subset A, each pair of digits results in a single character being encoded in the bar code; in Subset C, characters are printed as entered. Figure E below is an example of Subset A (>9 is the Start Code for Subset A).

Nonintegers programmed as the first character of a digit pair (D2) are ignored. However, nonintegers programmed as the second character of a digit pair (2D) invalidate the entire digit pair, and the pair is ignored. An extra unpaired digit in the field data string just before a code shift is also ignored.

Figure C and Figure D below are examples of Subset C. Notice that the bar codes are identical. In the program code for Figure D, the *D* is ignored and the 2 is paired with the 4.

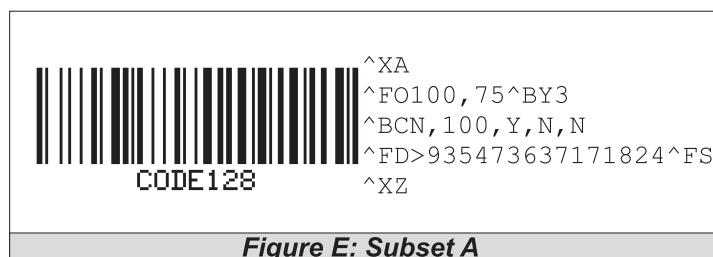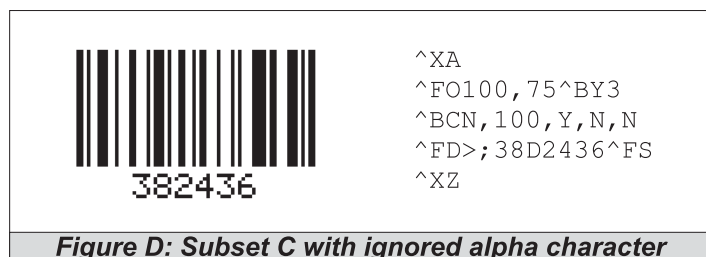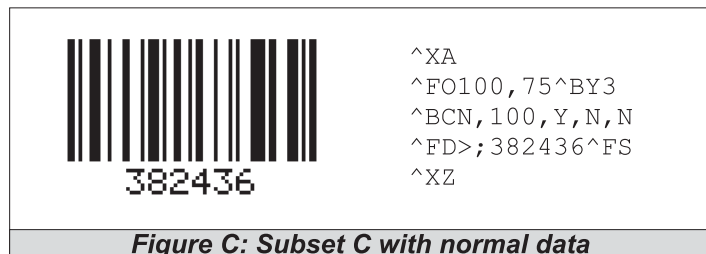

The UCC/EAN-128 Symbology

The symbology specified for the representation of Application Identifier data is UCC/EAN-128, a variant of Code 128, exclusively reserved to EAN International and the Uniform Code Council (UCC).



Note • It is not intended to be used for data to be scanned at the point of sales in retail outlets.

UCC/EAN-128 offers several advantages. It is one of the most complete, alphanumeric, one-dimensional symbologies available today. The use of three different character sets (A, B and C), facilitates the encoding of the full 128 ASCII character set. Code 128 is one of the most compact linear bar code symbologies. Character set C enables numeric data to be represented in a double density mode. In this mode, two digits are represented by only one symbol character saving valuable space. The code is concatenated. That means that multiple AIs and their fields may be combined into a single bar code. The code is also very reliable. Code 128 symbols use two independent self-checking features which improves printing and scanning reliability.

UCC/EAN-128 bar codes always contain a special non-data character known as function 1 (FNC 1), which follows the start character of the bar code. It enables scanners and processing software to auto-discriminate between UCC/EAN-128 and other bar code symbologies, and subsequently only process relevant data.

The UCC/EAN-128 bar code is made up of a leading quiet zone, a Code 128 start character A, B, or C, a FNC 1 character, Data (Application Identifier plus data field), a symbol check character, a stop character, and a trailing quiet zone.


UCC/EAN, UCC/128 are a couple of ways you'll hear someone refer to the code. This just indicates that the code is structured as dictated by the application identifiers that are used.

SSCC (Serial Shipping Container Code) formatted following the data structure layout for Application Identifier 00. See [Table 8, UCC Application Identifier Table on page 58](#). It could be 00 which is the SSCC code. The customer needs to let us know what application identifiers are used for their bar code so we can help them.

There are several ways of writing the code to print the code to Application Identifier '00' structure.

Using N for the mode (m) parameter


➡ **Example** • This example shows with application identifier 00 structure:

N FOR THE M PARAMETER	ZPL II CODE
	<pre>^XA ^FO90,200^BY4 ^BCN,256,Y,N,Y,N ^FD>;>80012345123451234512^FS ^XZ</pre>

- '>;>8' sets it to subset C, function 1
- '00' is the application identifier followed by '17 characters', the check digit is selected using the 'Y' for the (e) parameter to automatically print the 20th character.
- you are not limited to 19 characters with mode set to N

Using U for the mode (m) parameter

➡ **Example** • The example shows the application identifier 00 format:


U FOR THE M PARAMETER	ZPL II CODE
	<pre>^XA ^FO90,200 ^BY4^BC,256,Y,N,,U ^FD0012345123451234512^FS ^XZ</pre>

UCC Case Mode

- Choosing U selects UCC Case mode. You will have exactly 19 characters available in ^FD.
- Subset C using FNC1 values are automatically selected.
- Check digit is automatically inserted.

Using D for the mode (m) parameter

➔ **Example** • This example shows application identifier 00 format ((x.11.x or later):


D FOR THE M PARAMETER	ZPL II CODE
 (00) 1 0084423 7449200941	<pre> ^XA ^FO50,200^BCN,150,Y,N,,D ^FD(00)10084423 7449200940^FS ^XZ </pre>

(0 at end of field data is a bogus character that is inserted as a place holder for the check digit the printer will automatically insert.

- Subset C using FNC1 values are automatically selected.
- Parentheses and spaces can be in the field data. '00' application identifier, followed by 17 characters, followed by bogus check digit place holder.
- Check digit is automatically inserted. The printer will automatically calculate the check digit and put it into the bar code and interpretation line.
- The interpretation line will also show the parentheses and spaces but will strip them out from the actual bar code.

Printing the Interpretation Line

➔ **Example** • This example shows printing the interpretation in a different font with firmware x.11.x or later:


INTERPRETATION LINE	ZPL II CODE
 00123451234512345120	<pre> ^XA ^FO50,200 ^A0N,40,30^BCN,150,Y,N,Y ^FD>;>80012345123451234512^FS </pre>

The font command (^A0N, 40, 30) can be added and changed to alter the font and size of the interpretation line.

With firmware version later than x.10.x

- A separate text field needs to be written.
- The interpretation line needs to be turned off.
- ^A0N, 50, 40 is the font and size selection for the separate text field.

- You have to make sure you enter the correct check digit in the text field.
- Creating a separate text field allows you to format the interpretation line with parentheses and spaces.

FIRMWARE OLDER THAN X.10.X	ZPL II CODE
 (00) 1 2345123 451234512 0	<pre>^XA ^FO25,25 ^BCN,150,N,N,Y ^FD>;>80012345123451234512^FS ^FO100,190 ^AON,50,40 ^FD(00) 1 2345123 451234512 0^FS ^XZ</pre>

Application Identifiers — UCC/EAN APPLICATION IDENTIFIER

An Application Identifier is a prefix code used to identify the meaning and the format of the data that follows it (data field).

There are AIs for identification, traceability, dates, quantity, measurements, locations, and many other types of information.

For example, the AI for batch number is 10, and the batch number AI is always followed by an alphanumeric batch code not to exceed 20-characters.

The UCC/EAN Application Identifiers provide an open standard that can be used and understood by all companies in the trading chain, regardless of the company that originally issued the codes.

Table 8 • UCC Application Identifier Table

Data Content	AI	Plus The Following Data Structure
Serial Shipping Container Code (SSCC)	00	exactly 18 digits
Shipping Container Code	01	exactly 14 digits
Batch Numbers	10	up to 20 alpha numerics
Production Date (YYMMDD)	11	exactly 6 digits
Packaging Date (YYMMDD)	13	exactly 6 digits
Sell By Date (YYMMDD)	15	exactly 6 digits
Expiration Date (YYMMDD)	17	exactly 6 digits
Product Variant	20	exactly 2 digits
Serial Number	21	up to 20 alpha numerics
HIBCC Quantity, Date, Batch and Link	22	up to 29 alpha numerics
Lot Number	23*	up to 19 alpha numerics
Quantity Each	30	
Net Weight (Kilograms)	310**	exactly 6 digits
Length, Meters	311**	exactly 6 digits
Width or Diameter (Meters)	312**	exactly 6 digits
Depths (Meters)	313**	exactly 6 digits
Area (Sq. Meters)	314**	exactly 6 digits
Volume (Liters)	315**	exactly 6 digits
Volume (Cubic Meters)	316**	exactly 6 digits
Net Weight (Pounds)	320**	exactly 6 digits
Customer PO Number	400	up to 29 alpha numerics
Ship To (Deliver To) Location Code using EAN 13 or DUNS Number with leading zeros	410	exactly 13 digits
Bill To (Invoice To) Location Code using EAN 13 or DUNS Number with leading zeros	411	exactly 13 digits
Purchase from	412	exactly 13 digits
Ship To (Deliver To) Postal Code within single postal authority	420	up to 9 alpha numerics
Ship To (Deliver To) Postal Code with 3-digit ISO Country Code Prefix	421	3 digits plus up to 9 alpha numerics
Roll Products - width, length, core diameter, direction and splices	8001	exactly 14 digits
Electronic Serial number for cellular mobile phone	8002	up to 20 alpha numerics



Note • Table 8 is a partial table showing the application identifiers. For more current and complete information, search the Internet for **UCC Application Identifier**.

For date fields that only need to indicate a year and month, the day field is set to 00.

* Plus one digit for length indication.

** Plus one digit for decimal point indication.

Chaining several application identifiers (firmware x.11.x or later)

The FNC1, which is invoked by >8, is inserted just before the AI's so that the scanners reading the code sees the FNC1 and knows that an AI follows.



Example • This is an example with the mode parameter set to A (automatic):

```
^XA
^BY2,2.5,193
^FO33,400
^BCN,,N,N,N,A
^FD>;>80204017773003486100008535>8910001>837252^FS
^FT33,625^AEN,0,0^FD(02)04017773003486(10)0008535(91)
0001(37)252^FS
^XZ
```



Example • This is an example with the mode parameter set to U:

```
^XA
^BY3,2.5,193
^FO33,200
^BCN,,N,N,N,U
^FD>;>80204017773003486>8100008535>8910001>837252^FS
^FT33,455^A0N,30,30^FD(02)04017773003486(10)0008535(91)
0001(37)252^FS
^XZ
```



Example • This is an example with the mode parameter set to D*:

```

^XA
^PON
^LH0,0
^BY2,2.5,145
^FO218,343
^BCB,,Y,N,N,D
^FD(91)0005886>8(10)0000410549>8(99)05^FS
^XZ

```

D* — When trying to print the last Application Identifier with an odd number of characters, a problem existed when printing EAN128 bar codes using Mode D. The problem was fixed in firmware version V60.13.0.6.

^BD

UPS MaxiCode Bar Code

Description The ^BD command creates a two-dimensional, optically read (not scanned) code. This symbology was developed by UPS (United Parcel Service).

Notice that there are no additional parameters for this code and it does not generate an interpretation line. The ^BY command has no effect on the UPS MaxiCode bar code. However, the ^CV command can be activated.

Format ^BDm,n,t

This table identifies the parameters for this format:

Parameters	Details
m = mode	<i>Accepted Values:</i> 2 = structured carrier message: numeric postal code (U.S.) 3 = structured carrier message: alphanumeric postal code (non-U.S.) 4 = standard symbol, secretary 5 = full EEC 6 = reader program, secretary <i>Default Value:</i> 2
n = symbol number	<i>Accepted Values:</i> 1 to 8 can be added in a structured document <i>Default Value:</i> 1
t = total number of symbols	<i>Accepted Values:</i> 1 to 8, representing the total number of symbols in this sequence <i>Default Value:</i> 1



Example • This is an example of UPS MAXICODE - MODE 2 bar code:

UPS MAXICODE - MODE 2	ZPL II CODE
	<pre>^XA ^FO50,50 ^CVY ^BD^FH^FD001840152382802 [>_1E01_1D961Z00004951_1DUPSN_ 1D_06X610_1D159_1D1234567_1D1/1_ 1D_1DY_1D634 ALPHA DR_ 1DPITTSBURGH_1DPA_1E_04^FS ^FO30,300^A0,30,30^FDMODE2^FS ^XZ</pre>

Special Considerations for ^FD when Using ^BD

The ^FD statement is divided into two parts: a high priority message (hpm) and a low priority message (lpm). There are two types of high priority messages. One is for a U.S. Style Postal Code; the other is for a non-U.S. Style Postal Code. The syntax for either of these high priority messages must be exactly as shown or an error message is generated.

Format ^FD <hpm><lpm>

This table identifies the parameters for this format:

Parameters	Details
<hpm> = high priority message (applicable only in Modes 2 and 3)	<p><i>Accepted Values:</i> 0 to 9, except where noted</p> <p>U.S. Style Postal Code (Mode 2)</p> <p><hpm> = aaabbbccccdddd</p> <p>aaa = three-digit class of service</p> <p>bbb = three-digit country zip code</p> <p>cccc = five-digit zip code</p> <p>dddd = four-digit zip code extension (if none exists, four zeros (0000) must be entered)</p> <p>non-U.S. Style Postal Code (Mode 3)</p> <p><hpm> = aaabbbcccccc</p> <p>aaa = three-digit class of service</p> <p>bbb = three-digit country zip code</p> <p>cccc = six-digit zip code (A through Z or 0 to 9)</p>
<lpm> = low priority message (only applicable in Modes 2 and 3)	<p>GS is used to separate fields in a message (0x1D). RS is used to separate format types (0x1E). EOT is the end of transmission characters.</p> <p>Message Header []>RS</p> <p>Transportation Data</p> <p>Format Header 01GS96</p> <p>Tracking Number* <tracking number></p> <p>SCAC* GS<SCAC></p> <p>UPS Shipper Number GS<shipper number></p> <p>Julian Day of Pickup GS<day of pickup></p> <p>Shipment ID Number GS<shipment ID number></p> <p>Package n/x GS<n/x></p> <p>Package Weight GS<weight></p> <p>Address Validation GS<validation></p> <p>Ship to Street Address GS<street address></p> <p>Ship to City GS<city></p> <p>Ship to State GS<state></p> <p>RS RS</p> <p>End of Message EOT</p> <p>(* Mandatory Data for UPS)</p>

Comments

- The formatting of **<hpm>** and **<lp>** apply only when using Modes 2 and 3. Mode 4, for example, takes whatever data is defined in the ^FD command and places it in the symbol.
- UPS requires that certain data be present in a defined manner. When formatting MaxiCode data for UPS, always use uppercase characters. When filling in the *fields* in the **<lp>** for UPS, follow the data size and types specified in *Guide to Bar Coding with UPS*.
- If you do not choose a mode, the default is Mode 2. If you use non-U.S. Postal Codes, you probably get an error message (invalid character or message too short). When using non-U.S. codes, use Mode 3.
- ZPL II doesn't automatically change your mode based on the zip code format.
- When using special characters, such as GS, RS, or EOT, use the ^FH command to tell ZPL II to use the hexadecimal value following the underscore character (_).

^BE

EAN-13 Bar Code

Description The ^BE command is similar to the UPC-A bar code. It is widely used throughout Europe and Japan in the retail marketplace.

The EAN-13 bar code has 12 data characters, one more data character than the UPC-A code. An EAN-13 symbol contains the same number of bars as the UPC-A, but encodes a 13th digit into a parity pattern of the left-hand six digits. This 13th digit, in combination with the 12th digit, represents a country code.

- ^BE supports fixed print ratios.
- Field data (^FD) is limited to exactly 12 characters. ZPL II automatically truncates or pads on the left with zeros to achieve the required number of characters.
- When using JAN-13 (Japanese Article Numbering), a specialized application of EAN-13, the first two non-zero digits sent to the printer must be 49.

Format ^BE \circ , h, f, g



Note • Use Interleaved 2 of 5 for UCC and EAN 14.




Important • If additional information about the EAN-13 bar code is required, go to www.aimglobal.org.

This table identifies the parameters for this format:

Parameters	Details
\circ = orientation	<p><i>Accepted Values:</i></p> <p>N = normal</p> <p>R = rotated 90 degrees (clockwise)</p> <p>I = inverted 180 degrees</p> <p>B = read from bottom up, 270 degrees</p> <p><i>Default Value:</i> current ^FW value</p>
h = bar code height (in dots)	<p><i>Accepted Values:</i> 1 to 32000</p> <p><i>Default Value:</i> value set by ^BY</p>
f = print interpretation line	<p><i>Accepted Values:</i></p> <p>N = no</p> <p>Y = yes</p> <p><i>Default Value:</i> Y</p>
g = print interpretation line above code	<p><i>Accepted Values:</i></p> <p>N = no</p> <p>Y = yes</p> <p><i>Default Value:</i> N</p>



Example • This is an example of an EAN-13 bar code:

EAN-13 BAR CODE	ZPL II CODE								
 0 000123 456784	<pre>^XA ^FO100,100^BY3 ^BEN,100,Y,N ^FD12345678^FS ^XZ</pre>								
EAN-13 BAR CODE CHARACTERS									
0	1	2	3	4	5	6	7	8	9

Comments The EAN-13 bar code uses the Mod 10 check-digit scheme for error checking. For more information on Mod 10, see [Mod 10 Check Digit on page 460](#).

^BF

MicroPDF417 Bar Code

Description The ^BF command creates a two-dimensional, multi-row, continuous, stacked symbology identical to PDF417, except it replaces the 17-module-wide start and stop patterns and left/right row indicators with a unique set of 10-module-wide row address patterns. These reduce overall symbol width and allow linear scanning at row heights as low as 2X.

MicroPDF417 is designed for applications with a need for improved area efficiency but without the requirement for PDF417’s maximum data capacity. It can be printed only in specific combinations of rows and columns up to a maximum of four data columns by 44 rows.

Field data (^FD) and field hexadecimal (^FH) are limited to:

- 250 7-bit characters
- 150 8-bit characters
- 366 4-bit numeric characters


Format ^BF \circ , h, m

This table identifies the parameters for this format:

Parameters	Details
\circ = orientation	<i>Accepted Values:</i> N = normal R = rotated 90 degrees (clockwise) I = inverted 180 degrees B = read from bottom up, 270 degrees <i>Default Value:</i> current ^FW value
h = bar code height (in dots)	<i>Accepted Values:</i> 1 to 9999 <i>Default Value:</i> value set by ^BY or 10 (if no ^BY value exists).
m = mode	<i>Accepted Values:</i> 0 to 33 (see MicroPDF417 Mode on page 67) <i>Default Value:</i> 0 (see MicroPDF417 Mode on page 67)



Example • This is an example of a MicroPDF417 bar code:

MICRO-PDF417 BAR CODE	ZPL II CODE
	<pre>^XA ^FO100,100^BY6 ^BFN,8,3 ^FDABCDEF GHIJKLMNOPQRSTU V^FS ^XZ</pre>

To encode data into a MicroPDF417 bar code, complete these steps:

1. Determine the type of data to be encoded (for example, ASCII characters, numbers, 8-bit data, or a combination).
2. Determine the maximum amount of data to be encoded within the bar code (for example, number of ASCII characters, quantity of numbers, or quantity of 8-bit data characters).
3. Determine the percentage of check digits that are used within the bar code. The higher the percentage of check digits that are used, the more resistant the bar code is to damage — however, the size of the bar code increases.
4. Use the chart in [Table 9](#) with the information gathered from the questions above to select the mode of the bar code.\

Table 9 • MicroPDF417 Mode

Mode (M)	Number of Data Columns	Number of Data Rows	% of Cws for EC	Max Alpha Characters	Max Digits
0	1	11	64	6	8
1	1	14	50	12	17
2	1	17	41	18	26
3	1	20	40	22	32
4	1	24	33	30	44
5	1	28	29	38	55
6	2	8	50	14	20
7	2	11	41	24	35
8	2	14	32	36	52
9	2	17	29	46	67
10	2	20	28	56	82
11	2	23	28	64	93
12	2	26	29	72	105
13	3	6	67	10	14
14	3	8	58	18	26
15	3	10	53	26	38
16	3	12	50	34	49
17	3	15	47	46	67
18	3	20	43	66	96
19	3	26	41	90	132
20	3	32	40	114	167
21	3	38	39	138	202
22	3	44	38	162	237
23	4	6	50	22	32
24	4	8	44	34	49
25	4	10	40	46	67
26	4	12	38	58	85
27	4	15	35	76	111
28	4	20	33	106	155
29	4	26	31	142	208
30	4	32	30	178	261
31	4	38	29	214	313
32	4	44	28	250	366
33	4	4	50	14	20

^BI

Industrial 2 of 5 Bar Codes

Description The ^BI command is a discrete, self-checking, continuous numeric symbology. The Industrial 2 of 5 bar code has been in use the longest of the 2 of 5 family of bar codes. Of that family, the Standard 2 of 5 (^BJ) and Interleaved 2 of 5 (^B2) bar codes are also available in ZPL II.

With Industrial 2 of 5, all of the information is contained in the bars. Two bar widths are employed in this code, the wide bar measuring three times the width of the narrow bar.

- ^BI supports a print ratio of 2.0:1 to 3.0:1.
- Field data (^FD) is limited to the width (or length, if rotated) of the label.

Format ^BI \circ ,h,f,g




Important • If additional information about the Industrial 2 of 5 bar code, go to www.aimglobal.org.

This table identifies the parameters for this format:

Parameters	Details
\circ = orientation	<p><i>Accepted Values:</i></p> <p>N = normal</p> <p>R = rotated 90 degrees (clockwise)</p> <p>I = inverted 180 degrees</p> <p>B = read from bottom up, 270 degrees</p> <p><i>Default Value:</i> current ^FW value</p>
h = bar code height (in dots)	<p><i>Accepted Values:</i> 1 to 32000</p> <p><i>Default Value:</i> value set by ^BY</p>
f = print interpretation line	<p><i>Accepted Values:</i></p> <p>N = no</p> <p>Y = yes</p> <p><i>Default Value:</i> Y</p>
g = print interpretation line above code	<p><i>Accepted Values:</i></p> <p>N = no</p> <p>Y = yes</p> <p><i>Default Value:</i> N</p>



Example • This is an example of an Industrial 2 of 5 bar code:

INDUSTRIAL 2 OF 5 BAR CODE	ZPL II CODE								
 123456	<pre>^XA ^FO100,100^BY3 ^BIN,150,Y,N ^FD123456^FS ^XZ</pre>								
INDUSTRIAL 2 OF 5 BAR CODE CHARACTERS									
0	1	2	3	4	5	6	7	8	9
Start/Stop (internal)									

^BJ

Standard 2 of 5 Bar Code

Description The ^BJ command is a discrete, self-checking, continuous numeric symbology.

With Standard 2 of 5, all of the information is contained in the bars. Two bar widths are employed in this code, the wide bar measuring three times the width of the narrow bar.

- ^BJ supports a print ratio of 2.0:1 to 3.0:1.
- Field data (^FD) is limited to the width (or length, if rotated) of the label.

Format ^BJ \circ , h, f, g




Important • If additional information about the Standard 2 of 5 bar code is required, go to www.aimglobal.org.

This table identifies the parameters for this format:

Parameters	Details
\circ = orientation	<p><i>Accepted Values:</i></p> <p>N = normal</p> <p>R = rotated 90 degrees (clockwise)</p> <p>I = inverted 180 degrees</p> <p>B = read from bottom up, 270 degrees</p> <p><i>Default Value:</i> current ^FW value</p>
h = bar code height (in dots)	<p><i>Accepted Values:</i> 1 to 32000</p> <p><i>Default Value:</i> value set by ^BY</p>
f = print interpretation line	<p><i>Accepted Values:</i></p> <p>N = no</p> <p>Y = yes</p> <p><i>Default Value:</i> Y</p>
g = print interpretation line above code	<p><i>Accepted Values:</i></p> <p>N = no</p> <p>Y = yes</p> <p><i>Default Value:</i> N</p>

➔ **Example** • This is an example of a Standard 2 of 5 bar code:

STANDARD 2 OF 5 BAR CODE	ZPL II CODE
	<pre>^XA ^FO100,100^BY3 ^BJN,150,Y,N ^FD123456^FS ^XZ</pre>
STANDARD 2 OF 5 BAR CODE CHARACTERS	
0 1 2 3 4 5 6 7 8 9	
Start/Stop (automatic)	

^BK

ANSI Codabar Bar Code

Description The ANSI Codabar bar code is used in a variety of information processing applications such as libraries, the medical industry, and overnight package delivery companies. This bar code is also known as USD-4 code, NW-7, and 2 of 7 code. It was originally developed for retail price labeling.

Each character in this code is composed of seven elements: four bars and three spaces. Codabar bar codes use two character sets, numeric and control (start and stop) characters.

- ^BK supports a print ratio of 2.0:1 to 3.0:1.
- Field data (^FD) is limited to the width (or length, if rotated) of the label.

Format ^BK \circ , e, h, f, g, k, l




Important • If additional information about the ANSI Codabar bar code is required, go to www.aimglobal.org.

This table identifies the parameters for this format:

Parameters	Details
o = orientation	<p><i>Accepted Values:</i></p> <p>N = normal</p> <p>R = rotated 90 degrees (clockwise)</p> <p>I = inverted 180 degrees</p> <p>B = read from bottom up, 270 degrees</p> <p><i>Default Value:</i> current ^FW value</p>
e = check digit	<i>Fixed Value:</i> N
h = bar code height (in dots)	<p><i>Accepted Values:</i> 1 to 32000</p> <p><i>Default Value:</i> value set by ^BY</p>
f = print interpretation line	<p><i>Accepted Values:</i></p> <p>N = no</p> <p>Y = yes</p> <p><i>Default Value:</i> Y</p>
g = print interpretation line above code	<p><i>Accepted Values:</i></p> <p>N = no</p> <p>Y = yes</p> <p><i>Default Value:</i> N</p>
k = designates a start character	<p><i>Accepted Values:</i> A, B, C, D</p> <p><i>Default Value:</i> A</p>
l = designates stop character	<p><i>Accepted Values:</i> A, B, C, D</p> <p><i>Default Value:</i> A</p>



Example • This is an example of an ANSI Codabar bar code:

ANSI CODABAR BAR CODE	ZPL II CODE
 A123456A	<pre>^XA ^FO100,100^BY3 ^BKN,N,150,Y,N,A,A ^FD123456^FS ^XZ</pre>
ANSI CODABAR BAR CODE CHARACTERS	
0 1 2 3 4 5 6 7 8 9	
Control Characters	
- : . \$ / +	
Start/Stop Characters	
A B C D	

^BL

LOGMARS Bar Code

Description The ^BL command is a special application of Code 39 used by the Department of Defense. LOGMARS is an acronym for Logistics Applications of Automated Marking and Reading Symbols.

- ^BL supports a print ratio of 2.0:1 to 3.0:1.
- Field data (^FD) is limited to the width (or length, if rotated) of the label. Lowercase letters in the ^FD string are converted to the supported uppercase LOGMARS characters.

Format ^BL \circ , h, g




Important • If additional information about the LOGMARS bar code is required, go to www.aimglobal.org.

This table identifies the parameters for this format:

Parameters	Details
\circ = orientation	<i>Accepted Values:</i> N = normal R = rotated 90 degrees (clockwise) I = inverted 180 degrees B = read from bottom up, 270 degrees <i>Default Value:</i> current ^FW value
h = bar code height (in dots)	<i>Accepted Values:</i> 1 to 32000 <i>Default Value:</i> value set by ^BY
g = print interpretation line above code	<i>Accepted Values:</i> N = no Y = yes <i>Default Value:</i> N



Example • This is an example of a LOGMARS bar code:

LOGMARS BAR CODE	ZPL II CODE																																																
	<pre>^XA ^FO100,75^BY3 ^BLN,100,N ^FD12AB^FS ^XZ</pre>																																																
LOGMARS BAR CODE CHARACTERS																																																	
<table><tr><td></td><td>0</td><td>1</td><td>2</td><td>3</td><td>4</td><td>5</td><td>6</td><td>7</td><td>8</td><td>9</td><td></td></tr><tr><td>A</td><td>B</td><td>C</td><td>D</td><td>E</td><td>F</td><td>G</td><td>H</td><td>I</td><td>J</td><td>K</td><td>L</td></tr><tr><td>M</td><td>N</td><td>O</td><td>P</td><td>Q</td><td>R</td><td>S</td><td>T</td><td>U</td><td>V</td><td>W</td><td>X</td></tr><tr><td>Y</td><td>Z</td><td>-</td><td>.</td><td>\$</td><td>/</td><td>+</td><td>%</td><td colspan="4">SPACE</td></tr></table>			0	1	2	3	4	5	6	7	8	9		A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z	-	.	\$	/	+	%	SPACE			
	0	1	2	3	4	5	6	7	8	9																																							
A	B	C	D	E	F	G	H	I	J	K	L																																						
M	N	O	P	Q	R	S	T	U	V	W	X																																						
Y	Z	-	.	\$	/	+	%	SPACE																																									

Comments The LOGMARS bar code produces a *mandatory* check digit using Mod 43 calculations. For further information on the Mod 43 check digit, see [Mod 43 Check Digit on page 461](#).

^BM

MSI Bar Code

Description The ^BM command is a pulse-width modulated, continuous, non-self-checking symbology. It is a variant of the Plessey bar code (^BP).

Each character in the MSI bar code is composed of eight elements: four bars and four adjacent spaces.

- ^BM supports a print ratio of 2.0:1 to 3.0:1.
- For the bar code to be valid, field data (^FD) is limited to 1 to 14 digits when parameter e is B, C, or D. ^FD is limited to 1 to 13 digits when parameter e is A, plus a quiet zone.

Format ^BM \circ , e, h, f, g, e2



Important • If additional information about the MSI bar code is required, go to www.aimglobal.org.


This table identifies the parameters for this format:

Parameters	Details
\circ = orientation	<p><i>Accepted Values:</i></p> <p>N = normal</p> <p>R = rotated 90 degrees (clockwise)</p> <p>I = inverted 180 degrees</p> <p>B = read from bottom up, 270 degrees</p> <p><i>Default Value:</i> current ^FW value</p>
e = check digit selection	<p><i>Accepted Values:</i></p> <p>A = no check digits</p> <p>B = 1 Mod 10</p> <p>C = 2 Mod 10</p> <p>D = 1 Mod 11 and 1 Mod 10</p> <p><i>Default Value:</i> B</p>
h = bar code height (in dots)	<p><i>Accepted Values:</i> 1 to 32000</p> <p><i>Default Value:</i> value set by ^BY</p>
f = print interpretation line	<p><i>Accepted Values:</i></p> <p>N = no</p> <p>Y = yes</p> <p><i>Default Value:</i> Y</p>

Parameters	Details
g = print interpretation line above code	<p><i>Accepted Values:</i></p> <p>N = no Y = yes</p> <p><i>Default Value:</i> N</p>
e2 = inserts check digit into the interpretation line	<p><i>Accepted Values:</i></p> <p>N = no Y = yes</p> <p><i>Default Value:</i> N</p>



Example • This is an example of a MSI bar code:

MSI BAR CODE	ZPL II CODE
 123456	^XA ^FO100,100^BY3 ^BMN,B,100,Y,N,N ^FD123456^FS ^XZ
MSI BAR CODE CHARACTERS	
1	2
3	4
5	6
7	8
9	

^BO

Aztec Bar Code Parameters

Description The ^BO command creates a two-dimensional matrix symbology made up of square modules arranged around a bulls-eye pattern at the center.



Note • The Aztec bar code works with firmware version V60.13.0.11A or later.

Format ^BOa,b,c,d,e,f,g

This table identifies the parameters for this format:

Parameters	Details
a = orientation	<p><i>Accepted Values:</i></p> <p>N = normal</p> <p>R = rotated</p> <p>I = inverted 180 degrees</p> <p>B = read from bottom up, 270 degrees</p> <p><i>Default Value:</i> current ^FW value</p>
b = magnification factor	<p><i>Accepted Values:</i> 1 to 10</p> <p><i>Default Value:</i></p> <p>1 on 150 dpi printers</p> <p>2 on 200 dpi printers</p> <p>3 on 300 dpi printers</p> <p>6 on 600 dpi printers</p>
c = extended channel interpretation code indicator	<p><i>Accepted Values:</i></p> <p>Y = if data contains ECICs</p> <p>N = if data does not contain ECICs.</p> <p><i>Default Value:</i> N</p>
d = error control and symbol size/type indicator	<p><i>Accepted Values:</i></p> <p>0 = default error correction level</p> <p>01 to 99 = error correction percentage (minimum)</p> <p>101 to 104 = 1 to 4-layer compact symbol</p> <p>201 to 232 = 1 to 32-layer full-range symbol</p> <p>300 = a simple Aztec “Rune”</p> <p><i>Default Value:</i> 0</p>
e = menu symbol indicator	<p><i>Accepted Values:</i></p> <p>Y = if this symbol is to be a menu (bar code reader initialization) symbol</p> <p>N = if it is not a menu symbol</p> <p><i>Default Value:</i> N</p>

Parameters	Details
f = number of symbols for structured append	<i>Accepted Values:</i> 1 through 26 <i>Default Value:</i> 1
g = <i>optional</i> ID field for structured append	The ID field is a text string with 24-character maximum <i>Default Value:</i> no ID

➡ **Example** • This is an example of the ^B0 command:

ZPL II CODE


^XA

^B0R,7,N,0,N,1,0

^FD 7. This is testing label 7^FS

^XZ

GENERATED LABEL



^BP

Plessey Bar Code

Description The ^BP command is a pulse-width modulated, continuous, non-self- checking symbology.

Each character in the Plessey bar code is composed of eight elements: four bars and four adjacent spaces.

- ^BP supports a print ratio of 2.0:1 to 3.0:1.
- Field data (^FD) is limited to the width (or length, if rotated) of the label.

Format ^BPo, e, h, f, g




Important • If additional information about the Plessey bar code is required, go to www.aimglobal.org.

This table identifies the parameters for this format:

Parameters	Details
o = orientation	<p><i>Accepted Values:</i></p> <p>N = normal</p> <p>R = rotated 90 degrees (clockwise)</p> <p>I = inverted 180 degrees</p> <p>B = read from bottom up, 270 degrees</p> <p><i>Default Value:</i> current ^FW value</p>
e = print check digit	<p><i>Accepted Values:</i></p> <p>N = no</p> <p>Y = yes</p> <p><i>Default Value:</i> N</p>
h = bar code height (in dots)	<p><i>Accepted Values:</i></p> <p>N = no</p> <p>Y = yes</p> <p><i>Default Value:</i> N</p>
f = print interpretation line	<p><i>Accepted Values:</i></p> <p>N = no</p> <p>Y = yes</p> <p><i>Default Value:</i> Y</p>
g = print interpretation line above code	<p><i>Accepted Values:</i></p> <p>N = no</p> <p>Y = yes</p> <p><i>Default Value:</i> N</p>



Example • This is an example of a Plessey bar code:

PLESSEY BAR CODE	ZPL II CODE
 12345	<pre>^XA ^FO100,100^BY3 ^BPN,N,100,Y,N ^FD12345^FS ^XZ</pre>
PLESSEY BAR CODE CHARACTERS	
0	1
2	3
4	5
6	7
8	9
A	B
C	D
E	F

^BQ

QR Code Bar Code

Description The ^BQ command produces a matrix symbology consisting of an array of nominally square modules arranged in an overall square pattern. A unique pattern at three of the symbol's four corners assists in determining bar code size, position, and inclination.

A wide range of symbol sizes is possible, along with four levels of error correction. User-specified module dimensions provide a wide variety of symbol production techniques.

QR Code Model 1 is the original specification, while QR Code Model 2 is an enhanced form of the symbology. Model 2 provides additional features and can be automatically differentiated from Model 1.

Model 2 is the recommended model and should normally be used.

This bar code is printed using field data specified in a subsequent ^FD string.

Encodable character sets include numeric data, alphanumeric data, 8-bit byte data, and Kanji characters.

Format ^BQa,b,c,d,e



Important • If additional information about the QR Code bar code is required, go to www.aimglobal.org.


This table identifies the parameters for this format:

Parameters	Details
a = field orientation	<i>Fixed Value:</i> normal (^FW has no effect on rotation)
b = model	<i>Accepted Values:</i> 1 (original) and 2 (enhanced – recommended) <i>Default Value:</i> 2
c = magnification factor	<i>Accepted Values:</i> 1 to 10 <i>Default Value:</i> 1 on 150 dpi printers 2 on 200 dpi printers 3 on 300 dpi printers 6 on 600 dpi printers

Parameters	Details
d = H,Q,M,L	<i>Accepted Values:</i> H = ultra-high reliability level Q = high reliability level M = standard level L = high density level <i>Default Value:</i> Q = if empty M = invalid values
e = N,A,B,K	<i>Accepted Values:</i> 1 - 7 <i>Default Value:</i> 7



Example • This is an example of a QR Code bar code:

QR CODE BAR CODE	ZPL II CODE
	<pre>^XA ^FO100,100 ^BQN,2,10 ^FDMM,AAC-42^FS ^XZ</pre>

On the pages that follow are specific commands for formatting the ^BQ command with the ^FD statements that contain the information to be coded.

Considerations for ^FD When Using the QR Code:

QR Switches (formatted into the ^FD field data)

mixed mode <D>

D = allows mixing of different types of character modes in one code.

code No. <01 16>

Value = subtracted from the Nth number of the divided code (must be two digits).

No. of divisions <02 16>

Number of divisions (must be two digits).

parity data <1 byte>

Parity data value is obtained by calculating at the input data (the original input data before divided byte-by-byte through the EX-OR operation).

error correction level <H, Q, M, L>

H = ultra-high reliability level

Q = high reliability level

M = standard level (default)

L = high density level

character Mode <N, A, B, K>

N = numeric

A = alphanumeric

Bxxxx = 8-bit byte mode. This handles the 8-bit Latin/Kana character set in accordance with JIS X 0201 (character values 0x00 to 0xFF).

xxxx = number of data characters is represented by two bytes of BCD code.

K = Kanji — handles only Kanji characters in accordance with the Shift JIS system based on JIS X 0208. This means that all parameters after the character mode *K* should be 16-bit characters. If there are any 8-bit characters (such as ASCII code), an error occurs.

data character string <Data>

Follows character mode or it is the last switch in the ^FD statement.

data input <A, M>

A = Automatic Input (default). Data character string JIS8 unit, Shift JIS. When the input mode is Automatic Input, the binary codes of 0x80 to 0x9F and 0xE0 to 0xFF cannot be set.

M = Manual Input

Two types of data input mode exist: Automatic (A) and Manual (M). If A is specified, the character mode does not need to be specified. If M is specified, the character mode must be specified.

^FD Field Data (Normal Mode)

Automatic Data Input (A) with Switches

^FD


<error correction level>A,

<data character string>

^FS

➡ **Example •** QR Code, normal mode with automatic data input.

GENERATED LABEL



ZPL II CODE

```
^XA
^FO20,20^BQ,2,10^FDQA,0123456789ABCD 2D code^FS
^XZ
```

1

2

3

1	Q = error correction level
2	A, = automatic setting
3	data string character

Manual Data Input (M) with Switches

^FD


<error correction level>M,

<character mode><data character string>

^FS




Example • QR Code, normal mode with manual data input:

GENERATED LABEL	ZPL II CODE
	<pre> ^XA ^FO20,20^BQ,2,10 ^FDHM,N123456789012345^FS ^XZ </pre>
	<div style="display: flex; justify-content: space-around; align-items: center;"> <div style="text-align: center;">1</div> <div style="text-align: center;">2</div> <div style="text-align: center;">3</div> <div style="text-align: center;">4</div> </div>

1	H = error correction level (ultra-high reliability level)
2	M, = input mode (manual input)
3	N = character mode (numeric data)
4	data character string



Example • QR Code, normal mode with standard reliability and manual data input:

GENERATED LABEL	ZPL II CODE
	<pre> ^XA ^FO20,20^BQ,2,10^FDMM,AAC-42^FS ^XZ </pre>
	<div style="display: flex; justify-content: space-around; align-items: center;"> <div style="text-align: center;">1</div> <div style="text-align: center;">2</div> <div style="text-align: center;">3</div> <div style="text-align: center;">4</div> </div>

1	M = error correction level (standard-high reliability level)
2	M, = manual input
3	AC-42 = data character string
4	A = alphanumeric data

^FD Field Data (Mixed Mode – requires more switches)**Automatic Data Input (A) with Switches**


```
^FD
<D><code No.> <No. of divisions> <parity data>,
<error correction level> A,
<data character string>,
<data character string>,
< : >,
<data character string n**>
^FS
```

Manual Data Input (M) with Switches

```
^FD
<code No.> <No. of divisions> <parity data>,
<error correction level> M,
<character mode 1> <data character string 1>,
<character mode 2> <data character string 2>,
< : > < : >,
<character mode n> <data character string n**>
^FS
```

n** up to 200 in mixed mode

➔ **Example • QR Code, mixed mode with manual data input:**

GENERATED LABEL	ZPL II CODE
	<pre>^XA ^FO,20,20^BQ,2,10 ^FDD03048F,LM,N0123456789,A12AABB,B0006qrcode^FS ^XZ</pre>

<mixed mode identifier>	D	(mixed)
<code No.>	M	(code number)
<No. of divisions>	D	(divisions)
<parity data>	M	(0x8F)
	,	
<error correction level>	L	(high-density level)
<input mode>	M	(manual input)
	,	
<character mode>	N	(numeric data)
<data character string>		0123456789
	,	
<character mode>	A	(alphanumeric data)
<data character string>		12AABB
	,	
<character mode>	B	(8-bit byte data)
	0006	(number of bytes)
<data character string>		qrcode

➡ **Example •** This is an example of QR Code, mixed mode with automatic data input:

```
^XA
^FO20,20^BQ,2,10
^FDD03048F,LA,012345678912AABBqrcode^FS
^XZ
```

<mixed mode identifier>	D	(mixed)
<code No.>	M	(code number)
<No. of divisions>	D	(divisions)
<parity data>	M	(0x8F)
<error correction level>	L	(high-density level)
<input mode>	A	(automatic input)
<data character string>	012345678912AABBqrcode	



For proper functionality, when encoding Kanji characters in ^CI28-30 (Unicode) be sure the JIS .DAT table is loaded on the printer and specified.

➡ **Example •** This is a Unicode example:

ZPL II CODE

```
^XA^SEE:JIS.DAT^CI28
^FO20,20^BQ,2,10^FDLM, K日月^FS
^XZ
```

GENERATED LABEL

^BR

RSS (Reduced Space Symbology) Bar Code

Description The ^BR command is bar code types for space-constrained identification from EAN International and the Uniform Code Council, Inc.

Format ^BRa,b,c,d,e,f

This table identifies the parameters for this format:

Parameters	Details
a = orientation	<p><i>Accepted Values:</i></p> <ul style="list-style-type: none"> N = Normal R = Rotated I = Inverted B = Bottom-up <p><i>Default Value:</i> R</p>
b = symbology type in the RSS-14 family	<p><i>Accepted Values:</i></p> <ul style="list-style-type: none"> 1 = RSS14 2 = RSS14 Truncated 3 = RSS14 Stacked 4 = RSS14 Stacked Omnidirectional 5 = RSS Limited 6 = RSS Expanded 7 = UPC-A 8 = UPC-E 9 = EAN-13 10 = EAN-8 11 = UCC/EAN-128 and CC-A/B 12 = UCC/EAN-128 and CC-C <p><i>Default Value:</i> 1</p>
c = magnification factor	<p><i>Accepted Values:</i> 1 to 10</p> <p><i>Default Value:</i></p> <ul style="list-style-type: none"> 24 dot = 6, 12 dot is 3, 8 dot and lower is 2 12 dot = 6, > 8 dot is 3, 8 dot and less is 2)
d = separator height	<p><i>Accepted Values:</i> 1 or 2</p> <p><i>Default Value:</i> 1</p>

Parameters	Details
e = bar code height	The bar code height only affects the linear portion of the bar code. Only UCC/EAN and CC-A/B/C. <i>Accepted Values:</i> 1 to 32000 dots <i>Default Value:</i> 25
f = the segment width (RSS expanded only)	<i>Accepted Values:</i> 2 to 22, even numbers only, in segments per line <i>Default Value:</i> 22



Example • This is an example of Symbology Type 7 - UPC-A:

ZPL II CODE	GENERATED LABEL
<pre>^XA ^FO10,10^BRN,7,5,2,100 ^FD12345678901 this is composite info^FS ^XZ</pre>	



Example • This is an example of Symbology Type 1 - RSS14:

ZPL II CODE	GENERATED LABEL
<pre>^XA ^FO10,10^BRN,1,5,2,100 ^FD12345678901 this is composite info^FS ^XZ</pre>	

^BS

UPC/EAN Extensions

Description The ^BS command is the two-digit and five-digit add-on used primarily by publishers to create bar codes for ISBNs (International Standard Book Numbers). These extensions are handled as separate bar codes.

The ^BS command is designed to be used with the UPC-A bar code (^BU) and the UPC-E bar code (^B9).

- ^BS supports a fixed print ratio.
- Field data (^FD) is limited to exactly two or five characters. ZPL II automatically truncates or pads on the left with zeros to achieve the required number of characters.

Format ^BS \circ, h, f, g




Important • If additional information about the UPC/EAN bar code is required, go to www.aimglobal.org.

This table identifies the parameters for this format:

Parameters	Details
\circ = orientation	<p><i>Accepted Values:</i></p> <p>N = normal</p> <p>R = rotated 90 degrees (clockwise)</p> <p>I = inverted 180 degrees</p> <p>B = read from bottom up, 270 degrees</p> <p><i>Default Value:</i> current ^FW value</p>
h = bar code height (in dots)	<p><i>Accepted Values:</i> 1 to 32000</p> <p><i>Default Value:</i> value set by ^BY</p>
f = print interpretation line	<p><i>Accepted Values:</i></p> <p>N = no</p> <p>Y = yes</p> <p><i>Default Value:</i> Y</p>
g = print interpretation line above code	<p><i>Accepted Values:</i></p> <p>N = no</p> <p>Y = yes</p> <p><i>Default Value:</i> Y</p>




Example • This is an example of a UPC/EAN Two-digit bar code:

UPC/EAN 2-DIGIT BAR CODE	ZPL II CODE
 12	<pre>^XA ^FO100,100^BY3 ^BSN,100,Y,N ^FD12^FS ^XZ</pre>
UPC/EAN 2-DIGIT BAR CODE CHARACTERS	
0 1 2 3 4 5 6 7 8 9	



Example • This is an example of a UPC/EAN Five-digit bar code:

UPC/EAN 5-DIGIT BAR CODE	ZPL II CODE
 12345	<pre>^XA ^FO100,100^BY3 ^BSN,100,Y,N ^FD12345^FS ^XZ</pre>
UPC/EAN 5-DIGIT BAR CODE CHARACTERS	
0 1 2 3 4 5 6 7 8 9	

Care should be taken in positioning the UPC/EAN extension with respect to the UPC-A or UPC-E code to ensure the resulting composite code is within the UPC specification.

For UPC codes, with a module width of 2 (default), the field origin offsets for the extension are:

→ **Example •** This is an example of a UPC-A:

	Supplement Origin X - Offset	Adjustment Y - Offset
<i>Normal</i>	209 Dots	21 Dots
<i>Rotated</i>	0	209 Dots

This is an example of a UPC-E:

	Supplement Origin X - Offset	Adjustment Y - Offset
<i>Normal</i>	122 Dots	21 Dots
<i>Rotated</i>	0	122 Dots

Additionally, the bar code height for the extension should be 27 dots (0.135 inches) shorter than that of the primary code. A primary UPC code height of 183 dots (0.900 inches) requires an extension height of 155 dots (0.765 inches).

→ **Example •** This example illustrates how to create a normal UPC-A bar code for the value 7000002198 with an extension equal to 04414:



ZPL II CODE

```

^XA
^FO100,100^BY3
^BUN,137
^FD07000002198^FS
^FO400,121
^BSN,117
^FD04414^FS
^XZ

```

^BT

TLC39 bar code

Description The ^BT bar code is the standard for the TCIF can tag telecommunications equipment.

The TCIF CLEI code, which is the MicroPDF417 bar code, is always four columns. The firmware must determine what mode to use based on the number of characters to be encoded.

Format ^BT \circ ,w1,r1,h1,w2,h2

This table identifies the parameters for this format:

Parameters	Details
\circ = orientation	<i>Accepted Values:</i> N = normal R = rotated I = inverted B = bottom up
w1 = width of the Code 39 bar code	<i>Accepted Value (in dots):</i> 1 to 10 <i>Default Value (600 dpi printers):</i> 4 <i>Default Value (200- and 300 dpi printer):</i> 2
r1 = wide to narrow bar width ratio the Code 39 bar code	<i>Accepted Values:</i> 2.0 to 3.0 (increments of 0.1) <i>Default Value:</i> 2.0
h1 = height of the Code 39 bar code	<i>Accepted Values (in dots):</i> 1 to 9999 <i>Default Value (600 dpi printer):</i> 120 <i>Default Value (300 dpi printer):</i> 60 <i>Default Value (200 dpi printer):</i> 40
h2 = row height of the MicroPDF417 bar code	<i>Accepted Values (in dots):</i> 1 to 255 <i>Default Value (600 dpi printer):</i> 8 <i>Default Value (200- and 300 dpi printers):</i> 4
w2 = narrow bar width of the MicroPDF417 bar code	<i>Accepted Values (in dots):</i> 1 to 10 <i>Default Value (600 dpi printer):</i> 4 <i>Default Value (200- and 300 dpi printers):</i> 2




Example • TLC39 Bar Code

This is an example on how to print TLC39 bar code. The callouts identify the key components and are followed by a detailed description below:

Use the command defaults to get results that are in compliance with TCIF industry standards; regardless of printhead density.

1
2
`^XA^FO100,100^BT^FD123456,ABCD12345678901234`
3
`5551212,888999^FS^XZ`

1	ECI Number. If the seventh character is not a comma, only Code 39 prints. This means if more than 6 digits are present, Code 39 prints for the first six digits (and no Micro-PDF symbol is printed). <ul style="list-style-type: none"> • Must be 6 digits. • Firmware generates invalid character error if the firmware sees anything but 6 digits. • This number is not padded.
2	Serial number. The serial number can contain up to 25 characters and is variable length. The serial number is stored in the Micro-PDF symbol. If a comma follows the serial number, then additional data is used below. <ul style="list-style-type: none"> • If present, must be alphanumeric (letters and numbers, no punctuation). This value is used if a comma follows the ECI number.
3	Additional data. If present, it is used for things such as a country code. Data cannot exceed 150 bytes. This includes serial number commas. <ul style="list-style-type: none"> • Additional data is stored in the Micro-PDF symbol and appended after the serial number. A comma must exist between each maximum of 25 characters in the additional fields. • Additional data fields can contain up to 25 alphanumeric characters per field. The result is:

ZPL II CODE	GENERATED LABEL
<pre> ^XA^FO100, 100^BT^FD123456, ABCD12345678901234, 5551212, 88899 ^FS^XZ </pre>	

^BU

UPC-A Bar Code

Description The ^BU command produces a fixed length, numeric symbology. It is primarily used in the retail industry for labeling packages. The UPC-A bar code has 11 data characters. The 6 dot/mm, 12 dot/mm, and 24 dot/mm printheads produce the UPC-A bar code (UPC/EAN symbologies) at 100 percent size. However, an 8 dot/mm printhead produces the UPC/EAN symbologies at a magnification factor of 77 percent.

- ^BU supports a fixed print ratio.
- Field data (^FD) is limited to exactly 11 characters. ZPL II automatically truncates or pads on the left with zeros to achieve required number of characters.

Format ^BU \circ ,h,f,g,e



Important • If additional information about the UPC-A bar code is required, go to www.aimglobal.org.

This table identifies the parameters for this format:

Parameters	Details
\circ = orientation	<i>Accepted Values:</i> N = normal R = rotated 90 degrees (clockwise) I = inverted 180 degrees B = read from bottom up, 270 degrees <i>Default Value:</i> current ^FW value
h = bar code height (in dots)	<i>Accepted Values:</i> 1 to 9999 <i>Default Value:</i> value set by ^BY
f = print interpretation line	<i>Accepted Values:</i> N = no Y = yes <i>Default Value:</i> Y
g = print interpretation line above code	<i>Accepted Values:</i> N = no Y = yes <i>Default Value:</i> N
e = print check digit	<i>Accepted Values:</i> N = no Y = yes <i>Default Value:</i> Y

The font style of the interpretation line depends on the modulus (width of narrow bar) selected in ^BY:




Note • Zero is not allowed.

- **6 dot/mm printer:** a modulus of 2 dots or greater prints with an OCR-B interpretation line; a modulus of 1 dot prints font A.
- **8 dot/mm printer:** a modulus of 3 dots or greater prints with an OCR-B interpretation line; a modulus of 1 or 2 dots prints font A.
- **12 dot/mm printer:** a modulus of 5 dots or greater prints with an OCR-B interpretation line; a modulus of 1, 2, 3, or 4 dots prints font A.
- **24 dot/mm printer:** a modulus of 9 dots or greater prints with an OCR-B interpretation line; a modulus of 1 to 8 dots prints font A.



Example • This is an example of a UPC-A bar code with extension:

UPC-A BAR CODE WITH EXTENSION	ZPL II CODE
	<pre>^XA ^FO100,100^BY3 ^BUN,137 ^FD07000002198^FS ^FO400,121 ^BSN,117 ^FD04414^FS ^XZ</pre>

Comments The UPC-A bar code uses the Mod 10 check digit scheme for error checking. For further information on Mod 10, see [Mod 10 Check Digit on page 460](#).

^BX

Data Matrix Bar Code

Description The ^BX command creates a two-dimensional matrix symbology made up of square modules arranged within a perimeter finder pattern.

The ability to create a rectangular Datamatrix bar code is not available as a ZPL coding option.

Format ^BXo,h,s,c,r,f,g

This table identifies the parameters for this format:

Parameters	Details
o = orientation	<i>Accepted Values:</i> N = normal R = rotated 90 degrees (clockwise) I = inverted 180 degrees B = read from bottom up, 270 degrees <i>Default Value:</i> current ^FW value
h = dimensional height of individual symbol elements	<i>Accepted Values:</i> 1 to the width of the label The individual elements are square — this parameter specifies both module and row height. If this parameter is zero (or not given), the h parameter (bar height) in ^BY is used as the approximate symbol height.
s = quality level	<i>Accepted Values:</i> 0, 50, 80, 100, 140, 200 <i>Default Value:</i> 0 <i>Quality</i> refers to the amount of data that is added to the symbol for error correction. The AIM specification refers to it as the ECC value. ECC 50, ECC 80, ECC 100, and ECC 140 use convolution encoding; ECC 200 uses Reed-Solomon encoding. For new applications, ECC 200 is recommended. ECC 000-140 should be used only in closed applications where a single party controls both the production and reading of the symbols and is responsible for overall system performance.

Parameters	Details
c = columns to encode	<p><i>Accepted Values:</i> 9 to 49</p> <p>Odd values only for quality 0 to 140 (10 to 144); even values only for quality 200.</p> <p>Odd values only for quality 0 to 140 (10 to 144); even values only for quality 200. The number of rows and columns in the symbol is automatically determined. You might want to force the number of rows and columns to a larger value to achieve uniform symbol size. In the current implementation, quality 0 to 140 symbols are square, so the larger of the rows or columns supplied are used to force a symbol to that size. If you attempt to force the data into too small of a symbol, no symbol is printed. If a value greater than 49 is entered, the rows or columns value is set to zero and the size is determined normally. If an even value is entered, it generates INVALID-P (invalid parameter). If a value less than 9 but not 0, or if the data is too large for the forced size, no symbol prints; if ^CV is active, INVALID-L prints.</p>
r = rows to encode	<p><i>Accepted Values:</i> 9 to 49</p>
f = format ID (0 to 6) — not used with quality set at 200	<p><i>Accepted Values:</i></p> <ul style="list-style-type: none"> 1 = field data is numeric + space (0..9,) – No \&” 2 = field data is uppercase alphanumeric + space (A..Z,) – No \&” 3 = field data is uppercase alphanumeric + space, period, comma, dash, and slash (0..9,A..Z,“-./”) 4 = field data is upper-case alphanumeric + space (0..9,A..Z,) – no \&” 5 = field data is full 128 ASCII 7-bit set 6 = field data is full 256 ISO 8-bit set <p><i>Default Value:</i> 6</p>
g = escape sequence control character	<p><i>Accepted Values:</i> any character</p> <p><i>Default Value:</i> ~ (tilde)</p> <p>This parameter is used only if quality 200 is specified. It is the escape character for embedding special control sequences within the field data.</p> <p>Note • The <i>default value</i> of g will continue to be underscore (_) for anyone with firmware version: V60.13.0.12, V60.13.0.12Z, V60.13.0.12B, or V60.13.0.12ZB.</p>


Table 10 • Maximum Field Sizes

ECC LEVEL	ID = 1	ID = 2	ID = 3	ID = 4	ID = 5	ID = 6
0	596	452	394	413	310	271
50	457	333	291	305	228	200
80	402	293	256	268	201	176
100	300	218	190	200	150	131
140	144	105	91	96	72	63

Maximum Field Sizes



Example • This is an example of a Data Matrix bar code:

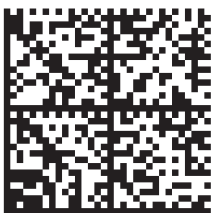DATA MATRIX BAR CODE	ZPL II CODE
	<pre> ^XA ^FO100,100 ^BXN,10,200 ^FDZEBRA TECHNOLOGIES CORP 333 CORPORATE WOODS PKWY VERNON HILLS, ILLINOIS 60061-3109^FS ^XZ </pre>

Effects of ^BY on ^BX

w = module width (no effect)

r = ratio (no effect)

h = height of symbol

If the dimensions of individual symbol elements are not specified in the ^BD command, the height of symbol value is divided by the required rows/columns, rounded, limited to a minimum value of one, and used as the dimensions of individual symbol elements.

Field Data (^FD) for ^BX

Quality 000 to 140

- The \& and || can be used to insert carriage returns, line feeds, and the backslash, similar to the PDF417. Other characters in the control character range can be inserted only by using ^FH. Field data is limited to 596 characters for quality 0 to 140. Excess field data causes no symbol to print; if ^CV is active, INVALID-L prints. The field data must correspond to a user-specified format ID or no symbol prints; if ^CV is active, INVALID-C prints.
- The maximum field sizes for quality 0 to 140 symbols are shown in the table in the **g** parameter.

Quality 200

- If more than 3072 bytes are supplied as field data, it is truncated to 3072 bytes. This limits the maximum size of a numeric Data Matrix symbol to less than the 3116 numeric characters that the specification would allow. The maximum alphanumeric capacity is 2335 and the maximum 8-bit byte capacity is 1556.
- If ^FH is used, field hexadecimal processing takes place before the escape sequence processing described below.
- The underscore is the default escape sequence control character for quality 200 field data. A different escape sequence control character can be selected by using parameter g in the ^BX command.

The information that follows applies to firmware version: V60.13.0.12, V60.13.0.12Z, V60.13.0.12B, or V60.13.0.12ZB. The input string escape sequences can be embedded in quality 200 field data using the ASCII 95 underscore character (_) or the character entered in parameter g:

- _X is the shift character for control characters (e.g., _@=NUL, _G=BEL, _0 is PAD)
- _1 to _3 for FNC characters 1 to 3 (explicit FNC4, upper shift, is not allowed)
- FNC2 (Structured Append) must be followed by nine digits, composed of three-digit numbers with values between 1 and 254, that represent the symbol sequence and file identifier (for example, symbol 3 of 7 with file ID 1001 is represented by _2214001001)
- 5NNN is code page NNN where NNN is a three-digit code page value (for example, Code Page 9 is represented by _5009)
- _dNNN creates ASCII decimal value NNN for a code word (must be three digits)
- _ in data is encoded by __ (two underscores)

The information that follows applies to all other versions of firmware. The input string escape sequences can be embedded in quality 200 field data using the ASCII 7E tilde character (~) or the character entered in parameter g:

- ~X is the shift character for control characters (e.g., ~@=NUL, ~G=BEL, ~0 is PAD)
- ~1 to ~3 for FNC characters 1 to 3 (explicit FNC4, upper shift, is not allowed)
- FNC2 (Structured Append) must be followed by nine digits, composed of three-digit numbers with values between 1 and 254, that represent the symbol sequence and file identifier (for example, symbol 3 of 7 with file ID 1001 is represented by ~2214001001)
- 5NNN is code page NNN where NNN is a three-digit code page value (for example, Code Page 9 is represented by ~5009)
- ~dNNN creates ASCII decimal value NNN for a code word (must be three digits)
- ~ in data is encoded by a ~ (tilde)

^BY

Bar Code Field Default

Description The ^BY command is used to change the default values for the module width (in dots), the wide bar to narrow bar width ratio and the bar code height (in dots). It can be used as often as necessary within a label format.

Format ^BYw, r, h

This table identifies the parameters for this format:

Parameters	Details
w = module width (in dots)	<i>Accepted Values:</i> 1 to 10 <i>Initial Value at power-up:</i> 2
r = wide bar to narrow bar width ratio	<i>Accepted Values:</i> 2 . 0 to 3 . 0, in 0.1 increments This parameter has no effect on fixed-ratio bar codes. <i>Default Value:</i> 3 . 0
h = bar code height (in dots)	<i>Initial Value at power-up:</i> 10

For parameter r, the actual ratio generated is a function of the number of dots in parameter w, module width. See [Table 11](#) on [page 104](#).



Example • Set module width (w) to 9 and the ratio (r) to 2.4. The width of the narrow bar is 9 dots wide and the wide bar is 9 by 2.4, or 21.6 dots. However, since the printer rounds out to the nearest dot, the wide bar is actually printed at 22 dots.

This produces a bar code with a ratio of 2.44 (22 divided by 9). This ratio is as close to 2.4 as possible, since only full dots are printed.

Module width and height (w and h) can be changed at anytime with the ^BY command, regardless of the symbology selected.

Table 11 • Shows module width ratios in dots

Ratio Selected (r)	Module Width in Dots (w)									
	1	2	3	4	5	6	7	8	9	10
2.0	2:1	2:1	2:1	2:1	2:1	2:1	2:1	2:1	2:1	2:1
2.1	2:1	2:1	2:1	2:1	2:1	2:1	2:1	2:1	2:1	2.1:1
2.2	2:1	2:1	2:1	2:1	2.2:1	2.16:1	2.1:1	2.12:1	2.1:1	2.2:1
2.3	2:1	2:1	2.3:1	2.25:1	2.2:1	2.16:1	2.28:1	2.25:1	2.2:1	2.3:1
2.4	2:1	2:1	2.3:1	2.25:1	2.4:1	2.3:1	2.28:1	2.37:1	2.3:1	2.4:1
2.5	2:1	2.5:1	2.3:1	2.5:1	2.4:1	2.5:1	2.4:1	2.5:1	2.4:1	2.5:1
2.6	2:1	2.5:1	2.3:1	2.5:1	2.6:1	2.5:1	2.57:1	2.5:1	2.5:1	2.6:1
2.7	2:1	2.5:1	2.6:1	2.5:1	2.6:1	2.6:1	2.57:1	2.65:1	2.6:1	2.7:1
2.8	2:1	2.5:1	2.6:1	2.75:1	2.8:1	2.6:1	2.7:1	2.75:1	2.7:1	2.8:1
2.9	2:1	2.5:1	2.6:1	2.75:1	2.8:1	2.8:1	2.85:1	2.87:1	2.8:1	2.9:1
3.0	3:1	3:1	3:1	3:1	3:1	3:1	3:1	3:1	3:1	3:1

Comments Once a ^BY command is entered into a label format, it stays in effect until another ^BY command is encountered.

^BZ

POSTNET Bar Code

Description The POSTNET bar code is used to automate the handling of mail. POSTNET uses a series of five bars, two tall and three short, to represent the digits 0 to 9.

- ^BZ supports a print ratio of 2.0:1 to 3.0:1.
- Field data (^FD) is limited to the width (or length, if rotated) of the label.

Format ^BZO, h, f, g




Important • If additional information about the POSTNET bar code is required, go to www.aimglobal.org, or contact the United States Postal Service and ask for Publication 25 — Designing Letter Mail, which includes a full specification for POSTNET. You can also download Publication 25 from:

<http://pe.usps.gov/cpim/ftp/pubs/pub25/pub25.pdf>

This table identifies the parameters for this format:

Parameters	Details
o = orientation	<p><i>Accepted Values:</i></p> <p>N = normal</p> <p>R = rotated 90 degrees (clockwise)</p> <p>I = inverted 180 degrees</p> <p>B = read from bottom up, 270 degrees</p> <p><i>Default Value:</i> current ^FW value</p>
h = bar code height (in dots)	<p><i>Accepted Values:</i> 1 to 32000</p> <p><i>Default Value:</i> value set by ^BY</p>
f = print interpretation line	<p><i>Accepted Values:</i></p> <p>N = no</p> <p>Y = yes</p> <p><i>Default Value:</i> N</p>
g = print interpretation line above code	<p><i>Accepted Values:</i></p> <p>N = no</p> <p>Y = yes</p> <p><i>Default Value:</i> N</p>

➔ **Example •** This is an example of a POSTNET bar code:

POSTNET BAR CODE	ZPL II CODE								
	<pre>^XA ^FO100,100^BY3 ^BZN,40,Y,N ^FD12345^FS ^XZ</pre>								
POSTNET BAR CODE CHARACTERS									
0	1	2	3	4	5	6	7	8	9

^CC ~CC

Change Carets

Description The ^CC command is used to change the format command prefix. The default prefix is the caret (^).

Format ^CCx or ~CCx

This table identifies the parameters for this format:

Parameters	Details
x = caret character change	<i>Accepted Values:</i> any ASCII character <i>Default Value:</i> a parameter is required. If a parameter is not entered, the next character received is the new prefix character.



Example • This is an example of how to change the format prefix to / from a ::

```
^XA
^CC/
/XZ
```

The forward slash (/) is set at the new prefix. Note the /XZ ending tag uses the new designated prefix character (/).



Example • This is an example of how to change the format prefix from ~ to a /:

```
~CC/
/XA/JUS/XZ
```

^CD ~CD

Change Delimiter

Description The ^CD and ~CD commands are used to change the delimiter character. This character is used to separate parameter values associated with several ZPL II commands. The default delimiter is a comma (,).

Format ^CDa or ~CDa

This table identifies the parameters for this format:

Parameters	Details
a = delimiter character change	<i>Accepted Values:</i> any ASCII character <i>Default Value:</i> a parameter is required. If a parameter is not entered, the next character received is the new prefix character.



Example • This shows how to change the character delimiter to a semi-colon (;) :

```
^XA
^FO10,10
^GB10,10,3
^XZ
^XA
^CD;
^FO10;10
^GB10;10;3
^XZ
```

- To save, the JUS command is required. Here is an example using JUS:

```
~CD;
^XA^JUS^XZ
```

^CF

Change Alphanumeric Default Font

Description The ^CF command sets the default font used in your printer. You can use the ^CF command to simplify your programs.

Format ^CFf, h, w

This table identifies the parameters for this format:

Parameters	Details
f = specified default font	<i>Accepted Values:</i> A through Z and 0 to 9 <i>Initial Value at power-up:</i> A
h = individual character height (in dots)	<i>Accepted Values:</i> 0 to 32000 <i>Initial Value at power-up:</i> 9
w = individual character width (in dots)	<i>Accepted Values:</i> 0 to 32000 <i>Initial Value at power-up:</i> 5 or last permanent saved value

Parameter f specifies the default font for every alphanumeric field. Parameter h is the default height for every alphanumeric field, and parameter w is the default width value for every alphanumeric field.

The default alphanumeric font is A. If you do not change the alphanumeric default font and do not use any alphanumeric field command (^AF) or enter an invalid font value, any data you specify prints in font A.

Defining only the height or width forces the magnification to be proportional to the parameter defined. If neither value is defined, the last ^CF values given or the default ^CF values for height and width are used.



Example • This is an example of ^CF code and the result of the code:

ZPL II CODE	GENERATED LABEL
<pre>^XA ^CF0,89 ^FO20,50 ^FDA GUIDE TO^FS ^FO20,150 ^FDTHE ZPL II^FS ^FO20,250 ^FDPROGRAMMING^FS ^FO20,350 ^FDLANGUAGE^FS ^XZ</pre>	

Comments Any font in the printer, including downloaded fonts, EPROM stored fonts, and fonts A through Z and 0 to 9, can also be selected with ^CW.

^CI

Change International Font/Encoding

Description Zebra printers can print fonts using international character sets: U.S.A.1, U.S.A.2, UK, Holland, Denmark/Norway, Sweden/Finland, Germany, France 1, France 2, Italy, Spain, and several other sets, including the Unicode character set.

The ^CI command enables you to call up the international character set you want to use for printing. You can mix character sets on a label.

This command allows character remapping when parameter a = 0 - 13.

Format ^CIa,s1,d1,s2,d2,...

This table identifies the parameters for this format:

Parameters	Details
a = desired character set	<p>Accepted values 0 - 12 are Zebra Code Page 850 with specific character replacements. For details, see International Character Sets on page 113 and/or Zebra Code Page 850 on page 436.</p> <p><i>Accepted Values:</i></p> <ul style="list-style-type: none"> 0 = Single Byte Encoding - U.S.A. 1 Character Set 1 = Single Byte Encoding - U.S.A. 2 Character Set 2 = Single Byte Encoding - U.K. Character Set 3 = Single Byte Encoding - Holland Character Set 4 = Single Byte Encoding - Denmark/Norway Character Set 5 = Single Byte Encoding - Sweden/Finland Character Set 6 = Single Byte Encoding - Germany Character Set 7 = Single Byte Encoding - France 1 Character Set 8 = Single Byte Encoding - France 2 Character Set 9 = Single Byte Encoding - Italy Character Set 10 = Single Byte Encoding - Spain Character Set 11 = Single Byte Encoding - Miscellaneous Character Set 12 = Single Byte Encoding - Japan (ASCII with Yen symbol) Character Set 13 = Zebra Code Page 850 (see page 436) 14 = Double Byte Asian Encodings * 15 = Shift-JIS ** 16 = EUC-JP and EUC-CN * 17 = Deprecated - UCS-2 Big Endian **** 18 to 23 = Reserved 24 = Single Byte Asian Encodings * 25 = Reserved 26 = Multibyte Asian Encodings with ASCII Transparency * and *** 27 = Zebra Code Page 1252 (see page 438) 28 = Unicode (UTF-8 encoding) - Unicode Character Set 29 = Unicode (UTF-16 Big-Endian encoding) - Unicode Character Set 30 = Unicode (UTF-16 Little-Endian encoding) - Unicode Character Set <p><i>Initial Value at power-up:</i> 0</p>
<p>These parameters are only valid when parameter a = 1 - 13</p>	
s1 = source 1 (character output image)	<p><i>Accepted Values:</i> decimals 0 to 255</p>
d1 = destination 1 (character input)	<p><i>Accepted Values:</i> decimals 0 to 255</p>



Values 28 to 30 are only supported in firmware version V60.14.x, V50.14.x, or later.

Parameters	Details
s2 = source 2 (character output image)	<i>Accepted Values:</i> decimals 0 to 255
d2 = destination 2 (character input)	<i>Accepted Values:</i> decimals 0 to 255
... = continuation of pattern	Up to 256 source and destination pairs can be entered in this command.

* The encoding is controlled by the conversion table (* .DAT). The correct table must be present for the conversion to function.

** Shift-JIS encoding converts Shift-JIS to JIS and then looks up the JIS conversion in JIS .DAT. This table must be present for Shift-JIS to function.

*** Supports ASCII transparency for Asian encodings. 7F and less are treated as single byte characters. 80 to FE is treated as the first byte of a 2 byte character 8000 to FEFF in the encoding table for Unicode. 80 to FF could mean quad byte in GB18030. The ^CI26 command can also be used to support the GB 18030 and Big5 HKSCS encodings. The GB 18030 uses the GB18030 .DAT encoding table and BIG5 HKSCS uses the BIG5HK .DAT encoding table.

**** The ^CI17 command has been deprecated, along with the ^F8 and ^F16 commands that are required for the ^CI17 command to function. The recommended replacement is the ^CI28-30 commands.



We recommend that a ^CI command (or Unicode BOM) is included at the beginning of each ZPL script. This is important when ZPL scripts with different encodings are being sent to a single printer. To assist in the interleaving of encoding schemes, the printer maintains two encoding states (^CI0 - 28 and ^CI29 - 30). It automatically acknowledges when it should switch encoding states, allowing it to distinguish between encodings, and maintains a ^CI for each, but endianness is shared.



Example • This example remaps the Euro symbol (36) decimal to the dollar sign value (21) decimal. When the dollar sign character is sent to the printer, the Euro symbol prints.

```
^CI0,36,21
```

The font selected determines the shape and resolution of the printed symbol.

International Character Sets

Hex	2	3	4	5	5	5	5	6	7	7	7	7
	3	0	0	B	C	D	E	0	B	C	D	E
CI0	#	0	@	[Φ]	^	'	{		}	~
CI1	#	0	@	⅓	Φ	⅔	^	'	¼	½	¾	~
CI2	£	0	@	[Φ]	^	'	{		}	~
CI3	f	0	§	[U]	^	'	{	ij	}	~
CI4	#	0	@	Æ	Ø	Å	^	'	æ	ø	å	~
CI5	Ü	0	É	Ä	Ö	Å	Ü	é	ä	ö	å	ü
CI6	#	0	§	Ä	Ö	Ü	^	'	ä	ö	ü	ß
CI7	£	0	à	[ç]	^	'	é	ì	ù	è
CI8	#	0	à	â	ç	ê	î	ô	é	ù	è	û
CI9	£	0	§	[ç	é	^	ù	à	ò	è	ì
CI10	#	0	§	í	Ñ	¿	^	'	{	ñ	ç	~
CI11	£	0	É	Ä	Ö	Ü	^	ä	ë	ï	ö	ü
CI12	#	0	@	[¥]	^	'	{		}	~
CI13	#	0	@	[\]	^	'	{		}	~



Note • ^CI 13 = US keyboard

Comments The *space* character cannot be remapped for any font.

^CM

Change Memory Letter Designation

Description The ^CM command allows you to reassign a letter designation to the printer’s memory devices. If a format already exists, you can reassign the memory device to the corresponding letter without forcing, altering, or recreating the format itself.

Using this command affects every subsequent command that refers to specific memory locations.

Format ^CMa , b , c , d

This table identifies the parameters for this format:

Parameters	Details
a = memory alias for B :	<i>Accepted Values:</i> B : , E : ,R : , A : , and NONE <i>Default Value:</i> B :
b = memory alias for E :	<i>Accepted Values:</i> B : , E : ,R : , A : , and NONE <i>Default Value:</i> E :
c = memory alias for R :	<i>Accepted Values:</i> B : , E : ,R : , A : , and NONE <i>Default Value:</i> R :
d = memory alias for A :	<i>Accepted Values:</i> B : , E : ,R : , A : , and NONE <i>Default Value:</i> A :

Comments If two or more parameters specify the same letter designator, all letter designators are set to their default values.

It is recommended that after entering the ^CM command, ^JUS is entered to save changes to EEPROM. Any duplicate parameters entered reset the letter designations back to the default.

If any of the parameters are out of specification, the command is ignored.



Example • This example designates letter E : to point to the B : memory device, and the letter B : to point to the E : memory device.

```
^XA
^CME , B , R , A
^JUS
^XA
```

^CO

Cache On



Note • If you have firmware x.12 or greater this command is not required because the printer firmware automatically expands the size of the character cache as needed.

Description The ^CO command is used to change the size of the character cache. By definition, a *character cache* (referred to as cache) is a portion of the DRAM reserved for storing scalable characters. All printers have a default 40K cache that is always turned on. The maximum single character size that can be stored, without changing the size of the cache, is 450 dots by 450 dots.

There are two types of fonts used in Zebra printers: bitmapped and scalable. Letters, numbers, and symbols in a bitmapped font have a fixed size (for example: 10 points, 12 points, 14 points). By comparison, scalable fonts are not fixed in size.

Because their size is fixed, bitmapped fonts can be moved quickly to the label. In contrast, scalable fonts are much slower because each character is built on an as-needed basis before it is moved to the label. By storing scaled characters in a cache, they can be recalled at a much faster speed.

The number of characters that can be stored in the cache depends on two factors: the size of the cache (memory) and the size of the character (in points) being saved. The larger the point size, the more space in the cache it uses. The default cache stores every scalable character that is requested for use on a label. If the same character, with the same rotation and size is used again, it is quickly retrieved from cache.

It is possible that after a while the print cache could become full. Once the cache is full, space for new characters is obtained by eliminating an existing character from the print cache. Existing characters are eliminated by determining how often they have been used. This is done automatically. For example, a 28-point *Q* that was used only once would be a good candidate for elimination from the cache.

Maximum size of a single print cache character is 1500 dots by 1500 dots. This would require a cache of 274K.

When the cache is too small for the desired style, smaller characters might appear but larger characters do not. If possible, increase the size of the cache.

Format ^COa,b,c

This table identifies the parameters for this format:

Parameters	Details
a = cache on	<i>Accepted Values:</i> N = no Y = yes <i>Default Value:</i> Y
b = amount of additional memory to be added to cache (in K)	<i>Accepted Values:</i> 1 to 9999 <i>Default Value:</i> 40
c = cache type	<i>Accepted Values:</i> 0 = cache buffer (normal fonts) 1 = internal buffer (recommended for Asian fonts) <i>Default Value:</i> 0



Example • To resize the print cache to 62K, assuming a 22K existing cache:

```
^COY,40
```

To resize the print cache to 100K, assuming a 22K existing cache:

```
^COY,78
```

Print Cache Performance

For printing large characters, memory added to the cache by the ^CO command is not physically added to the 22K cache already in the printer. In the second example above, the resulting 100K cache is actually two separate blocks of memory, 22K and 78K.

Because large characters need contiguous blocks of memory, a character requiring a cache of 90K would not be completely stored because neither portion of the 100K cache is big enough. Therefore, if large characters are needed, the ^CO command should reflect the actual size of the cache you need.

Increasing the size of the cache improves the performance in printing scalable fonts. However, the performance decreases if the size of the cache becomes large and contains too many characters. The performance gained is lost because of the time involved searching the cache for each character.

Comments The cache can be resized as often as needed. Any characters in the cache when it is resized are lost. Memory used for the cache reduces the space available for label bitmaps, graphic, and fonts.

Some Asian fonts require an internal working buffer that is much larger than the normal cache. Since most fonts do not require this larger buffer, it is now a selectable configuration option. Printing with the Asian fonts greatly reduces the printer memory available for labels, graphics, fonts, formats, and label bitmaps.

[^]CT ~CT

Change Tilde

Description The [^]CT and ~CT commands are used to change the control command prefix. The default prefix is the tilde (~).

Format [^]CTa or ~CTa

This table identifies the parameters for this format:

Parameters	Details
a = change control command character	<p><i>Accepted Values:</i> any ASCII character</p> <p><i>Default Value:</i> a parameter is required. If a parameter is not entered, the next character received is the new control command character.</p>



Example • This is an example of how to change the control command prefix from a [^] to a +:

```
^XA
^CT+
^XZ
+HS
```

^CV

Code Validation

Description The ^CV command acts as a switch to turn the code validation function on and off. When this command is turned on, all bar code data is checked for these error conditions:

- character not in character set
- check-digit incorrect
- data field too long (too many characters)
- data field too short (too few characters)
- parameter string contains incorrect data or missing parameter

When invalid data is detected, an error message and code is printed in reverse image in place of the bar code. The message reads INVALID - X where X is one of these error codes:

- C = character not in character set
- E = check-digit incorrect
- L = data field too long
- S = data field too short
- P = parameter string contains incorrect data
(occurs only on select bar codes)

Once turned on, the ^CV command remains active from format to format until turned off by another ^CV command or the printer is turned off. The command is not permanently saved.

Format ^CVa

This table identifies the parameters for this format:

Parameters	Details
a = code validation	<i>Accepted Values:</i> N = no Y = yes <i>Default Value:</i> N



Example • The examples below show the error labels ^CVY generates when incorrect field data is entered. Compare the letter following *INVALID* – to the listing on the previous page.

ZPL II CODE	GENERATED LABEL
<pre>^XA ^CVY ^FO50,50 ^BEN,100,Y,N ^FD97823456 890^FS ^XZ</pre>	<div>INVALID - C</div>
<pre>^XA ^CVY ^FO50,50 ^BEN,100,Y,N ^FD9782345678907^FS ^XZ</pre>	<div>INVALID - E</div>
<pre>^XA ^CVY ^FO50,50 ^BEN,100,Y,N ^FD97823456789081^FS ^XZ</pre>	<div>INVALID - L</div>
<pre>^XA ^CVY ^FO50,50 ^BEN,100,Y,N ^FD97823456789^FS ^XZ</pre>	<div>INVALID - S</div>
<pre>^XA ^CVY ^FO50,50 ^BQN2,3 ^FDHM,BQRCODE-22^FS ^XZ</pre>	<div>INVALID - P</div>

Comments If more than one error exists, the first error detected is the one displayed.

The ^CV command tests the integrity of the data encoded into the bar code. It is not used for (or to be confused with) testing the scan-integrity of an image or bar code.



Font Identifier

Description All built-in fonts are referenced using a one-character identifier. The ^CW command assigns a single alphanumeric character to a font stored in DRAM, memory card, EPROM, or Flash.

If the assigned character is the same as that of a built-in font, the downloaded font is used in place of the built-in font. The new font is printed on the label wherever the format calls for the built-in font. If used in place of a built-in font, the change is in effect only until power is turned off.

If the assigned character is different, the downloaded font is used as an additional font. The assignment remains in effect until a new command is issued or the printer is turned off.

Format ^CWa,d:ox

This table identifies the parameters for this format:

Parameters	Details
a = letter of existing font to be substituted, or new font to be added	<i>Accepted Values:</i> A through Z and 0 to 9 <i>Default Value:</i> a one-character entry is required
d = device to store font in (optional)	<i>Accepted Values:</i> R:, E:, B:, and A: <i>Default Value:</i> R:
o = name of the downloaded font to be substituted for the built-in, or as an additional font	<i>Accepted Values:</i> any name up to 8 characters <i>Default Value:</i> if a name is not specified, UNKNOWN is used
x = extension <div><div>.14↑</div><div>.TTE is only supported in firmware version V60.14.x, V50.14.x, or later.</div></div>	<i>Accepted Values:</i> <div><div>.FNT = Font</div><div>.TTF = TrueType Font</div><div>.TTE = TrueType Extension</div></div>



Example • These examples show how to use:

- MYFONT . FNT stored in DRAM whenever a format calls for Font A:
 ^XA
 ^CWA , R : MYFONT . FNT
 ^XZ
- MYFONT . FNT stored in DRAM additionally as Font Q:
 ^XA
 ^CWQ , R : MYFONT . FNT
 ^XZ
- NEWFONT . FNT stored in DRAM whenever a format calls for font F:
 ^XA
 ^CWF , R : NEWFONT . FNT
 ^XZ

DIRECTORY OF R:*.*	
R:NEWFONT.FNT	65268
R:MYFONT.FNT	65268
582164 BYTES FREE R:	

Label Listing Before Assignment

DIRECTORY OF R:*.*	
F R:NEWFONT.FNT	65268
AQ R:MYFONT.FNT	65268
582164 BYTES FREE R:	

Label Listing After Assignment

~DB

Download Bitmap Font

Description The ~DB command sets the printer to receive a downloaded bitmap font and defines native cell size, baseline, space size, and copyright.

This command consists of two portions, a ZPL II command defining the font and a structured data segment that defines each character of the font.

Format ~DBd:o.x,a,h,w,base,space,#char,®,data

This table identifies the parameters for this format:

Parameters	Details
d = drive to store font	<i>Accepted Values:</i> R:, E:, B:, and A: <i>Default Value:</i> R:
o = name of font	<i>Accepted Values:</i> 1 to 8 alphanumeric characters <i>Default Value:</i> if a name is not specified, UNKNOWN is used
x = extension	<i>Fixed Value:</i> .FNT
a = orientation of native font	<i>Fixed Value:</i> normal
h = maximum height of cell (in dots)	<i>Accepted Values:</i> 1 to 32000 <i>Default Value:</i> a value must be specified
w = maximum width of cell (in dots)	<i>Accepted Values:</i> 1 to 32000 <i>Default Value:</i> a value must be specified
base = dots from top of cell to character baseline	<i>Accepted Values:</i> 1 to 32000 <i>Default Value:</i> a value must be specified
space = width of space or non-existent characters	<i>Accepted Values:</i> 1 to 32000 <i>Default Value:</i> a value must be specified
#char = number of characters in font	<i>Accepted Values:</i> 1 to 256 (must match the characters being downloaded) <i>Default Value:</i> a value must be specified

Parameters	Details
© = copyright holder	<i>Accepted Values:</i> 1 to 63 alphanumeric characters <i>Default Value:</i> a value must be specified
data = structured ASCII data that defines each character in the font	The # symbol signifies character code parameters, which are separated with periods. The character code is from 1 to 4 characters to allow for large international character sets to be downloaded to the printer. The data structure is: #xxxx.h.w.x.y.i.data #xxxx = character code h = bitmap height (in dot rows) w = bitmap width (in dot rows) x = x-offset (in dots) y = y-offset (in dots) i = typesetting motion displacement (width, including inter character gap of a particular character in the font) data = hexadecimal bitmap description



Example • This is an example of how to use the ~DB command. It shows the first two characters of a font being downloaded to DRAM.

```
~DBR:TIMES.FNT,N,5,24,3,10,2,ZEBRA 1992,
#0025.5.16.2.5.18.
O0FF
O0FF
F000
F000
FFFF
#0037.4.24.3.6.26.
O0FF00
O000FO
O000FO
O0FF00
```

~DE

Download Encoding

Description The standard encoding for TrueType Windows® fonts is always Unicode. The ZPL II field data must be converted from some other encoding to Unicode that the Zebra printer understands. The required translation tables are provided with font packs. Some tables can be downloaded from www.zebra.com.

Format ~DEd:o.x,s,data

This table identifies the parameters for this format:

Parameters	Details
d = location of table	<i>Accepted Values:</i> R:, E:, B:, and A: <i>Default Value:</i> R:
o = name of table	<i>Accepted Values:</i> any valid name, up to 8 characters <i>Default Value:</i> if a name is not specified, UNKNOWN is used
x = extension	<i>Fixed Value:</i> .DAT
s = table size	<i>Accepted Values:</i> the number of memory bytes required to hold the Zebra downloadable format of the font <i>Default Value:</i> if an incorrect value or no value is entered, the command is ignored
data = data string	<i>Accepted Values:</i> a string of ASCII hexadecimal values <i>Default Value:</i> if no data is entered, the command is ignored



Example • This is an example of how to download the required translation table:

```
~DER:JIS.DAT,27848,300021213001...
```

(27848 two-digit hexadecimal values)

Comments For more information on ZTools or ZebraNet Bridge, see the program documentation included with the software.

For assistance with editing or adding mappings to .DAT tables, ZebraNet Bridge includes a .DAT table editor in the font wizard.

Encoding scheme for the data sent to the printer is the second four character and the encoding scheme for the font is the first four characters throughout the .DAT file. The data must be ordered by the second four characters (the encoding table).



Example • This is an example of a .DAT table. The table below the example identifies the elements:

```
~DEE:EXAMPLE.DAT,16,
00310041 ← 1
00320042 ← 2
00330043 ← 3
00340044 ← 4
```

1	Input stream with 0041 will be mapped to 0031. The printer prints "1".
2	Input stream with 0042 will be mapped to 0032. The printer prints "2".
3	Input stream with 0043 will be mapped to 0033. The printer prints "3".
4	Input stream with 0044 will be mapped to 0034. The printer prints "4".

Data must have 0041, 0042, 0043, and 0044 in order. Multiple pairs can be on the same line.

^DF

Download Format

Description The ^DF command saves ZPL II format commands as text strings to be later merged using ^XF with variable data. The format to be stored might contain field number (^FN) commands to be referenced when recalled.

While use of stored formats reduces transmission time, no formatting time is saved—this command saves ZPL II as text strings formatted at print time.

Enter the ^DF stored format command immediately after the ^XA command, then enter the format commands to be saved.

Format ^DFd: o.x

This table identifies the parameters for this format:

Parameters	Details
d = device to store image	<i>Accepted Values:</i> R:, E:, B:, and A: <i>Default Value:</i> R:
o = image name	<i>Accepted Values:</i> 1 to 8 alphanumeric characters <i>Default Value:</i> if a name is not specified, UNKNOWN is used
x = extension	<i>Fixed Value:</i> .ZPL

For a complete example of the ^DF and ^XF command, see [^DF and ^XF — Download format and recall format on page 11](#).

Example • This example is generated using the ^XF command to recall this format:

ZPL II CODE	GENERATED LABEL
<pre>^XA ^DFR:STOREFMT.ZPL^FS ^FO25,25 ^AD,36,20^FN1^FS ^FO165,25 ^AD,36,20^FN2^FS ^FO25,75 ^AB,22,14^FDBUILT BY^FS ^FO25,125 ^AE,28,15^FN1 ^XZ ^XA ^XFR:STOREFMT.ZPL^FS ^FN1^FDZEBRA^FS ^XZ</pre>	<div><div>ZEBRA PRINTER BUILT BY ZEBRA</div></div>

~DG

Download Graphics

Description The ~DG command downloads an ASCII Hex representation of a graphic image. If .GRF is not the specified file extension, .GRF is automatically appended.

For more saving and loading options when downloading files, see [~DY on page 134](#).

Format ~DGd:o.x,t,w,data

This table identifies the parameters for this format:

Parameters	Details
d = device to store image	<i>Accepted Values:</i> R:, E:, B:, and A: <i>Default Value:</i> R:
o = image name	<i>Accepted Values:</i> 1 to 8 alphanumeric characters <i>Default Value:</i> if a name is not specified, UNKNOWN is used
x = extension	<i>Fixed Value:</i> .GRF
t = total number of bytes in graphic	See the formula in the examples below.
w = number of bytes per row	See the formula in the examples below.
data = ASCII hexadecimal string defining image	The data string defines the image and is an ASCII hexadecimal representation of the image. Each character represents a horizontal nibble of four dots.

This is the key for the examples that follow:

- x = width of the graphic in millimeters
- y = height of the graphic in millimeters
- z = dots/mm = print density of the printer being programmed
- 8 = bits/byte



Examples • These are some example related to the ~DG command:

To determine the τ parameter use this formula:

$$\frac{xz}{8} \times yz = \text{totalbytes}$$

To determine the correct t parameter for a graphic 8 mm wide, 16 mm high, and a print density of 8 dots/mm, use this formula:

$$\begin{aligned} 8 \times 128 &= 1024 \\ t &= 1024 \end{aligned}$$

Raise any portion of a byte to the next whole byte.

To determine the w parameter (the width in terms of bytes per row) use this formula:

$$w = 8$$

To determine the correct w parameter for a graphic 8 mm wide and a print density of 8 dots/mm, use this formula:


$$w = 8$$

Raise any portion of a byte to the next whole byte.

Parameter w is the first value in the τ calculation.

The data parameter is a string of hexadecimal numbers sent as a representation of the graphic image. Each hexadecimal character represents a horizontal nibble of four dots. For example, if the first four dots of the graphic image are white and the next four black, the dot-by-dot binary code is 00001111. The hexadecimal representation of this binary value is 0F. The entire graphic image is coded in this way, and the complete graphic image is sent as one continuous string of hexadecimal values.

This is an example of using the ~DG command to load a checkerboard pattern into DRAM. The name used to store the graphic is SAMPLE.GRF:

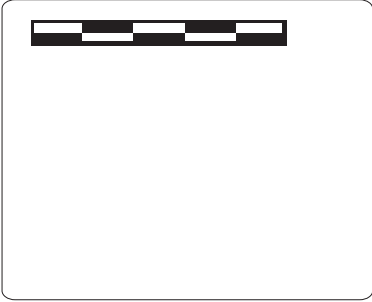ZPL II CODE	GENERATED LABEL
~DGR: SAMPLE.GRF, 00080, 010, FFFFFFFFFFFFFFFFFFFFF 8000FFFF0000FFFF0001 8000FFFF0000FFFF0001 8000FFFF0000FFFF0001 FFFF0000FFFF0000FFFF FFFF0000FFFF0000FFFF FFFF0000FFFF0000FFFF FFFFFFFFFFFFFFFFFFFFF ^XA ^F020, 20^XGR: SAMPLE.GRF, 1, 1^FS ^XZ	

Comments Do not use spaces or periods when naming your graphics. Always use different names for different graphics.

If two graphics with the same name are sent to the printer, the first graphic is erased and replaced by the second graphic.

~DN

Abort Download Graphic

Description After decoding and printing the number of bytes in parameter t of the ~DG command, the printer returns to normal Print Mode. Graphics Mode can be aborted and normal printer operation resumed by using the ~DN command.

Format ~DN

Comments If you need to stop a graphic from downloading, you should abort the transmission from the host device. To clear the ~DG command, however, you must send a ~DN command.

~DS

Download Intellifont (Scalable Font)

Description The ~DS command is used to set the printer to receive a downloadable scalable font and defines the size of the font in bytes.

The ~DS command, and its associated parameters, is the result of converting a vendor-supplied font for use on a Zebra printer. To convert this font use the ZTools utility.

Format ~DSd:o.x,s,data

This table identifies the parameters for this format:

Parameters	Details
d = device to store image	<i>Accepted Values:</i> R:, E:, B:, and A: <i>Default Value:</i> R:
o = image name	<i>Accepted Values:</i> 1 to 8 alphanumeric characters <i>Default Value:</i> if a name is not specified, UNKNOWN is used
x = extension	<i>Fixed Value:</i> .FNT
s = size of font in bytes	<i>Fixed Value:</i> this number is generated by ZTools and should not be changed
data = ASCII hexadecimal string that defines font	<i>Fixed Value:</i> this number is generated by ZTools and should not be changed



Example • This example shows the first three lines of a scalable font that was converted using the ZTools program and is ready to be downloaded to the printer. If necessary, the destination and object name can be changed.

```
~DSB:CGTIMES.FNT,37080,  
00FF00FF00FF00FF  
FF0AECB28FF00FF
```

Comments Downloaded scalable fonts are not checked for integrity. If they are corrupt, they cause unpredictable results at the printer.



If you are using a TrueType font use these commands: ~DT, ~DU, and ~DY. To determine when to use the noted commands, see [~DT on page 132](#), [~DU on page 133](#), and [~DY on page 134](#).

~DT

Download Bounded TrueType Font

Description Use ZTools to convert a TrueType font to a Zebra-downloadable format that has less than 256 characters in it. To convert a font that has more than 256 characters, see [~DU on page 133](#). ZTools creates a downloadable file that includes a ~DT command. For information on converting and downloading Intellifont information, see [~DS on page 131](#).

Format ~DTd:o.x,s,data

This table identifies the parameters for this format:

Parameters	Details
d = font location	<i>Accepted Values:</i> R:, E:, B:, and A: <i>Default Value:</i> R:
o = font name	<i>Accepted Values:</i> any valid TrueType name, up to 8 characters <i>Default Value:</i> if a name is not specified, UNKNOWN is used
x = extension	<i>Fixed Value:</i> .DAT
s = font size	<i>Accepted Values:</i> the number of memory bytes required to hold the Zebra-downloadable format of the font <i>Default Value:</i> if an incorrect value or no value is entered, the command is ignored
data = data string	<i>Accepted Values:</i> a string of ASCII hexadecimal values (two hexadecimal digits/byte). The total number of two-digit values must match parameter s. <i>Default Value:</i> if no data is entered, the command is ignored



Example • This is an example of how to download a true type font:

```
~DTR:FONT,52010,00AF01B0C65E...
```

(52010 two-digit hexadecimal values)

~DU

Download Unbounded TrueType Font

Description Some international fonts, such as Asian fonts, have more than 256 printable characters. These fonts are supported as *large TrueType fonts* and are downloaded to the printer with the ~DU command. Use ZTools to convert the large TrueType fonts to a Zebra-downloadable format.

Format ~DUd:o.x,s,data

This table identifies the parameters for this format:

Parameters	Details
d = font location	<i>Accepted Values:</i> R:, E:, B:, and A: <i>Default Value:</i> R:
o = font name	<i>Accepted Values:</i> 1 to 8 alphanumeric characters <i>Default Value:</i> if a name is not specified, UNKNOWN is used
x = extension	<i>Fixed Value:</i> .FNT
s = font size	<i>Accepted Values:</i> the number of memory bytes required to hold the Zebra-downloadable format of the font <i>Default Value:</i> if no data is entered, the command is ignored
data = data string	<i>Accepted Values:</i> a string of ASCII hexadecimal values (two hexadecimal digits/byte). The total number of two-digit values must match parameter s. <i>Default Value:</i> if no data is entered, the command is ignored



Example • This is an example of how to download an unbounded true type font:

```
~DUR:KANJI,86753,60CA017B0CE7...
```

(86753 two-digit hexadecimal values)

For similar commands, see [~DS on page 131](#), [~DT on page 132](#), and [~DY on page 134](#).

~DY

Download Graphics / Native TrueType or OpenType Font

Description The ~DY command downloads to the printer graphic objects or fonts in any supported format. This command can be used in place of ~DG for more saving and loading options. ~DY is the preferred command to download TrueType fonts on printers with firmware later than X.13. It is faster than ~DU. The ~DY command also supports downloading wireless certificate files.





Note • When using certificate files, your printer supports:

- Using Privacy Enhanced Mail (PEM) formatted certificate files.
- Using the client certificate and private key as two files, each downloaded separately.
- Using exportable PAC files for EAP-FAST.

Format ~DYd:f,b,x,t,w,data

This table identifies the parameters for this format:

Parameters	Details
d = file location  .NRD and .PAC files reside on E: in firmware version V60.15.x, V50.15.x, or later.	<i>Accepted Values:</i> R:, E:, B:, and A: <i>Default Value:</i> R:
f = file name	<i>Accepted Values:</i> 1 to 8 alphanumeric characters <i>Default Value:</i> if a name is not specified, UNKNOWN is used
b = format downloaded in data field  .TTE and .TTF are only supported in firmware version V60.14.x, V50.14.x, or later.	<i>Accepted Values:</i> <ul style="list-style-type: none"> A = uncompressed (ZB64, ASCII) B = uncompressed (.TTE, .TTF, binary) C = AR-compressed (used only by Zebra's BAR-ONE® v5) P = portable network graphic (.PNG) - ZB64 encoded <i>Default Value:</i> a value must be specified

Parameters	Details
<p>x = extension of stored file</p> <p>.14†</p> <p>.TTE and .OTF are only supported in firmware version V60.14.x, V50.14.x, or later.</p> <p>.15†</p> <p>.NRD and .PAC are only supported in firmware version V60.15.x, V50.15.x, or later.</p>	<p><i>Accepted Values:</i></p> <p>B = bitmap</p> <p>E = TrueType Extension (.TTE)</p> <p>G = raw bitmap (.GRF)</p> <p>P = store as compressed (.PNG)</p> <p>T = TrueType (.TTF) or OpenType (.OTF)</p> <p>X = Paintbrush (.PCX)</p> <p>D = Non Readable File (.NRD)</p> <p>Z = Protected Access Credential (.PAC)</p> <p><i>Default Value:</i> a value other than the accepted values defaults to .GRF</p>
<p>t = total number of bytes in file</p> <p>.14†</p> <p>.TTE is only supported in firmware version V60.14.x, V50.14.x, or later.</p>	<p><i>Accepted Values:</i></p> <p>.BMP</p> <p>This parameter refers to the actual size of the file, not the amount of disk space.</p> <p>.GRF images: the size after decompression into memory</p> <p>This parameter refers to the actual size of the file, not the amount of disk space.</p> <p>.PCX</p> <p>This parameter refers to the actual size of the file, not the amount of disk space.</p> <p>.PNG images:</p> <p>This parameter refers to the actual size of the file, not the amount of disk space.</p> <p>.TTF</p> <p>This parameter refers to the actual size of the file, not the amount of disk space.</p> <p>.TTE</p> <p>This parameter refers to the actual size of the file, not the amount of disk space.</p>

Parameters	Details
<p>w = total number of bytes per row</p> <p>.14†</p> <p>.TTE is only supported in firmware version V60.14.x, V50.14.x, or later.</p> <p>.15†</p> <p>.NRD and .PAC files are supported in version V60.15.x, V50.15.x, or later.</p>	<p><i>Accepted Values:</i></p> <p>.GRF images: number of bytes per row</p> <p>.PNG images: value ignored</p> <p>.TTF images: value ignored</p> <p>.TTE images: value ignored</p> <p>.NRD images: value ignored</p> <p>.PAC images: value ignored</p>
<p>data = data</p>	<p>ASCII hexadecimal encoding, ZB64, or binary data, depending on b.</p> <p>A, P = ASCII hexadecimal or ZB64</p> <p>B, C = binary</p> <p>When binary data is sent, all control prefixes and flow control characters are ignored until the total number of bytes needed for the graphic format is received.</p>



Note • The ~DY command and the binary font file or binary graphic file can be sent as two separate files. If the files are sent to the printer separately, the data light might remain lit until the printer receives the TrueType font file. **SIZE number** of bytes must be received for the download to complete successfully. The graphic files must be monochrome (black and white).



Example • This is an example of how to download a binary TrueType Font file of Size bytes using the name fontfile.ttf and storing it to permanent flash memory on the printer:

```
~DYE:FONTFILE.TTF,B,T,SIZE,,
```

Comments For more information on ZB64 encoding and compression, see [ZB64 Encoding and Compression on page 463](#).



These are some important things to know about this command in firmware version V60.14.x, V50.14.x, or later:

- ZebraNet Bridge can be used to download fonts and graphics with this command.
- OpenType tables are only supported when downloading the font with this command
- OpenType fonts (.OTF) are supported if they are downloaded as a TrueType font. In the printer .OTF fonts have the .TTF extension.

~EG

Erase Download Graphics

See [^ID](#) on page 188.

^FB

Field Block

Description The ^FB command allows you to print text into a defined *block type* format. This command formats an ^FD or ^SN string into a block of text using the origin, font, and rotation specified for the text string. The ^FB command also contains an automatic word-wrap function.

Format ^FBa,b,c,d,e

This table identifies the parameters for this format:

Parameters	Details
a = width of text block line (in dots)	<p><i>Accepted Values:</i> 0 to the width of the label</p> <p><i>Default Value:</i> 0</p> <p>If the value is less than font width or not specified, text does not print.</p>
b = maximum number of lines in text block	<p><i>Accepted Values:</i> 1 to 9999</p> <p><i>Default Value:</i> 1</p> <p>Text exceeding the maximum number of lines overwrites the last line. Changing the font size automatically increases or decreases the size of the block.</p>
c = add or delete space between lines (in dots)	<p><i>Accepted Values:</i> -9999 to 9999</p> <p><i>Default Value:</i> 0</p> <p>Numbers are considered to be positive unless preceded by a minus sign. Positive values add space; negative values delete space.</p>
d = text justification	<p><i>Accepted Values:</i></p> <p>L = left</p> <p>C = center</p> <p>R = right</p> <p>J = justified</p> <p><i>Default Value:</i> L</p> <p>If J is used the last line is left-justified.</p>
e = hanging indent (in dots) of the second and remaining lines	<p><i>Accepted Values:</i> 0 to 9999</p> <p><i>Default Value:</i> 0</p>



Example • These are examples of how the ^FB command affects field data.

ZPL II CODE	GENERATED LABEL
<pre> ^XA ^CF0,30,30^FO25,50 ^FB250,4,, ^FDFD command that IS preceded by an FB command.^FS ^XZ </pre>	<div>FD command that IS preceded by an FB command.</div>
<pre> ^XA ^CF0,30,30^FO25,50 ^FDFD command that IS NOT preceded by an FB command.^FS ^XZ </pre>	<div>FD command that IS NOT preceded by an FB cor</div>

Comments on the ^FB Command

This scheme can be used to facilitate special functions:

- \& = carriage return/line feed
- \(*) = soft hyphen (word break with a dash)
- \\ = backslash (\)

Item 1: ^CI13 must be selected to print a backslash (\).

Item 2: If a soft hyphen escape sequence is placed near the end of a line, the hyphen is printed. If it is not placed near the end of the line, it is ignored.

(*) = any alphanumeric character

- If a word is too long to print on one line by itself (and no soft hyphen is specified), a hyphen is automatically placed in the word at the right edge of the block. The remainder of the word is on the next line. The position of the hyphen depends on word length, not a syllable boundary. Use a soft hyphen within a word to control where the hyphenation occurs.
- Maximum data-string length is 3K, including control characters, carriage returns, and line feeds.
- Normal carriage returns, line feeds, and *word spaces* at line breaks are discarded.
- When using ^FT (Field Typeset), ^FT uses the baseline origin of the last possible line of text. Increasing the font size causes the text block to increase in size from bottom to top. This could cause a label to print past its top margin.
- When using ^FO (Field Origin), increasing the font size causes the text block to increase in size from top to bottom.
- ^FS terminates an ^FB command. Each block requires its own ^FB command.



While the ^FB command has a text justification parameter that defines the justification of the text within the block, it also interacts with the justification of ^FO and ^FT that define the justification of the origin.

The ^FB command does not support soft hyphens as a potential line break point. However, soft hyphen characters are always printed as if they were a hyphen.

The ^FB command does not support complex text. For complex text support, use ^TB.

^FC

Field Clock (for Real-Time Clock)

Description The ^FC command is used to set the clock-indicators (delimiters) and the clock mode for use with the Real-Time Clock hardware. This command must be included within each label field command string each time the Real-Time Clock values are required within the field.

Format ^FCa,b,c

This table identifies the parameters for this format:

Parameters	Details
a = primary clock indicator character	<i>Accepted Values:</i> any ASCII character <i>Default Value:</i> %
b = secondary clock indicator character	<i>Accepted Values:</i> any ASCII character <i>Default Value:</i> none—this value cannot be the same as a or c
c = third clock indicator character	<i>Accepted Values:</i> any ASCII character <i>Default Value:</i> none—this value cannot be the same as a or b



Example • Entering these ZPL commands sets the primary clock indicator to %, the secondary clock indicator to {, and the third clock indicator to #. The results are printed on a label with Primary, Secondary, and Third as field data.

ZPL II CODE	GENERATED LABEL
<pre>^XA ^FO10,100^A0N,50,50 ^FC%,{,# ^FDPrimary: %m/%d/%y^FS ^FO10,200^A0N,50,50 ^FC%,{,# ^FDSecondary: {m/{d/{y^FS ^FO10,300^A0N,50,50 ^FC%,{,# ^FDThird: #m/#d/#y^FS ^XZ</pre>	<div>Primary: 00/00/00</div> <div>Secondary: 01/01/00</div> <div>Third: 01/01/00</div>

Comments The ^FC command is ignored if the Real-Time Clock hardware is not present.

For more details on the Real Time Clock, see the *Zebra Real Time Clock Guide*.

^FD

Field Data

Description The ^FD command defines the data string for the field. The field data can be any printable character except those used as command prefixes (^ and ~).

Format ^FDa

This table identifies the parameters for this format:

Parameters	Details
a = data to be printed	<i>Accepted Values:</i> any data string up to 3072 bytes <i>Default Value:</i> none—a string of characters must be entered

Comments The ^ and ~ characters can be printed by changing the prefix characters—see [^CD ~CD on page 108](#) and [^CT ~CT on page 117](#). The new prefix characters cannot be printed.

Characters with codes above 127, or the ^ and ~ characters, can be printed using the ^FH and ^FD commands.

- ^CI13 must be selected to print a backslash (\).

For information on using soft hyphens, see [Comments on the ^FB Command on page 139](#).

^ FH

Field Hexadecimal Indicator

Description The ^FH command allows you to enter the hexadecimal value for any character directly into the ^FD statement. The ^FH command must precede each ^FD command that uses hexadecimals in its field.

Within the ^FD statement, the hexadecimal indicator must precede each hexadecimal value. The default hexadecimal indicator is _ (underscore). There must be a minimum of two characters designated to follow the underscore. The a parameter can be added when a different hexadecimal indicator is needed.

This command can be used with any of the commands that have field data (that is ^FD, ^FV (Field Variable), and ^SN (Serialized Data)).

Valid hexadecimal characters are:

0 1 2 3 4 5 6 7 8 9 A B C D E F a b c d e f

Format ^FH*a*

This table identifies the parameters for this format:

Parameters	Details
<i>a</i> = hexadecimal indicator	<i>Accepted Values:</i> any character except current format and control prefix (^ and ~ by default) <i>Default Value:</i> _ (underscore)



Example • This is an example of how to enter a hexadecimal value directly into a ^FD statement: This is an example for ascii data using ^CI0.

ZPL II CODE	GENERATED LABEL
<div><div>^XA</div><div>^FO100,100</div><div>^AD^FH</div><div>^FDTilde _7e used for HEX^FS</div><div>^XZ</div></div>	<div><div>Tilde ~ used for HEX</div></div>
<div><div>^XA</div><div>^FO100,100</div><div>^AD^FH\</div><div>^FDTilde \7E used for HEX^FS</div><div>^XZ</div></div>	<div><div>Tilde ~ used for HEX</div></div>

➔ **Examples** • These are examples of how ^FH works with UTF-8 and UTF-16BE:

UTF-8

ZPL II CODE	GENERATED LABEL
<pre>^XA ^CI28 ^LL500 ^FO100,100 ^AA,20,20 ^FH^FDU+00A1 in UTF8 = _C2_A1^FS ^XZ</pre>	<div>U+00A1 in UTF8 = ;</div>

UTF-16BE

ZPL II CODE	GENERATED LABEL
<pre>^XA ^CI29 ^LL500 ^FO100,100 ^AA,20,20 ^FH^FDU+00A1 in UTF16BE = _00_A1^FS ^XZ</pre>	<div>U+00A1 in UTF16BE = ;</div>

^FL

Font Linking



This command is available only for printers with firmware version V60.14.x, V50.14.x, or later.

Description The ^FL command provides the ability to link any TrueType font, including private character fonts, to associated fonts. If the base font does not have a glyph for the required character, the printer looks to the linked fonts for the glyph. The font links are user-definable.

The font linking remains until the link is broken or the printer is turned off. To permanently save the font linking, use the ^JUS command.



Note • For assistance in setting up the font links, please use the font wizard in ZebraNet Bridge.

Format ^FL<ext>,<base>,<link>

This table identifies the parameters for this format:

Parameters	Details
<ext>	<p>This is the fully-qualified filename of the extension. This file name does not accept wildcards.</p> <p>The supported extensions for this parameter are: .TTF and .TTE. The format for this parameter is the memory device followed by the font name with the extension, as follows:</p> <p style="text-align: center;">E:SWISS721.TTF</p>
<base>	<p>This is the filename of the base font(s) to which <ext> is associated. This can be partially or fully wild carded; all files that match the wildcard specification will have this extension associated with it.</p> <p>The filename does not have to match a file that is currently defined on the printer. A specification of *.TTF results in all *.TTF font files loaded on the printer currently or in the future to be associated with the specified <ext> font extension.</p>
<link>	<p>This is an indicator that determines if the extension is to be linked with the base, or unlinked from the base, as follows:</p> <p><i>Accepted Values:</i></p> <p>0 = <ext> is to be unlinked (disassociated) from the file(s) specified in <base></p> <p>1 = <ext> is to be linked (associated) with the file(s) specified by <base></p> <p><i>Default Value:</i> must be an accepted value or it is ignored</p>

Comments A font can have up to five fonts linked to it. The printer resident font, 0 . FNT is always the last font in the list of font links, but is not included in the five link maximum. It can also be placed anywhere in the font links list.

The default glyph prints when a glyph cannot be found in any of the fonts in the link list. The advanced layout command ^PA determines if the default glyph is a space character or the default glyph of the base font, which is typically a hollow box.

The list of font links can be printed by using the ^LF command or retrieved with the ^HT command.



Examples • These examples show the code and output for no font linking and for font linking:

No Font Linking

In the no font linking example, the Swiss721 font does not have the Asian glyphs, which is why Asian glyphs do not print.

ZPL II CODE	GENERATED LABEL
<pre>^XA^LL1200^CW1,E:SWISS721.TTF^CW2,E:ANMDJ.TTF^CI28^FS ^FO100,100^A0,50,50^FDNO FONT LINKING^FS ^FO100,300^A1,50,50^FDTEST WITH SWISS721^FS ^FO100,400^A1,50,50^FDDRAGONFLY 蜻蜓^FS ^FO100,600^A2,50,50^FDTEST WITH ANMDJ^FS ^FO100,700^A2,50,50^FDDRAGONFLY 蜻蜓^FS ^XZ</pre>	<div>NO FONT LINKING</div> <div>TEST WITH SWISS721</div> <div>DRAGONFLY</div> <div>TEST WITH ANMDJ</div> <div>DRAGONFLY 蜻蜓</div>

Font Linking

In the font linking example, this code is sent down to link the ANMDJ . TTF font to SWISS721 . TTF font:

```
^XA
^FLE:ANMDJ.TTF,E:SWISS721.TTF,1^FS
^XZ
```

When the label reprints, the Asian characters are printed using the ANMDJ . TTF font, rather than the SWISS721 . TTF font.

ZPL II CODE	GENERATED LABEL
<pre>^XA^LL1200^CW1,E:SWISS721.TTF^CW2,E:ANMDJ.TTF^CI28^FS ^FO100,100^A0,50,50^FDFONT LINKING^FS ^FO100,300^A1,50,50^FDTEST WITH SWISS721^FS ^FO100,400^A1,50,50^FDDRAGONFLY 蜻蜓^FS ^FO100,600^A2,50,50^FDTEST WITH ANMDJ^FS ^FO100,700^A2,50,50^FDDRAGONFLY 蜻蜓^FS ^XZ</pre>	<div>FONT LINKING</div> <div>TEST WITH SWISS721</div> <div>DRAGONFLY 蜻蜓</div> <div>TEST WITH ANMDJ</div> <div>DRAGONFLY 蜻蜓</div>

^FM

Multiple Field Origin Locations

Description The ^FM command allows you to control the placement of bar code symbols.

It designates field locations for the PDF417 (^B7) and MicroPDF417 (^BF) bar codes when the structured append capabilities are used. This allows printing multiple bar codes from the same set of text information.

The structured append capability is a way of extending the text printing capacity of both bar codes. If a string extends beyond what the data limitations of the bar code are, it can be printed as a series: 1 of 3, 2 of 3, 3 of 3. Scanners read the information and reconcile it into the original, unsegmented text.

The ^FM command triggers multiple bar code printing on the same label with ^B7 and ^BF only. When used with any other commands, it is ignored.

Format ^FMx1,y1,x2,y2, . . .

This table identifies the parameters for this format:

Parameters	Details
x1 = x-axis location of first symbol (in dots)	<p><i>Accepted Values:</i> 0 to 32000 e = exclude this bar code from printing</p> <p><i>Default Value:</i> a value must be specified</p>
y1 = y-axis location of first symbol (in dots)	<p><i>Accepted Values:</i> 0 to 32000 e = exclude this bar code from printing</p> <p><i>Default Value:</i> a value must be specified</p>
x2 = x-axis location of second symbol (in dots)	<p><i>Accepted Values:</i> 0 to 32000 e = exclude this bar code from printing</p> <p><i>Default Value:</i> a value must be specified</p>
y2 = y-axis location of second symbol (in dots)	<p><i>Accepted Values:</i> 0 to 32000 e = exclude this bar code from printing</p> <p><i>Default Value:</i> a value must be specified</p>
... = continuation of X,Y pairs	<p><i>Maximum number of pairs:</i> 60</p>





Example • This example shows you how to generate three bar codes with the text “Zebra Technologies Corporation strives to be...” would need to be repeated seven times, which includes 2870 characters of data (including spaces) between ^FD and ^FS:

ZPL II CODE	GENERATED LABEL
<div><div><div>^XA</div><div>^FM100,100,100,600,100,1200</div><div>^BY2,3</div><div>^B7N,5,5,9,83,N</div><div>^FDZebra Technologies Corporation strives to be the expert supplier of innovative solutions to specialty demand labeling and ticketing problems of business and government. We will attract and retain the best people who will understand our customer's needs and provide them with systems, hardware, software, consumables and service offering the best value, high quality, and reliable performance, all delivered in a timely manner</div><div>...</div><div>^FS^XZ</div></div><div><div></div><div></div><div></div></div></div>	<div><div><div></div></div><div><div></div></div><div><div></div></div></div>

1

1	The ellipse is not part of the code. It indicates that the text needs to be repeated seven times, as mentioned in the example description.
---	--

➔ **Example** • This example assumes a maximum of three bar codes, with bar code 2 of 3 omitted:

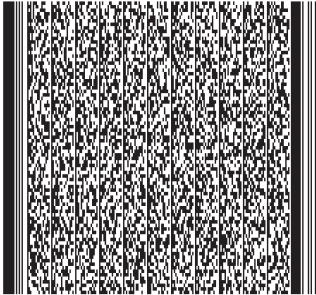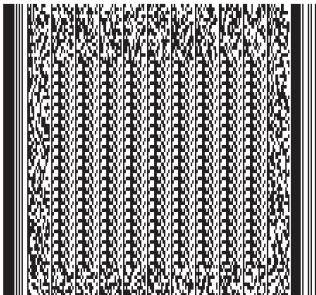ZPL II CODE	GENERATED LABEL
<div><pre>^XA ^FM100,100,e,e,100,1200 ^BY2,3 ^B7N,5,5,9,83,N ^FDZebra Technologies Corporation strives to be the expert supplier of innovative solutions to specialty demand labeling and ticketing problems of business and government. We will attract and retain the best people who will understand our customer's needs and provide them with systems, hardware, software, consumables and service offering the best value, high quality, and reliable performance, all delivered in a timely manner ... ^FS^XZ</pre></div> <div>1</div>	<div></div> <div></div>

1	The ellipse is not part of the code. It indicates that the text needs to be repeated seven times, as mentioned in the example description.
---	--

Comments Subsequent bar codes print once the data limitations of the previous bar code have been exceeded. For example, bar code 2 of 3 prints once 1 of 3 has reached the maximum amount of data it can hold. Specifying three fields does not ensure that three bar codes print; enough field data to fill three bar code fields has to be provided.

The number of the x, y pairs can exceed the number of bar codes generated. However, if too few are designated, no symbols print.

^FN

Field Number

Description The ^FN command numbers the data fields. This command is used in both ^DF (Store Format) and ^XF (Recall Format) commands.

In a stored format, use the ^FN command where you would normally use the ^FD (Field Data) command. In recalling the stored format, use ^FN in conjunction with the ^FD command.

The number of fields and data that can be stored is dependent in the available printer memory.



Note • The maximum number of ^FN commands that can be used depends on the amount of data that is placed in the fields on the label. It is recommended to use 400 or fewer fields.

Format ^FN#

This table identifies the parameters for this format:

Parameters	Details
# = number to be assigned to the field	<i>Accepted Values:</i> 0 to 9999 <i>Default Value:</i> 0

For a complete example of the ^DF and ^XF command, see [^DF and ^XF — Download format and recall format on page 11](#).

Comments

- The same ^FN value can be stored with several different fields.
- If a label format contains a field with ^FN and ^FD, the data in that field prints for any other field containing the same ^FN value.

^FO

Field Origin

Description The ^FO command sets a field origin, relative to the label home (^LH) position.

Format ^FOx,y,z

This table identifies the parameters for this format:

Parameters	Details
x = x-axis location (in dots)	<i>Accepted Values:</i> 0 to 32000 <i>Default Value:</i> 0
y = y-axis location (in dots)	<i>Accepted Values:</i> 0 to 32000 <i>Default Value:</i> 0
z = justification <div><div>.14↑</div><p>The z parameter is only supported in firmware version V60.14.x, V50.14.x, or later.</p></div>	<i>Accepted Values:</i> 0 = left justification 1 = right justification 2 = auto justification (script dependent) <i>Default Value:</i> last accepted ^FW value or ^FW default

Comments If the value entered for the x or y parameter is too high, it could position the field origin completely off the label.



This command interacts with the field direction parameter of ^FP and with the rotation parameter of ^A. For output and examples, see [Field Interactions on page 469](#).

The auto justification option might cause unexpected results if variable fields or bidirectional text are used with ^FO. For the best results with bidirectional text and/or variable fields, use either the left or right justification option.

^FP

Field Parameter

Description The ^FP command allows vertical and reverse formatting of the font field, commonly used for printing Asian fonts.

Format ^FPd,g

This table identifies the parameters for this format:

Parameters	Details
d = direction	<i>Accepted Values:</i> H = horizontal printing (left to right) V = vertical printing (top to bottom) R = reverse printing (right to left) <i>Default Value:</i> H
g = additional inter-character gap (in dots)	<i>Accepted Values:</i> 0 to 9999 <i>Default Value:</i> 0 if no value is entered

➔ **Example** • This is an example of how to implement reverse and vertical print:

ZPL II CODE	GENERATED LABEL
<pre>^XA ^FO100,50 ^FPV,10 ^AV ^FDvertical^FS ^XZ</pre>	<div>Vertical</div>
<pre>^XA ^FO350,50 ^FPR,10 ^AV ^FDreverse^FS ^XZ</pre>	<div>esrever</div>

141

For vertical and reverse printing directions, combining semantic clusters are used to place characters.

This command interacts with the justification parameters of ^FO and ^FT and with the rotation parameter of ^A. For output and examples, see [Field Interactions on page 469](#).

^FR


Field Reverse Print

Description The ^FR command allows a field to appear as white over black or black over white. When printing a field and the ^FR command has been used, the color of the output is the reverse of its background.

Format ^FR



Example • In this example, the ^GB command creates areas of black allowing the printing to appear white:

ZPL II CODE	GENERATED LABEL
<div><pre>^XA ^PR1 ^FO100,100 ^GB70,70,70,,3^FS ^FO200,100 ^GB70,70,70,,3^FS ^FO300,100 ^GB70,70,70,,3^FS ^FO400,100 ^GB70,70,70,,3^FS ^FO107,110^CF0,70,93 ^FR^FDREVERSE^FS ^XZ</pre></div>	<div></div>

Comments The ^FR command applies to only one field and has to be specified each time. When multiple ^FR commands are going to be used, it might be more convenient to use the ^LR command.

^FS

Field Separator

Description The ^FS command denotes the end of the field definition. Alternatively, ^FS command can also be issued as a single ASCII control code SI (Control-O, hexadecimal 0F).

Format ^FS

^FT

Field Typeset

Description The ^FT command sets the field position, relative to the home position of the label designated by the ^LH command. The typesetting origin of the field is fixed with respect to the contents of the field and does not change with rotation.



Note • The ^FT command is capable of concantination of fields.

Format ^FTx, y, z

This table identifies the parameters for this format:

Parameters	Details
x = x-axis location (in dots)	<i>Accepted Values:</i> 0 to 32000 <i>Default Value:</i> position after last formatted text field
y = y-axis location (in dots)	<i>Accepted Values:</i> 0 to 32000 <i>Default Value:</i> position after last formatted text field
z = justification	<i>Accepted Values:</i> 0 = left justification 1 = right justification 2 = auto justification (script dependent) <i>Default Value:</i> last accepted ^FW value or ^FW default The auto justification option may cause unexpected results if variable fields or bidirectional text are used with ^FT. For best results with bidirectional text and/or variable fields, use either the left of right justification options.

.141


The z parameter is only supported in firmware version V60.14.x, V50.14.x, or later.

Table 12 • Typeset Justification

Left Justified	Text	For examples, see Field Interactions on page 469 .
	Bar Codes	Origin is base of bar code, at left edge
	Graphic Boxes	Origin is bottom-left corner of the box
	Images	Origin is bottom-left corner of the image area
Right Justified	Text	For examples, see Field Interactions on page 469 .
	Bar Codes	Origin is base of bar code, at right edge
	Graphic Boxes	Origin is bottom-right corner of the box
	Images	Origin is bottom-right corner of the image area



Example • This is an example of the ^FT command and concatenation:

ZPL II CODE	GENERATED LABEL
<pre>^XA ^FT10,200^A0N,30,20^FDACME ^FS ^FT^GS^FDC^FS ^FT^A0N,30,20^FDSummer ^FS ^FT^A0N,60,50^FDClearance ^FS ^FT^A0N,120,100^FDSale ^FS ^XZ</pre>	

When a coordinate is missing, the position following the last formatted field is assumed. This *remembering* simplifies field positioning with respect to other fields. Once the first field is positioned, other fields follow automatically.

There are several instances where using the ^FT command without specifying x and y parameters is not recommended:

- when positioning the first field in a label format
- at any time with the ^FN (Field Number) command
- following an ^SN (Serialization Data) command
- variable data
- bidirectional text



The right typeset justified is available only for printers with firmware version V60.14.x, V50.14.x, or later.

This command interacts with the field direction parameters of ^FP and with the rotation parameter of ^A. For output and code examples, see [Field Interactions on page 469](#)

^FV

Field Variable

Description ^FV replaces the ^FD (field data) command in a label format when the field is variable.

Format ^FVa

This table identifies the parameters for this format:

Parameters	Details
a = variable field data to be printed	<i>Accepted Values:</i> 0 to 3072 byte string <i>Default Value:</i> if no data is entered, the command is ignored

➔ **Example** • This is an example of how to use the ^MC and ^FV command:

ZPL II CODE	GENERATED LABEL
<pre>^XA ^FO40,40 ^GB300,203,8^FS ^FO55,60^CF0,25 ^FVVARIABLE DATA #1^FS ^FO80,150 ^FDFIXED DATA^FS ^MCN ^XZ</pre>	
<pre>^XA ^FO55,60^CF0,25 ^FVVARIABLE DATA #2^FS ^MCY ^XZ</pre>	

Comments ^FV fields are always cleared after the label is printed. ^FD fields are not cleared.




Field Orientation

Description The ^FW command sets the default orientation for all command fields that have an orientation (rotation) parameter and sets the default justification for all commands with a justification parameter. Fields can be rotated 0, 90, 180, or 270 degrees clockwise by using this command. Justification can be left, right, or auto.

The ^FW command affects only fields that follow it. Once you have issued a ^FW command, the setting is retained until you turn off the printer or send a new ^FW command to the printer.

Format ^FW r, z

This table identifies the parameters for this format:

Parameters	Details
r = rotate field	<i>Accepted Values:</i> N = normal R = rotated 90 degrees I = inverted 180 degrees B = bottom-up 270 degrees, read from bottom up <i>Initial Value at Power-up:</i> N
z = justification  The z parameter is available only with printers with firmware version V60.14.x, V50.14.x, or later.	<i>Accepted Values:</i> 0 = left justification 1 = right justification 2 = auto justification (script dependent) <i>Default Value:</i> auto for ^TB and left for all other commands



Example • This example shows how ^FW rotation works in conjunction with ^FO. In this example note that:

- the fields using A0N print the field in normal rotation
- the fields with no rotation indicated (A0) follow the rotation used in the ^FW command (^FWR).

ZPL II CODE	GENERATED LABEL
<pre>^XA ^FWR ^FO150,100^A0N,70,60^FDZebra Technologies^FS ^FO50,75^A0,70,60^FD0123456789^FS ^FO150,200^A0N,70,60^FD333 Corporate Woods Parkway^FS ^FO900,75^A0,70,60^FDXXXXXXXXXX^FS ^XZ</pre>	<div><div>0123456789</div><div>Zebra Technologies</div><div>333 Corporate Woods Parkway</div><div>XXXXXXXXXX</div></div>

Comments ^FW affects only the orientation in commands where the rotation parameter has not been specifically set. If a command has a specific rotation parameter, that value is used.



^FW affects only the justification in commands where the parameter has not been set. If a command has a specific justification parameter that value is used .

^FX

Comment

Description The ^FX command is useful when you want to add *non-printing* informational comments or statements within a label format. Any data after the ^FX command up to the next caret (^) or tilde (~) command does not have any effect on the label format. Therefore, you should avoid using the caret (^) or tilde (~) commands within the ^FX statement.

Format ^FXc

This table identifies the parameters for this format:

Parameters	Details
c = non printing comment	Creates a non-printable comment.

→

Example • This is an example of how to use the ^FX command effectively:

ZPL II CODE

^XA

^LH100,100^FS

^FXSHIPPING LABEL^FS

^FO10,10^GB470,280,4^FS

^FO10,190^GB470,4,4^FS

^FO10,80^GB240,2,2^FS

^FO250,10^GB2,100,2^FS

^FO250,110^GB226,2,2^FS

^FO250,60^GB226,2,2^FS

^FO156,190^GB2,95,2^FS

^FO312,190^GB2,95,2^FS

^XZ

GENERATED LABEL

Comments Correct usage of the ^FX command includes following it with the ^FS command.

^GB

Graphic Box

Description The ^GB command is used to draw boxes and lines as part of a label format. Boxes and lines are used to highlight important information, divide labels into distinct areas, or to improve the appearance of a label. The same format command is used for drawing either boxes or lines.

Format ^GBw,h,t,c,r

This table identifies the parameters for this format:

Parameters	Details
w = box width (in dots)	<i>Accepted Values:</i> value of t to 32000 <i>Default Value:</i> value used for thickness (t) or 1
h = box height (in dots)	<i>Accepted Values:</i> value of t to 32000 <i>Default Value:</i> value used for thickness (t) or 1
t = border thickness (in dots)	<i>Accepted Values:</i> 1 to 32000 <i>Default Value:</i> 1
c = line color	<i>Accepted Values:</i> B = black W = white <i>Default Value:</i> B
r = degree of corner-rounding	<i>Accepted Values:</i> 0 (no rounding) to 8 (heaviest rounding) <i>Default Value:</i> 0

For the w and h parameters, keep in mind that printers have a default of 6, 8, 12, or 24 dots/millimeter. This comes out to 153, 203, 300, or 600 dots per inch. To determine the values for w and h, calculate the dimensions in millimeters and multiply by 6, 8, 12, or 24.

If the width and height are not specified, you get a solid box with its width and height as specified by value t.

The roundness-index is used to determine a rounding-radius for each box. Formula:


$$\text{rounding-radius} = (\text{rounding-index} / 8) * (\text{shorter side} / 2)$$

where the shorter side is the lesser of the width and height (after adjusting for minimum and default values).




Examples • Here are a few examples of graphic boxes:


Width: 1.5 inch; Height: 1 inch; Thickness: 10; Color: default; Rounding: default

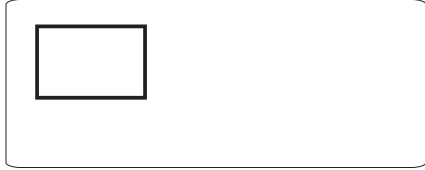ZPL II CODE	GENERATED LABEL
<pre> ^XA ^FO50,50 ^GB300,200,10^FS ^XZ </pre>	


Width: 0 inch; Height: 1 inch; Thickness: 20; Color: default; Rounding: default:

ZPL II CODE	GENERATED LABEL
<pre> ^XA ^FO50,50 ^GB0,203,20^FS ^XZ </pre>	

Width: 1 inch; Height: 0 inch; Thickness: 30; Color: default; Rounding: default

ZPL II CODE	GENERATED LABEL
<pre> ^XA ^FO50,50 ^GB203,0,20^FS ^XZ </pre>	

Width: 1.5 inch; Height: 1 inch; Thickness: 10; Color: default; Rounding: 5

ZPL II CODE	GENERATED LABEL
<pre> ^XA ^FO50,50 ^GB300,200,10,,5^FS ^XZ </pre>	

^GC

Graphic Circle

Description The ^GC command produces a circle on the printed label. The command parameters specify the diameter (width) of the circle, outline thickness, and color. Thickness extends inward from the outline.

Format ^GCd,t,c

This table identifies the parameters for this format:

Parameters	Details
d = circle diameter (in dots)	<i>Accepted Values:</i> 3 to 4095 (larger values are replaced with 4095) <i>Default Value:</i> 3
t = border thickness (in dots)	<i>Accepted Values:</i> 2 to 4095 <i>Default Value:</i> 1
c = line color	<i>Accepted Values:</i> B = black W = white <i>Default Value:</i> B



Example • This is an example of how to create a circle on the printed label:

ZPL II CODE	GENERATED LABEL
<pre>^XA ^F050,50 ^GC250,10,B^FS ^XZ</pre>	

^GD**Graphic Diagonal Line**

Description The ^GD command produces a straight diagonal line on a label. This can be used in conjunction with other graphic commands to create a more complex figure.

Format ^GDw,h,t,c,o

This table identifies the parameters for this format:

Parameters	Details
w = box width (in dots)	<i>Accepted Values:</i> 3 to 32000 <i>Default Value:</i> value of t (thickness) or 1
h = box height (in dots)	<i>Accepted Values:</i> 3 to 32000 <i>Default Value:</i> value of t (thickness) or 1
t = border thickness (in dots)	<i>Accepted Values:</i> 1 to 32000 <i>Default Value:</i> 1
c = line color	<i>Accepted Values:</i> B = black W = white <i>Default Value:</i> B
o = orientation (direction of the diagonal)	<i>Accepted Values:</i> R (or /) = right-leaning diagonal L (or \) = left-leaning diagonal <i>Default Value:</i> R



Example • This is an example of how to create a diagonal line connecting one corner with the opposite corner of a box on a printed label:

ZPL II CODE	GENERATED LABEL
<pre>^XA ^FO150,100 ^GB350,203,10^FS ^FO155,110 ^GD330,183,10,,R^FS ^XZ</pre>	

^GE

Graphic Ellipse

Description The ^GE command produces an ellipse in the label format.

Format ^GEw,h,t,c

This table identifies the parameters for this format:

Parameters	Details
w = ellipse width (in dots)	<i>Accepted Values:</i> 3 to 4095 (larger values are replaced with 4095) <i>Default Value:</i> value used for thickness (t) or 1
h = ellipse height (in dots)	<i>Accepted Values:</i> 3 to 4095 <i>Default Value:</i> value used for thickness (t) or 1
t = border thickness (in dots)	<i>Accepted Values:</i> 2 to 4095 <i>Default Value:</i> 1
c = line color	<i>Accepted Values:</i> B = black W = white <i>Default Value:</i> B



Example • This is an example of how to create a ellipse on a printed label:

ZPL II CODE

```
^XA
^FO100,100
^GE300,100,10,B^FS
^XZ
```

GENERATED LABEL

^GF

Graphic Field

Description The ^GF command allows you to download graphic field data directly into the printer's bitmap storage area. This command follows the conventions for any other field, meaning a field orientation is included. The graphic field data can be placed at any location within the bitmap space.

Format ^GFa,b,c,d,data

This table identifies the parameters for this format:

Parameters	Details
a = compression type	<i>Accepted Values:</i> A = ASCII hexadecimal (follows the format for other download commands) B = binary (data sent after the c parameter is strictly binary) C = compressed binary (data sent after the c parameter is in compressed binary format. The data is compressed on the host side using Zebra's compression algorithm. The data is then decompressed and placed directly into the bitmap.) <i>Default Value:</i> A
b = binary byte count	<i>Accepted Values:</i> 1 to 99999 This is the total number of bytes to be transmitted for the total image or the total number of bytes that follow parameter d. For ASCII download, the parameter should match parameter c. Out-of-range values are set to the nearest limit. <i>Default Value:</i> command is ignored if a value is not specified
c = graphic field count	<i>Accepted Values:</i> 1 to 99999 This is the total number of bytes comprising the graphic format (width x height), which is sent as parameter d. Count divided by bytes per row gives the number of lines in the image. This number represents the size of the image, not necessarily the size of the data stream (see d). <i>Default Value:</i> command is ignored if a value is not specified

Parameters	Details
d = bytes per row	<p><i>Accepted Values:</i> 1 to 99999</p> <p>This is the number of bytes in the downloaded data that comprise one row of the image.</p> <p><i>Default Value:</i> command is ignored if a value is not specified</p>
data = data	<p><i>Accepted Values:</i></p> <p>ASCII hexadecimal data: 00 to FF</p> <p>A string of ASCII hexadecimal numbers, two digits per image byte. CR and LF can be inserted as needed for readability. The number of two-digit number pairs must match the above count. Any numbers sent after count is satisfied are ignored. A comma in the data pads the current line with 00 (white space), minimizing the data sent. ~DN or any caret or tilde character prematurely aborts the download.</p> <p>Binary data: Strictly binary data is sent from the host. All control prefixes are ignored until the total number of bytes needed for the graphic format is sent.</p>

➔ **Example •** This example downloads 8,000 total bytes of data and places the graphic data at location 100,100 of the bitmap. The data sent to the printer is in ASCII form.

```
^FO100,100^GFA,8000,8000,80,ASCII data
```

➔ **Example •** This example downloads 8,000 total bytes of data and places the graphic data at location 100,100 of the bitmap. The data sent to the printer is in binary form.

```
^FO100,100^GFB,8000,8000,80,Binary data
```

^GS

Graphic Symbol

Description The ^GS command enables you to generate the registered trademark, copyright symbol, and other symbols.

Format ^GS \circ , h, w

This table identifies the parameters for this format:

Parameters	Details
\circ = field orientation	<i>Accepted Values:</i> N = normal R = rotate 90 degrees clockwise I = inverted 180 degrees B = bottom-up, 270 degrees <i>Default Value:</i> N or last ^FW value
h = character height proportional to width (in dots)	<i>Accepted Values:</i> 0 to 32000 <i>Default Value:</i> last ^CF value
w = character width proportional to height (in dots)	<i>Accepted Values:</i> 0 to 32000 <i>Default Value:</i> last ^CF value



Example • Use the ^GS command followed by ^FD and the appropriate character (A through E) within the field data to generate the desired character:

ZPL II CODE	GENERATED LABEL
<pre>^XA^CFD ^FO50,50 ^FDZEBRA PROGRAMMING^FS ^FO50,75 ^FDLANGUAGE II (ZPL II)^FS ^FO280,75 ^GS^FDC^FS ^XZ</pre>	

A = ® (Registered Trade Mark)

B = © (Copyright)

C = ™ (Trade Mark)

D = UL (Underwriters Laboratories approval)

E = CSA (Canadian Standards Association approval)

~HB

Battery Status

Description When the ~HB command is sent to the printer, a data string is sent back to the host. The string starts with an <STX> control code sequence and terminates by an <ETX><CR><LF> control code sequence.



Important • This command only responds to mobile printers.

Format ~HB

Parameters: when the printer receives the command, it returns:

<STX>bb.bb, hh.hh, bt<ETX><CR><LF>

<STX>	=	ASCII start-of-text character
bb.bb	=	current battery voltage reading to the nearest 1/4 volt
hh.hh	=	current head voltage reading to the nearest 1/4 volt
bt	=	battery temperature in Celsius
<ETX>	=	ASCII end-of-text character
<CR>	=	ASCII carriage return
<LF>	=	ASCII line feed character

Comments This command is used for the power-supply battery of the printer and should not be confused with the battery backed-up RAM.

~HD

Head Diagnostic

Description The ~HD command echoes printer status information that includes the power supply and head temperature using the terminal emulator.

Format ~HD



Example • This is an example of the ~HD command:

```
Head Temp = 29
Ambient Temp = 00
Head Test = Passed
Darkness Adjust = 23
Print Speed = 2
Slew Speed = 6
Backfeed Speed = 2
Static_pitch_length = 0521
Dynamic_pitch_length = 0540
Max_dynamic_pitch_length = 0540
Min_dynamic_pitch_length = 0537
COMMAND PFX = ~ : FORMAT PFX = ^ : DELIMITER = ,
P30 INTERFACE = None
P31 INTERFACE = None
P32 INTERFACE = Front Panel
P33 INTERFACE = None
P34 INTERFACE = None
P35 INTERFACE = None
Dynamic_top_position = 0008
No ribbon A/D = 0000
```

Revision 5

^HF

Host Format

Description The ^HF command sends stored formats to the host.

Format ^HF $\text{d}, \text{o}, \text{x}$

This table identifies the parameters for this format:

Parameters	Details
d = device to recall image	<i>Accepted Values:</i> R:, E:, B:, and A: <i>Default Value:</i> R:
o = image name	<i>Accepted Values:</i> 1 to 8 alphanumeric characters <i>Default Value:</i> if a name is not specified, UNKNOWN is used
x = extension	<i>Fixed Value:</i> .ZPL



Example • This example shows the sequence and results.

Using a terminal emulator, you download this code to the printer:

```
^XA
^DFB:FILE1.ZPL
^FO100,100^A0,100
^FDTEST^FS
^XZ
```

Then you send this code to the printer:

```
^XA
^HFB:FILE1.ZPL
^XZ
```

The terminal emulator returns this code:

```
^XA^DFFILE1,
^FO100,100^A0,100^FDTEST^FS
^XZ
```

^HG

Host Graphic

Description The ^HG command is used to upload graphics to the host. The graphic image can be stored for future use, or it can be downloaded to any Zebra printer.

Format ^HGd:○.x

This table identifies the parameters for this format:

Parameters	Details
d = device location of object	<i>Accepted Values:</i> R:, E:, B:, and A: <i>Default Value:</i> search priority
○ = object name	<i>Accepted Values:</i> 1 to 8 alphanumeric characters <i>Default Value:</i> if a name is not specified, UNKNOWN is used
x = extension	<i>Fixed Value:</i> .GRF

Comments For more information on uploading graphics, see [^HY](#) on page 185.

^HH

Configuration Label Return

Description The ^HH command echoes printer configuration back to the host, using a terminal emulator.

Format ^HH



Example • This is an example of the ^HH command:

+10	DARKNESS
+000	TEAR OFF
TEAR OFF	PRINT MODE
NON-CONTINUOUS	MEDIA TYPE
WEB	SENSOR TYPE
DIRECT-THERMAL	PRINT METHOD
050 6/8 MM	PRINT WIDTH
0622	LABEL LENGTH
22.0IN 557MM	MAXIMUM LENGTH
9600	BAUD
8 BITS	DATA BITS
NONE	PARITY
XON/XOFF	HOST HANDSHAKE
NONE	PROTOCOL
000	NETWORK ID
NORMAL MODE	COMMUNICATIONS
<~> 7EH	CONTROL PREFIX
<^> 5EH	FORMAT PREFIX
<.> 2CH	DELIMITER CHAR
ZPL II	ZPL MODE
NO MOTION	MEDIA POWER UP
NO MOTION	HEAD CLOSE
DEFAULT	BACKFEED
+000	LABEL TOP
+0000	LEFT POSITION
026	WEB S.
068	MEDIA S.
050	MARK S.
001	MARK MED S.
CS	MODES ENABLED
--	MODES DISABLED
864 8/MM FULL	RESOLUTION
U32.10.2 <-	FIRMWARE
U2.2.6.98.A	HARDWARE ID
CUSTOMIZED	CONFIGURATION
1024.....R:	RAM
8192.....B:	MEMORY CARD
0768.....E:	ONBOARD FLASH
NONE	FORMAT CONVERT
NONE	OPTION
05/14/03	RTC DATE
02:23	RTC TIME
DYNAMIC	IP RESOLUTION
ALL	IP PROTOCOL
010.003.005.090	IP ADDRESS
255.255.255.000	SUBNET MASK
010.003.005.001	DEFAULT GATEWAY

~HI

Host Identification

Description The ~HI command is designed to be sent from the host to the Zebra printer to retrieve information. Upon receipt, the printer responds with information on the model, software version, dots-per-millimeter setting, memory size, and any detected objects.

Format ~HI

When the printer receives this command, it returns:

XXXXXX,V1.0.0,dpm,000KB,X

XXXXXX = model of Zebra printer

V1.0.0 = version of software

dpm = dots/mm

6, 8, 12, or 24 dots/mm printheads

000KB = memory

512KB = 1/2 MB

1024KB = 1 MB

2048KB = 2 MB

4096KB = 4 MB

8192KB = 8 MB

x = recognizable objects

only options specific to printer are shown (cutter, options, et cetera.)

~HM

Host RAM Status

Description Sending ~HM to the printer immediately returns a memory status message to the host. Use this command whenever you need to know the printer’s RAM status.

When ~HM is sent to the Zebra printer, a line of data containing information on the total amount, maximum amount, and available amount of memory is sent back to the host.

Format ~HM



Example • This example shows when the ~HM is sent to the printer, a line of data containing three numbers are sent back to the host. Each set of numbers is identified and explained in the table that follows:

1 — 3584, 3586, 3586 — 3

2

1	The total amount of RAM (in kilobytes) installed in the printer. In this example, the printer has 1024K RAM installed.
2	The maximum amount of RAM (in kilobytes) available to the user. In this example, the printer has a maximum of 780K RAM available.
3	The amount of RAM (in kilobytes) currently available to the user. In this example, there is 780K of RAM in the printer currently available to the user.

Comments Memory taken up by bitmaps is included in the currently available memory value (due to ^MCN).

Downloading a graphic image, fonts, or saving a bitmap affects only the amount of RAM. The total amount of RAM and maximum amount of RAM does not change after the printer is turned on.

~HS

Host Status Return

Description When the host sends ~HS to the printer, the printer sends three data strings back. Each string starts with an <STX> control code and is terminated by an <ETX><CR><LF> control code sequence. To avoid confusion, the host prints each string on a separate line.



Note • When a ~HS command is sent, the printer will not send a response to the host if the printer is in one of these conditions:

- MEDIA OUT
- RIBBON OUT
- HEAD OPEN
- REWINDER FULL
- HEAD OVER-TEMPERATURE

String 1

<STX>aaa,b,c,dddd,eee,f,g,h,iii,j,k,l<ETX><CR><LF>

aaa	=	communication (interface) settings*
b	=	paper out flag (1 = paper out)
c	=	pause flag (1 = pause active)
dddd	=	label length (value in number of dots)
eee	=	number of formats in receive buffer
f	=	<i>buffer full</i> flag (1 = receive buffer full)
g	=	<i>communications diagnostic mode</i> flag (1 = diagnostic mode active)
h	=	<i>partial format</i> flag (1 = partial format in progress)
iii	=	unused (always 000)
j	=	<i>corrupt RAM</i> flag (1 = configuration data lost)
k	=	temperature range (1 = under temperature)
l	=	temperature range (1 = over temperature)

* This string specifies the printer's baud rate, number of data bits, number of stop bits, parity setting, and type of handshaking. This value is a three-digit decimal representation of an eight-bit binary number. To evaluate this parameter, first convert the decimal number to a binary number.

The nine-digit binary number is read according to this table:

aaa = a ⁸ a ⁷ a ⁶ a ⁵ a ⁴ a ³ a ² a ¹ a ⁰	
a ⁷ = Handshake 0 = Xon/Xoff 1 = DTR	a ⁸ a ² a ¹ a ⁰ = Baud 0 000 = 110 0 001 = 300 0 010 = 600 0 011 = 1200 0 100 = 2400 0 101 = 4800 0 110 = 9600 0 111 = 19200 1 000 = 28800 <i>(available only on certain printer models)</i> 1 001 = 38400 <i>(available only on certain printer models)</i> 1 010 = 57600 <i>(available only on certain printer models)</i> 1 011 = 14400
a ⁶ = Parity Odd/Even 0 = Odd 1 = Even	
a ⁵ = Disable/Enable 0 = Disable 1 = Enable	
a ⁴ = Stop Bits 0 = 2 Bits 1 = 1 Bit	
a ³ = Data Bits 0 = 7 Bits 1 = 8 Bits	

String 2

<STX>mmm,n,o,p,q,r,s,t,uuuuuuu,v,www<ETX><CR><LF>

mmm	= function settings*
n	= unused
o	= <i>head up</i> flag (1 = head in up position)
p	= <i>ribbon out</i> flag (1 = ribbon out)
q	= <i>thermal transfer mode</i> flag (1 = Thermal Transfer Mode selected)
r	= Print Mode 0 = Rewind 1 = Peel-Off 2 = Tear-Off 3 = Cutter 4 = Applicator
s	= print width mode
t	= <i>label waiting</i> flag (1 = label waiting in Peel-off Mode)
uuuuuu	= labels remaining in batch
uu	
v	= <i>format while printing</i> flag (always 1)
www	= number of graphic images stored in memory

* This string specifies the printer's media type, sensor profile status, and communication diagnostics status. As in String 1, this is a three-digit decimal representation of an eight-bit binary number. First, convert the decimal number to a binary number.

The eight-digit binary number is read according to this table:

mmm = m7 m6 m5 m4 m3 m2 m1 m0							
m7 = Media Type 0 = Die-Cut 1 = Continuous				m4 m3 m2 m1 = Unused 0 = Off 1 = On			
m6 = Sensor Profile 0 = Off				m0 = Print Mode 0 = Direct Thermal 1 = Thermal Transfer			
m5 = Communications Diagnostics 0 = Off 1 = On							

String 3

<STX>xxxx, y<ETX><CR><LF>

xxxx	=	password
y	=	0 (static RAM not installed) 1 (static RAM installed)

^

HT

Host Linked Fonts List



This command is available only for printers with firmware version V60.14.x, V50.14.x, or later.

Description The ^HT command receives the complete list of font links over a communication port.



Example • The SWISS . 721 . TTF is the base font, ANMDJ . TTF is the first linked font, and MSGOTHIC . TTF is the second linked font:

ZPL II CODE	DATA RETURNED
<div><div>^XA</div><div>^HT</div><div>^XZ</div></div>	<div>LIST OF FONT LINKS</div> <div>E:SWISS721.TTF</div> <div>E:ANMDJ.TTF</div> <div>E:MSGOTHIC.TTF</div>

This is the code that was used to establish the font links:

^XA

^FLE:ANMDJ.TTF,E:SWISS721.TTF,1^FS

^FLE:MSGOTHIC.TTF,E:SWISS721.TTF,1^FS

^XZ

~HU

Return ZebraNet Alert Configuration

Description This command returns the table of configured ZebraNet Alert settings to the host.

Format ~HU



Example • If the ~HU command is sent to the printer with existing Alert messages set to go to e-mail and SNMP traps, the data returned would look something like the information below. See [^SX on page 280](#) for complete information on the individual parameter settings.

```
B, C, Y, Y, ADMIN@COMPANY.COM, 0
J, F, Y, Y, , 0
C, F, Y, Y, , 0
D, F, Y, Y, , 0
E, F, Y, N, , 0
F, F, Y, N, , 0
H, C, Y, N, ADMIN@COMPANY.COM, 0
N, C, Y, Y, ADMIN@COMPANY.COM, 0
O, C, Y, Y, ADMIN@COMPANY.COM, 0
P, C, Y, Y, ADMIN@COMPANY.COM, 0
```



Important • If there are no ^SX (alerts) set, the printer will not respond to the ~HU command.

The first line indicates that condition B (ribbon out) is routed to destination C (e-mail address).

The next two characters, Y and Y, indicate that the *condition set* and *condition clear* options have been set to yes.

The following entry is the destination that the Alert e-mail should be sent to; in this example it is admin@company.com.

The last figure seen in the first line is 0, which is the port number.

Each line shows the settings for a different Alert condition as defined in the ^SX command.

^HV

Host Verification

Description This command is used to return data from specified fields, along with an optional ASCII header, to the host computer. The command can be used with any field that has been assigned a number with the ^RT command or the ^FN and ^RF commands.

Format ^HV#, n, h

This table identifies the parameters for this format:

Parameters	Details
# = field number specified with another command	The value assigned to this parameter should be the same as the one used in another command. <i>Accepted Values:</i> 0 to 9999 <i>Default Value:</i> 0
n = number of bytes to be returned	<i>Accepted Values:</i> 1 to 256 <i>Default Value:</i> 64
h = header	Header to be returned with the data. <i>Accepted Values:</i> 0 to 3072 bytes <i>Default Value:</i> no header

^

HW

Host Directory List

Description ^HW is used to transmit a directory listing of objects in a specific memory area (storage device) back to the host device. This command returns a formatted ASCII string of object names to the host.

Each object is listed on a line and has a fixed length. The total length of a line is also fixed. Each line listing an object begins with the asterisk (*) followed by a blank space. There are eight spaces for the object name, followed by a period and three spaces for the extension. The extension is followed by two blank spaces, six spaces for the object size, two blank spaces, and three spaces for option flags (reserved for future use). The format looks like this:

```
<STX><CR><LF>
DIR R: <CR><LF>
*Name.ext(2sp.)(6 obj. sz.)(2sp.)(3 option flags)
*Name.ext(2sp.)(6 obj. sz.)(2sp.)(3 option flags)
<CR><LF>
-xxxxxxx bytes free
<CR><LF>
<ETX>
<STX> = start of text
<CR><LR> = carriage return/line feed
<ETX> = end on text
```

The command might be used in a stand-alone file to be issued to the printer at any time. The printer returns the directory listing as soon as possible, based on other tasks it might be performing when the command is received.

This command, like all ^ (caret) commands, is processed in the order that it is received by the printer.

Format ^HWd:○.x

This table identifies the parameters for this format:

Parameters	Details
d = location to retrieve object listing	<i>Accepted Values:</i> R:, E:, B:, A: and Z: <i>Default Value:</i> R:
○ = object name	<i>Accepted Values:</i> 1 to 8 alphanumeric characters <i>Default Value:</i> asterisk (*). A question mark (?) can also be used.
x = extension	<i>Accepted Values:</i> any extension conforming to Zebra conventions <i>Default Value:</i> asterisk (*). A question mark (?) can also be used.

➔ **Example •** Listed is an example of the ^HW command to retrieve from information R:

```
^XA
^HWR:*. *
^XZ
```

➔ **Example •** The printer returned this information as the Host Directory Listing: -DIR
R:*. *

```
*R:ARIALN1.FNT 49140
*R:ARIALN2.FNT 49140
*R:ARIALN3.FNT 49140
*R:ARIALN4.FNT 49140
*R:ARIALN.FNT 49140
*R:ZEBRA.GRF 8420
-794292 bytes free R:RAM
```

^HY**Upload Graphics**

Description The ^HY command is an extension of the ^HG command. ^HY is used to upload graphic objects from the printer in any supported format.

Format ^HYd:○.x

This table identifies the parameters for this format:

Parameters	Details
d = location of object	<i>Accepted Values:</i> R:, E:, B:, and A: <i>Default Value:</i> search priority
○ = object name	<i>Accepted Values:</i> 1 to 8 alphanumeric characters <i>Default Value:</i> an object name must be specified
x = extension	<i>Accepted Values:</i> G = .GRF (raw bitmap format) P = .PNG (compressed bitmap format) <i>Default Value:</i> format of stored image

Comments The image is uploaded in the form of a ~DY command. The data field of the returned ~DY command is always encoded in the ZB64 format.

^HZ

Display Description Information

Description The ^HZ command is used for returning printer description information in XML format. The printer returns information on format parameters, object directories, individual object data, and print status information.

Format ^HZb

This table identifies the parameters for this format:

Parameters	Details
b = display description to return	<p><i>Accepted Values:</i></p> <ul style="list-style-type: none">a = display all informationf = display printer format setting informationl = display object directory listing informationo = display individual object data informationr = display printer status information <p><i>Default Value:</i> if the value is missing or invalid, the command is ignored</p>

Format ^HZO,d:o.x,l

This table identifies the parameters for this format:

Parameters	Details
d = location of stored object	<p><i>Accepted Values:</i> R:, E:, B:, and A:</p> <p><i>Default Value:</i> R:</p>
o = object name	<p><i>Accepted Values:</i> 1 to 8, or 1 to 16 alphanumeric characters based on parameter 1.</p> <p><i>Default Value:</i> if a name is not specified, UNKNOWN is used.</p>

Parameters	Details
x = extension	Supported extensions for objects (parameter o) include: .FNT — font .GRF — graphic .PNG — compressed graphic .ZPL — stored format .DAT — encoding table .ZOB — downloadable object .STO — Alert data file
l = long filename support	<i>Accepted Values:</i> Y = Yes If Y, the object data stores the filename as 16 characters. The data is only compatible with firmware version V60.13.0.5, or later. N = No If N, the object data stores the filename as 8 characters. The data is forward and backward compatible with all versions of firmware. <i>Default Value:</i> N

➔ **Example •** This example shows the object data information for the object SAMPLE.GRF located on R:.

```

^XA
^HZO,R: SAMPLE.GRF
^XZ

```

^ID

Object Delete

Description The ^ID command deletes objects, graphics, fonts, and stored formats from storage areas. Objects can be deleted selectively or in groups. This command can be used within a printing format to delete objects before saving new ones, or in a stand-alone format to delete objects.

The image name and extension support the use of the asterisk (*) as a wild card. This allows you to easily delete a selected groups of objects.

Format ^IDd:o.x

This table identifies the parameters for this format:

Parameters	Details
d = location of stored object	<i>Accepted Values:</i> R:, E:, B:, and A: <i>Default Value:</i> R:
o = object name	<i>Accepted Values:</i> any 1 to 8 character name <i>Default Value:</i> if a name is not specified, UNKNOWN is used
x = extension	<i>Accepted Values:</i> any extension conforming to Zebra conventions <i>Default Value:</i> .GRF



Example • To delete stored formats from DRAM:

```
^XA
^IDR:*.ZPL^FS
^XZ
```



Example • To delete formats and images named SAMPLE from DRAM, regardless of the extension:

```
XA
^IDR:SAMPLE.*^FS
^XZ
```

→ **Example** • To delete the image SAMPLE1 .GRF prior to storing SAMPLE2 .GRF:

```
^XA
^FO25,25^AD,18,10
^FDDelete^FS
^FO25,45^AD,18,10
^FDthen Save^FS
^IDR:SAMPLE1.GRF^FS
^ISR:SAMPLE2.GRF^FS^XZ
```

→ **Example** • In this the * is a wild card, indicating that all objects with the .GRF extension are deleted:

```
^XA
^IDR:* .GRF^FS
^XZ
```

Comments When an object is deleted from R :, the object can no longer be used and memory is available for storage. This applies only to R : memory. With the other memory types (A :, B :, E :) the deleted object is no longer available. The memory space recovers when an automatic defragmentation or initialization occurs.

The ^ID command also frees up the uncompressed version of the object in DRAM.

If the name is specified as * .ZOB, all downloaded bar code fonts (or other objects) are deleted.

If the named downloadable object cannot be found in the R :, E :, B :, and A : device, the ^ID command is ignored.

^IL

Image Load

Description The ^IL command is used at the beginning of a label format to load a stored image of a format and merge it with additional data. The image is always positioned at ^FO0,0.



Important • See ^IS on page 192.

Using this technique to overlay the image of constant information with variable data greatly increases the throughput of the label format.

Format ^ILd: o.x

This table identifies the parameters for this format:

Parameters	Details
d = location of stored object	<i>Accepted Values:</i> R:, E:, B:, and A: <i>Default Value:</i> R:
o = object name	<i>Accepted Values:</i> 1 to 8 alphanumeric characters <i>Default Value:</i> if a name is not specified, UNKNOWN is used
x = extension	<i>Fixed Value:</i> .GRF



Example • This example recalls the stored image SAMPLE2.GRF from DRAM and overlays it with the additional data. The graphic was stored using the ^IS command. For the stored label format, see the ^IS on page 192 command.

ZPL II CODE

```
^XA
^ILR: SAMPLE2.GRF^FS
^CFD,36,20
^FO15,210
^FD900123^FS
^FO218,210
^FDLINE 12^FS
^FO15,360^AD
^FDZEBRA THERMAL^FS
^FO15,400^AD
^FDTRANSFER PRINTER^FS
^FO15,540
^FD54321^FS
^FO220,530
^FDZ58643^FS
^FO15,670^A0,27,18
^FDTesting Stored Graphic^FS
^FO15,700^A0,27,18
^FDLabel Formats!!^FS
^XZ
```

GENERATED LABEL

ZEBRA

TECHNOLOGIES CORP

ARTICLE#

900123

LOCATION

LINE 12

DESCRIPTION

ZEBRA THERMAL
TRANSFER PRINTER

REQ. NO.

54321

WORK NUMBER

Z58643

COMMENTS:

Testing Stored Graphic
Label Formats!!

^IM

Image Move

Description The ^IM command performs a direct move of an image from storage area into the bitmap. The command is identical to the ^XG command (Recall Graphic), except there are no sizing parameters.

Format ^IMd:○.x

This table identifies the parameters for this format:

Parameters	Details
d = location of stored object	<i>Accepted Values:</i> R:, E:, B:, and A: <i>Default Value:</i> search priority
○ = object name	<i>Accepted Values:</i> 1 to 8 alphanumeric characters <i>Default Value:</i> if a name is not specified, UNKNOWN is used
x = extension	<i>Fixed Value:</i> .GRF

→

Example • This example moves the image SAMPLE.GRF from DRAM and prints it in several locations in its original size.

```
^XA
^FO100,100^IMR:SAMPLE.GRF^FS
^FO100,200^IMR:SAMPLE.GRF^FS
^FO100,300^IMR:SAMPLE.GRF^FS
^FO100,400^IMR:SAMPLE.GRF^FS
^FO100,500^IMR:SAMPLE.GRF^FS
^XZ
```

Comments By using the ^FO command, the graphic image can be positioned anywhere on the label.

The difference between ^IM and ^XG: ^IM does not have magnification, and therefore might require less formatting time. However, to take advantage of this, the image must be at a 8-, 16-, or 32-bit boundary.

^IS

Image Save

Description The ^IS command is used within a label format to save that format as a graphic image, rather than as a ZPL II script. It is typically used toward the end of a script. The saved image can later be recalled with virtually no formatting time and overlaid with variable data to form a complete label.

Using this technique to overlay the image of constant information with the variable data greatly increases the throughput of the label format.



Important • See [^IL](#) on page 190.


Format ^ISd:○.x,p

This table identifies the parameters for this format:

Parameters	Details
d = location of stored object	<i>Accepted Values:</i> R:, E:, B:, and A: <i>Default Value:</i> R:
○ = object name	<i>Accepted Values:</i> 1 to 8 alphanumeric characters <i>Default Value:</i> if a name is not specified, UNKNOWN is used
x = extension	<i>Accepted Values:</i> .GRF or .PNG <i>Default Value:</i> .GRF
p = print image after storing	<i>Accepted Values:</i> N = no Y = yes <i>Default Value:</i> Y



Example • This is an example of using the ^IS command to save a label format to DRAM. The name used to store the graphic is SAMPLE2 .GRF.

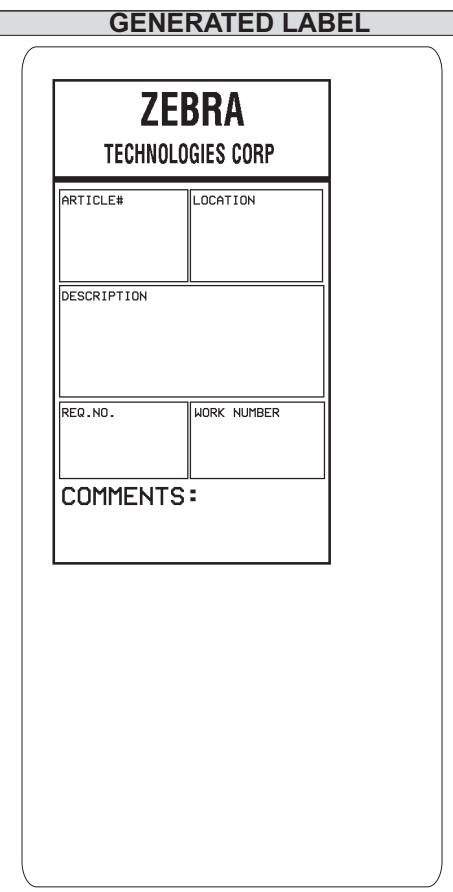ZPL II CODE	GENERATED LABEL
<pre>^XA ^LH10,15^FWN^BY3,3,85^CFD,36 ^GB430,750,4^FS ^FO10,170^GB200,144,2^FS ^FO10,318^GB410,174,2^FS ^FO212,170^GB206,144,2^FS ^FO10,498^GB200,120,2^FSR ^FO212,498^GB209,120,2^FS ^FO4,150^GB422,10,10^FS ^FO135,20^A0,70,60 ^FDZEBRA^FS ^FO80,100^A0,40,30 ^FDTECHNOLOGIES CORP^FS ^FO15,180^CFD,18,10^FS ^FDARTICLE#^FS ^FO218,180 ^FDLOCATION^FS ^FO15,328 ^FDDESCRIPTION^FS ^FO15,508 ^FDREQ.NO.^FS ^FO220,508 ^FDWORK NUMBER^FS ^FO15,630^AD,36,20 ^FDCOMMENTS:^FS ^ISR:SAMPLE2.GRF,Y ^XZ</pre>	

~JA

Cancel All

Description The ~JA command cancels all format commands in the buffer. It also cancels any batches that are printing.

The printer stops after the current label is finished printing. All internal buffers are cleared of data and the DATA LED turn off.

Submitting this command to the printer scans the buffer and deletes only the data before the ~JA in the input buffer — it does not scan the remainder of the buffer for additional ~JA commands.

Format ~JA

^JB

Initialize Flash Memory

Description The ^JB command is used to initialize various types of Flash memory available in the Zebra printers.

Format ^JBa

This table identifies the parameters for this format:

Parameters	Details
a = device to initialize	<i>Acceptable Values:</i> A = Compact Flash memory B = Flash card (PCMCIA) E = internal Flash memory <i>Default Value:</i> a device must be specified



Example • This is an example of initializing the different types of flash memory:

- ^JBA – initializes initial Compact Flash memory when installed in the printer.
- ^JBB – initializes the optional Flash card when installed in the printer.
- ^JBE – initializes the optional Flash memory when installed in the printer.



Note • Initializing memory can take several minutes. Be sure to allow sufficient time for the initialization to complete before power cycling the printer.

~JB

Reset Optional Memory

Description The ~JB command is used for these conditions:

- The ~JB command must be sent to the printer if the battery supplying power to the battery powered memory card fails and is replaced. A bad battery shows a *battery dead* condition on the Printer Configuration Label.
- The ~JB command can also be used to intentionally clear (reinitialize) the B : memory card. The card must **not** be write protected.

Format ~JB

Comments If the battery is replaced and this command is not sent to the printer, the memory card cannot function.

~JC

Set Media Sensor Calibration

Description The ~JC command is used to force a label length measurement and adjust the media and ribbon sensor values.

Format ~JC

Comments In Continuous Mode, only the media and ribbon sensors are calibrated.

~JD

Enable Communications Diagnostics

Description The ~JD command initiates Diagnostic Mode, which produces an ASCII printout (using current label length and full width of printer) of all characters received by the printer. This printout includes the ASCII characters, the hexadecimal value, and any communication errors.

Format ~JD

~JE

Disable Diagnostics

Description The ~JE command cancels Diagnostic Mode and returns the printer to normal label printing.

Format ~JE

~JF

Set Battery Condition

Description There are two low battery voltage levels sensed by the *PA/PT400*™ printers. When battery voltage goes below the first level, the green LED begins flashing as a warning but printing continues. When this warning occurs, it is recommended to recharge the battery.

As printing continues, a second low voltage level is reached. At this point, both green and orange LEDs flash as a warning, and printing automatically pauses.

When pause on low voltage is active (~JFY) and the battery voltage level falls below the second *low voltage* level, printing pauses and an error condition is displayed as an indication that the printer should be plugged into the battery charger. By pressing FEED, printing continues on a label-by-label basis, but there is a high risk of losing label format information due to the continued decrease of battery voltage.

When pause on low voltage is not active (~JFN), and the battery voltage level falls below the second *low voltage* level, printing continues and the orange LED remains off. If the battery voltage continues to decrease, label information could be lost and cause the printer to stop operating. This option should be selected only when the printer is connected to the Car Battery Adapter. From time to time the printer might sense that battery voltage is below the first *low voltage* level, but due to the continuous recharging of the car battery, further loss of battery voltage is not a concern and printing continues.

If this option is not selected when using the Car Battery Adapter, you might need to press FEED to take the printer out of Pause Mode and print each label.

Format ~JFp

This table identifies the parameters for this format:

Parameters	Details
p = pause on low voltage	<i>Accepted Values:</i> Y (pause on low voltage) or N (do not pause) N is suggested when the printer is powered by the Car Battery Adapter. <i>Default Value:</i> Y

~JG


Graphing Sensor Calibration

Description The ~JG command is used to force a label length measurement, recalibrate the media and ribbon sensors, and print a graph (media sensor profile) of the sensor values.

Format ~JG



Example • Sending the ~JG command to the printer produces a series of labels resembling this image:

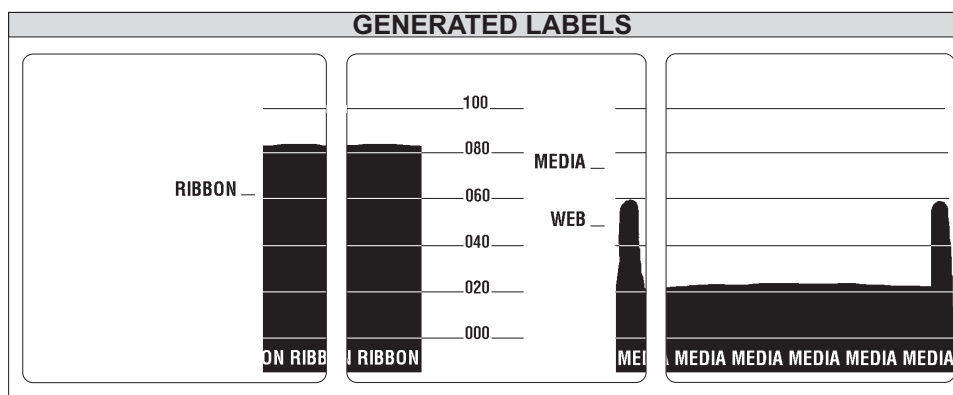

^JJ

Set Auxiliary Port

Description The ^JJ command allows you to control an online verifier or applicator device.

Format ^JJa,b,c,d,e,f

This table identifies the parameters for this format:

Parameters	Details
a = operational mode for auxiliary port	<p><i>Accepted Values:</i></p> <ul style="list-style-type: none"> 0 = off 1 = reprint on error—the printer stops on a label with a verification error. When PAUSE is pressed, the label reprints (if ^JZ is set to reprint). If a bar code is near the upper edge of a label, the label feeds out far enough for the bar code to be verified and then backfeeds to allow the next label to be printed and verified. 2 = maximum throughput—the printer stops when a verification error is detected. The printer starts printing the next label while the verifier is still checking the previous label. This mode provides maximum throughput, but does not allow the printer to stop immediately on a label with a verification error. <p><i>Default Value:</i> 0</p>
b = application mode	<p><i>Accepted Values:</i></p> <ul style="list-style-type: none"> 0 = off 1 = End Print signal normally high, and low only when the printer is moving the label forward. 2 = End Print signal normally low, and high only when the printer is moving the label forward. 3 = End Print signal normally high, and low for 20 ms when a label has been printed and positioned. 4 = End Print signal normally low, and high for 20 ms when a label has been printed and positioned. <p><i>Default Value:</i> 0</p>
c = application mode start signal print	<p><i>Accepted Values:</i></p> <ul style="list-style-type: none"> p = Pulse Mode – Start Print signal must be de-asserted before it can be asserted for the next label. 1 = Level Mode – Start Print signal does not need to be de-asserted to print the next label. As long as the Start Print signal is low and a label is formatted, a label prints. <p><i>Default Value:</i> 0</p>

Parameters	Details
d = application label error mode	<p><i>Accepted Values:</i></p> <ul style="list-style-type: none">e = error mode—the printer asserts the <i>Service Required</i> signal (svce_req - pin 10) on the application port, enters into Pause Mode, and displays an error message on the LCD.f = Feed Mode—a blank label prints when the web is not found where expected to sync the printer to the media. <p><i>Default Value:</i> f</p>
e = reprint mode	<p><i>Accepted Values:</i></p> <ul style="list-style-type: none">e = enabled—the last label reprints after the signal is asserted. If a label is canceled, the label to be reprinted is also canceled. This mode consumes more memory because the last printed label is not released until it reprints.d = disabled—printer ignores the Reprint signal. <p><i>Default Value:</i> d</p>
f = ribbon low mode	<p><i>Accepted Values:</i></p> <ul style="list-style-type: none">e = <i>enabled</i> – printer warning issued when ribbon low.d = <i>disabled</i> – printer warning not issued when ribbon low. <p><i>Default Value:</i> e</p>

~JL

Set Label Length

Description The ~JL command is used to set the label length. Depending on the size of the label, the printer feeds one or more blank labels.

Format ~JL

^JM

Set Dots per Millimeter

Description The ^JM command lowers the density of the print—24 dots/mm becomes 12, 12 dots/mm becomes 6, 8 dots/mm becomes 4, and 6 dots/mm becomes 3. ^JM also affects the field origin (^FO) placement on the label (see example below).

When sent to the printer, the ^JM command doubles the format size of the label. Depending on the printhead, normal dot-per-millimeter capabilities for a Zebra printer are 12 dots/mm (304 dots/inch), 8 dots/mm (203 dots/inch) or 6 dots/mm (153 dots/inch).

This command must be entered before the first ^FS command in a format. The effects of ^JM are persistent.

Format ^JMn

This table identifies the parameters for this format:

Parameters	Details
n = set dots per millimeter	<i>Accepted Values:</i> A = 24 dots/mm, 12 dots/mm, 8 dots/mm or 6 dots/mm B = 12 dots/mm, 6 dots/mm, 4 dots/mm or 3 dots/mm <i>Default Value:</i> A



Example • This example of the affects of alternating the dots per millimeter:

ZPL II CODE	GENERATED LABEL
<pre>^XA ^JMA^FS ^FO100,100 ^B2N,50,Y,N,N ^FD1234567890^FS ^XZ</pre>	
<pre>^XA ^JMB^FS ^FO100,100 ^B2N,50,Y,N,N ^FD1234567890^FS ^XZ</pre>	

Comments If ^JMB is used, the UPS MaxiCode bar code becomes out of specification.

~JN

Head Test Fatal

Description The ~JN command turns on the head test option. When activated, ~JN causes the printer to halt when a head test failure is encountered.

Once an error is encountered the printer remains in error mode until the head test is turned off (~JO) or power is cycled.

Format ~JN

Comments If the communications buffer is full, the printer is not able to receive data. In this condition, the ~JO command is not received by the printer.

~JO

Head Test Non-Fatal

Description The ~JO command turns off the head test option. ~JO is the default printhead test condition and overrides a failure of printhead element status check. This state is changed when the printer receives a ~JN (Head Test Fatal) command. The printhead test does not produce an error when ~JO is active.

Format ~JO

~JP

Pause and Cancel Format

Description The ~JP command clears the format currently being processed and places the printer into Pause Mode.

The command clears the next format that would print, or the oldest format from the buffer. Each subsequent ~JP command clears the next buffered format until the buffer is empty. The DATA indicator turns off when the buffer is empty and no data is being transmitted.

Issuing the ~JP command is identical to using CANCEL on the printer, but the printer does not have to be in Pause Mode first.

Format ~JP

~JR

Power On Reset

Description The ~JR command resets all of the printer's internal software, performs a power-on self-test (POST), clears the buffer and DRAM, and resets communication parameters and default values. Issuing a ~JR command performs the same function as a manual power-on reset.

Format ~JR

^JS

Sensor Select

Format ^JSa



Note • This command is only for the Z series and S4M printers, only.

This table identifies the parameters for this format:

Parameters	Details
a = sensor selection	<i>Accepted Values:</i> A = auto select R = reflective sensor T = transmissive sensor <i>Default Value:</i> Z series = A and the S4M = R

~JS

Change Backfeed Sequence

Description The ~JS command is used to control the backfeed sequence. This command can be used on printers with or without built-in cutters.

These are the primary applications:

- to allow programming of the *rest point* of the cut edge of continuous media.
- provide immediate backfeed after peel-off when the printer is used in a print/apply application configuration.

This command stays in effect only until the printer is turned off, a new ~JS command is sent, or the setting is changed on the control panel. When a ~JS command is encountered, it overrides the current control panel setting for the Backfeed Sequence.

The most common way of eliminating backfeed is to operate in Rewind Mode. Rewind Mode does not backfeed at all. After a label prints, the leading edge of the next label is placed at the print line. This eliminates the need to backfeed and does not introduce a non printable area at the leading edge or bottom of the label. It also does not allow the label to be taken from the printer because it is not fed out from under the printhead.

Running in another mode with backfeed turned off allows the label to be removed and eliminates the time-reduction of the backfeed sequence.

Format ~JSb

This table identifies the parameters for this format:

Parameters	Details
b = backfeed order in relation to printing	<p><i>Accepted Values:</i></p> <p>A = 100 percent backfeed after printing and cutting</p> <p>B = 0 percent backfeed after printing and cutting, and 100 percent before printing the next label</p> <p>N = normal — 90 percent backfeed after label is printed</p> <p>O = off — turn backfeed off completely</p> <p>10 to 90 = percentage value</p> <p>The value entered must be a multiple of 10. Values not divisible by 10 are rounded to the nearest acceptable value.</p> <p>For example, ~JS55 is accepted as 50 percent backfeed.</p> <p><i>Default Value:</i> N</p>

Comments When using a specific value, the difference between the value entered and 100 percent is calculated before the next label is printed. For example, a value of 40 means 40 percent of the backfeed takes place after the label is cut or removed. The remaining 60 percent takes place before the next label is printed.

The value for this command is also reflected in the Backfeed parameter on the printer configuration label.

For ~JSN — the Backfeed parameter is listed as DEDAULT

For ~JSA — or 100% the Backfeed parameter is listed as AFTER

For ~JSB — or 0% the Backfeed parameter is listed as BEFORE

For ~JS10 — 10% of the backfeed takes place after the label is cut or removed. The remaining 90% takes place before the next label is printed.

^JT

Head Test Interval

Description The ^JT command allows you to change the printhead test interval from every 100 labels to any desired interval. With the ^JT command, the printer is allowed to run the test after printing a label. When a parameter is defined, the printer runs the test after printing a set amount of labels.

The printer's default head test state is off. Parameters for running the printhead test are defined by the user.

Format ^JT####, a, b, c

This table identifies the parameters for this format:

Parameters	Details
#### = four-digit number of labels printed between head tests	<i>Accepted Values:</i> 0000 to 9999 If a value greater than 9999 is entered, it is ignored. <i>Default Value:</i> 0000 (off)
a = manually select range of elements to test	<i>Accepted Values:</i> N = no Y = yes <i>Initial Value at Power-up:</i> N
b = first element to check when parameter a is Y	<i>Accepted Values:</i> 0 to 9999 <i>Initial Value at Power-up:</i> 0
c = last element to check when parameter a is Y	<i>Accepted Values:</i> 0 to 9999 <i>Initial Value at Power-up:</i> 9999

Comments The ^JT command supports testing a range of print elements. The printer automatically selects the test range by tracking which elements have been used since the previous test.

^JT also turns on Automatic Mode to specify the first and last elements for the head test. This makes it possible to select any specific area of the label or the entire print width.

If the last element selected is greater than the print width selected, the test stops at the selected print width.

Whenever the head test command is received, a head test is performed on the next label unless the count is set to 0 (zero).

^JU

Configuration Update

Description The ^JU command sets the active configuration for the printer.

Format ^JUa

This table identifies the parameters for this format:

Parameters	Details
a = active configuration	<i>Accepted Values:</i> F = reload factory values These values are lost at power-off if not saved with ^JUS. R = recall last saved values S = save current settings These values are used at power-on. <i>Default Value:</i> a value must be specified

^JW**Set Ribbon Tension**

Description ^JW sets the ribbon tension for the printer it is sent to.

Format ^JWt

This table identifies the parameters for this format:

Parameters	Details
t = tension	<i>Accepted Values:</i> L = low M = medium H = high <i>Default Value:</i> a value must be specified

Comments ^JW is used only for *PAX* series printers.

~JX

Cancel Current Partially Input Format

Description The ~JX command cancels a format currently being sent to the printer. It does not affect any formats currently being printed, or any subsequent formats that might be sent.

Format ~JX

^JZ

Reprint After Error

Description The ^JZ command reprints a partially printed label caused by a **Ribbon Out**, **Media Out**, or **Head Open** error condition. The label is reprinted as soon as the error condition is corrected.

This command remains active until another ^JZ command is sent to the printer or the printer is turned off.

Format ^JZa

This table identifies the parameters for this format:

Parameters	Details
a = reprint after error	<i>Accepted Values:</i> N = no Y = yes <i>Initial Value at Power-up: Y</i>

Comments ^JZ sets the error mode for the printer. If ^JZ changes, only labels printed after the change are affected.

If the parameter is missing or incorrect, the command is ignored.

~KB

Kill Battery (Battery Discharge Mode)

Description To maintain performance of the rechargeable battery in the portable printers, the battery must be fully discharged and recharged regularly. The ~KB command places the printer in battery discharge mode. This allows the battery to be drained without actually printing.

Format ~KB

Comments While the printer is in Discharge Mode, the green power LED flashes in groups of three flashes.

Discharge Mode might be terminated by sending a printing format to the printer or by pressing either of the control panel keys.

If the battery charger is plugged into the printer, the battery is automatically recharged once the discharge process is completed.

^KD**Select Date and Time Format (for Real Time Clock)**

Description The ^KD command selects the format that the Real-Time Clock's date and time information presents as on a configuration label. This is also displayed on the *Printer Idle* LCD control panel display, and displayed while setting the date and time.

Format ^KD*a*

This table identifies the parameters for this format:

Parameters	Details
<i>a</i> = value of date and time format	<i>Accepted Values:</i> 0 = normal, displays <i>Version Number</i> of firmware 1 = MM/DD/YY (24-hour clock) 2 = MM/DD/YY (12-hour clock) 3 = DD/MM/YY (24-hour clock) 4 = DD/MM/YY (12-hour clock) <i>Default Value:</i> 0

Comments If the Real-Time Clock hardware is not present, Display Mode is set to 0 (Version Number).

If Display Mode is set to 0 (Version Number) and the Real-Time Clock hardware is present, the date and time format on the configuration label is presented in format 1.

If Display Mode is set to 0 (Version Number) and the Real-Time Clock hardware is present, the date and time format on the control panel display is presented in format 1.

^KL

Define Language

Description The ^KL command selects the language displayed on the control panel.

Format ^KL*a*

This table identifies the parameters for this format:

Parameters	Details
<i>a</i> = language	<i>Accepted Values:</i> 1 = English 2 = Spanish 3 = French 4 = German 5 = Italian 6 = Norwegian 7 = Portuguese 8 = Swedish 9 = Danish 10 = Spanish2 11 = Dutch 12 = Finnish 13 = Japanese <i>Default Value:</i> 1

^KN

Define Printer Name

Description The printer’s network name and description can be set using the ^KN command. ^KN is designed to make your Zebra printer easy for users to identify. The name the administrator designates is listed on the configuration label and on the Web page generated by the printer.

Format ^KNa,b

This table identifies the parameters for this format:

Parameters	Details
a = printer name	<i>Accepted Values:</i> up to 16 alphanumeric characters <i>Default Value:</i> if a value is not entered, the parameter is ignored If more than 16 characters are entered, only the first 16 are used.
b = printer description	<i>Accepted Values:</i> up to 35 alphanumeric characters <i>Default Value:</i> if a value is not entered, the parameter is ignored If more than 35 characters are entered, only the first 35 are used.

➔ **Example** • This is an example of how to change the printer’s network name an description: This shows how a configuration looks before using this command and after using this command:

```
^XA
^KNZebra1,desk_printer
^XZ
```

Before using this command:

PRINTER CONFIGURATION	
Zebra Technologies ZTC 105SL-200dpi	
+18.....	DARKNESS
-016.....	TEAR OFF
TEAR OFF.....	PRINT MODE
NON-CONTINUOUS.....	MEDIA TYPE
WEB.....	SENSOR TYPE
THERMAL-TRANS.....	PRINT METHOD
101 4/8 MM.....	PRINT WIDTH
1233.....	LABEL LENGTH
7.0IN 177MM.....	MAXIMUM LENGTH
PARALLEL.....	PARALLEL COMM.
RS232.....	SERIAL COMM.
9600.....	BAUD
8 BITS.....	DATA BITS
NONE.....	PARITY
XON/XOFF.....	HOST HANDSHAKE
NONE.....	PROTOCOL
000.....	NETWORK
NORMAL MODE.....	COMM.
<~> 7EH.....	
<^>.....	

After using this command:

PRINTER CONFIGURATION	
Zebra Technologies ZTC 105SL-200dpi Zebra1 desk_printer	
+18.....	DARKNESS
-016.....	TEAR OFF
TEAR OFF.....	PRINT MODE
NON-CONTINUOUS.....	MEDIA TYPE
WEB.....	SENSOR TYPE
THERMAL-TRANS.....	PRINT METHOD
101 4/8 MM.....	PRINT WIDTH
1233.....	LABEL LENGTH
7.0IN 177MM.....	MAXIMUM LENGTH
PARALLEL.....	PARALLEL COMM.
RS232.....	SERIAL COMM.
9600.....	BAUD
8 BITS.....	DATA BITS
NONE.....	PARITY
XON/XOFF.....	HOST HANDSHAKE
NONE.....	PROTOCOL
000.....	NETWORK
NORMAL MODE.....	COMM.
<~> 7EH.....	
<^>.....	

^KP

Define Password

Description The ^KP command is used to define the password that must be entered to access the control panel switches and LCD Setup Mode.

Format ^KP*a*, *b*

This table identifies the parameters for this format:

Parameters	Details
<i>a</i> = mandatory four-digit password	<i>Accepted Values:</i> any four-digit numeric sequence <i>Default Value:</i> 1234
<i>b</i> = password level	<i>Accepted Values:</i> 1, 2, 3, 4 <i>Default Value:</i> 3



Example • This is an example of how to set a new control panel password:

^XA

^KP5678

^XZ

Comments If you forget your password, the printer can be returned to a default Setup Mode and the default password *1234* is valid again. Caution should be used, however — this also sets the printer configuration values back to their defaults.

To return the printer to the default factory settings using ZPL, send this:

^XA

^JUF

^XZ

To return the printer to the default factory settings using the control panel keys, see your printer's User Guide for the procedure.

^LF

List Font Links



This command is available only for printers with firmware version V60.14.x, V50.14.x, or later.

Description The ^LF command prints out a list of the linked fonts.



Example • This example shows that SWISS721.TTF is the based font. ANMDJ.TTF is the first linked font, and MSGOTHIC.TTF is the second linked extension:

ZPL II CODE	GENERATED LABEL
<pre>^XA ^LF ^XZ</pre>	<div>LIST OF FONT LINKS</div> <div>E:SWISS721.TTF E:ANMDJ.TTF E:MSGOTHIC.TTF</div>

This is the code that established the font links:

```
^XA
^FLE:ANMDJ.TTF,E:SWISS721.TTF,1^FS
^FLE:MSGOTHIC.TTF,E:SWISS721.TTF,1^FS
^XZ
```

^LH

Label Home

Description The ^LH command sets the label home position.

The default home position of a label is the upper-left corner (position 0,0 along the x and y axis). This is the axis reference point for labels. Any area below and to the right of this point is available for printing. The ^LH command changes this reference point. For instance, when working with preprinted labels, use this command to move the reference point below the preprinted area.

This command affects only fields that come after it. It is recommended to use ^LH as one of the first commands in the label format.

Format ^LHx,y

This table identifies the parameters for this format:

Parameters	Details
x = x-axis position (in dots)	<i>Accepted Values:</i> 0 to 32000 <i>Initial Value at Power-up:</i> 0 or last permanently saved value
y = y-axis position (in dots)	<i>Accepted Values:</i> 0 to 32000 <i>Initial Value at Power-up:</i> 0 or last permanently saved value

Depending on the printhead used in your printer, use one of these when figuring the values for x and y:

6 dots = 1 mm, 152 dots = 1 inch
8 dots = 1 mm, 203 dots = 1 inch
11.8 dots = 1 mm, 300 dots = 1 inch
24 dots = 1 mm, 608 dots = 1 inch

Comments To be compatible with existing printers, this command must come before the first ^FS (Field Separator) command. Once you have issued an ^LH command, the setting is retained until you turn off the printer or send a new ^LH command to the printer.

^LL

Label Length

Description The ^LL command defines the length of the label. This command is necessary when using continuous media (media not divided into separate labels by gaps, spaces, notches, slots, or holes).

To affect the current label and be compatible with existing printers, ^LL must come before the first ^FS (Field Separator) command. Once you have issued ^LL, the setting is retained until you turn off the printer or send a new ^LL command.

Format ^LLy

This table identifies the parameters for this format:

Parameters	Details
y = y-axis position (in dots)	<i>Accepted Values:</i> 1 to 32000, not to exceed the maximum label size. While the printer accepts any value for this parameter, the amount of memory installed determines the maximum length of the label. <i>Default Value:</i> typically set through the LCD (if applicable), or to the maximum label length capability of the printer.

Comments These formulas can be used to determine the value of y:

For 6 dot/mm printheads...	Label length in inches x 152.4 (dots/inch) = y
For 8 dot/mm printheads...	Label length in inches x 203.2 (dots/inch) = y
For 12 dot/mm printheads...	Label length in inches x 304.8 (dots/inch) = y
For 24 dot/mm printheads...	Label length in inches x 609.6 (dots/inch) = y

Values for y depend on the memory size. If the entered value for y exceeds the acceptable limits, the bottom of the label is cut off. The label also shifts down from top to bottom.

If multiple ^LL commands are issued in the same label format, the last ^LL command affects the next label unless it is prior to the first ^FS.

^LR

Label Reverse Print

Description The ^LR command reverses the printing of all fields in the label format. It allows a field to appear as white over black or black over white.

Using the ^LR is identical to placing an ^FR command in all current and subsequent fields.

Format ^LRa

This table identifies the parameters for this format:

Parameters	Details
a = reverse print all fields	<i>Accepted Values:</i> N = no Y = yes <i>Initial Value at Power-up:</i> N or last permanently saved value



Example • This is an example that shows printing white over black and black over white. The ^GB command is used to create the black background.

ZPL II CODE

^XA^LRY

^FO100,50

^GB195,203,195^FS

^FO180,110^CFG

^FDLABEL^FS

^FO130,170

^FDREVERSE^FS

^XZ

GENERATED LABEL

LABEL

REVERSE

Comments The ^LR setting remains active unless turned off by ^LRN or the printer is turned off.



Note • ^GB needs to be used together with ^LR.

Only fields following this command are affected.

^LS

Label Shift

Description The ^LS command allows for compatibility with Z-130 printer formats that are set for less than full label width. It is used to shift all field positions to the left so the same commands used on a Z-130 or Z-220 Printer can be used on other Zebra printers.

To determine the value for the ^LS command, use this formula:

$$\begin{aligned} &\text{Z-130 and Z-220 values for } ^\text{LHx} + ^\text{FOx} \\ &(\text{distance from edge of label}) = \text{printer value for } ^\text{LSa} \end{aligned}$$

If the print position is less than 0, set ^LS to 0.

Format ^LSa



Important • The ability to save the ^LS command depends on the version of firmware.

This table identifies the parameters for this format:

Parameters	Details
a = shift left value (in dots)	<i>Accepted Values:</i> -9999 to 9999 <i>Initial Value at Power-up:</i> 0

Comments When entering positive values, it is not necessary to use the + sign. The value is assumed to be positive unless preceded by a negative sign (-).

To be compatible with existing Zebra printers, this command must come before the first ^FS (Field Separator) command. Once you have issued an ^LS command, the setting is retained until you turn off the printer or send a new ^LS command to the printer.

^LT

Label Top

Description The ^LT command moves the entire label format a maximum of 120 dot rows up or down from its current position, in relation to the top edge of the label. A negative value moves the format towards the top of the label; a positive value moves the format away from the top of the label.

This command can be used to fine-tune the position of the finished label without having to change any of the existing parameters.



Important • For some printer models, it is possible to request a negative value large enough to cause the media to backup into the printer and become unthreaded from the platen. This condition can result in a printer error or unpredictable results.

Format ^LTx

This table identifies the parameters for this format:

Parameters	Details
x = label top (in dot rows)	<i>Accepted Values:</i> -120 to 120 <i>Default Value:</i> a value must be specified or the command is ignored

Comments The Accepted Value range for x might be smaller depending on the printer platform.

The ^LT command does not change the media rest position.

^MC

Map Clear

Description In normal operation, the bitmap is cleared after the format has been printed. The ^MC command is used to retain the current bitmap. This applies to current and subsequent labels until cleared with ^MCY.

Format ^MCa



Important • To produce a label template, ^MC must be used with ^FV.

This table identifies the parameters for this format:

Parameters	Details
a = map clear	<i>Accepted Values:</i> Y (clear bitmap) or N (do not clear bitmap) <i>Initial Value at Power-up:</i> Y

Comments The ^MC command retains the image of the current label after formatting. It appears in the background of the next label printed.

^MD

Media Darkness

Description The ^MD command adjusts the darkness relative to the current darkness setting.

Format ^MDa

This table identifies the parameters for this format:

Parameters	Details
a = media darkness level	<i>Accepted Values:</i> -30 to 30, depending on current value <i>Initial Value at Power-up:</i> 0 If no value is entered, this command is ignored.



Example • These examples show setting the printer to different darkness levels:

- If the current value (value on configuration label) is 16, entering the command ^MD-9 decreases the value to 7.
- If the current value (value on configuration label) is 1, entering the command ^MD15 increases the value to 16.
- If the current value (value on configuration label) is 25, entering the command ^MD10 increases only the value to 30, which is the maximum value allowed.

Each ^MD command is treated separately in relation to the current value as printed on the configuration label.



Important • The darkness setting range for the *XiIIIPlus* is 0 to 30 in increments of 0.1. The firmware is setup so that the ^MD and ~SD commands (ZPL darkness commands) accepts that range of settings.



Example • These are examples of the *XiIIIPlus* Darkness Setting:

^MD8.3

~SD8.3



Example • For example, this is what would happen if two ^MD commands were received:

Assume the current value is 15. An ^MD-6 command is received that changes the current value to 9. Another command, ^MD2, is received. The current value changes to 17.

The two ^MD commands are treated individually in relation to the current value of 15.

Comments The ~SD command value, if applicable, is added to the ^MD command.



Media Feed

Description The ^MF command dictates what happens to the media at power-up and at head-close after the error clears.

Format ^MFp, h

This table identifies the parameters for this format:

Parameters	Details
p = feed action at power-up	<i>Accepted Values:</i> F = feed to the first web after sensor C = (see ~JC on page 197 definition) L = (see ~JL on page 204 definition) N = no media feed <i>Default Value:</i> platform-dependent
h = feed action after closing printhead	<i>Accepted Values:</i> F = feed to the first web after sensor C = (see ~JC on page 197 definition) L = (see ~JL on page 204 definition) N = no media feed <i>Default Value:</i> platform-dependent

Comments It is important to remember that if you choose the N setting, the printer assumes that the media and its position relative to the printhead are the same as before power was turned off or the printhead was opened. Use the ^JU command to save changes.

^

ML

Maximum Label Length

Description The ^ML command lets you adjust the maximum label length.

Format ^MLa

This table identifies the parameters for this format:

Parameters	Details
a = maximum label length (in dot rows)	<i>Accepted Values:</i> 0 to maximum length of label <i>Default Value:</i> last permanently saved value

Comments For calibration to work properly, you must set the maximum label length equal to or greater than your actual label length.



Print Mode

Description The ^MM command determines the action the printer takes after a label or group of labels has printed.

Format ^MMa, b

This table identifies the parameters for this format:

Parameters	Details
a = desired mode	<p><i>Accepted Values:</i></p> <ul style="list-style-type: none"> T = Tear-off P = Peel-off (not available on S-300) R = Rewind (depends on printer model) A = Applicator (depends on printer model) C = Cutter (depends on printer model) D = Delayed cutter <p><i>Default Value:</i> T</p> <p>The values available for parameter a are dependent on the printer being used and whether it supports the option.</p>
b = prepeel select	<p><i>Accepted Values:</i></p> <ul style="list-style-type: none"> N = no Y = yes <p><i>Default Value:</i> Y</p> <p>The command is ignored if parameters are missing or invalid. The current value of the command remains unchanged.</p>

This bulleted list identifies the different modes of operation:

- Tear-off — after printing, the label advances so the web is over the tear bar. The label, with liner attached, can be torn off manually.
- Peel-off — after printing, the label moves forward and activates a Label Available Sensor. Printing stops until the label is manually removed from the printer.
 - Power Peel* – liner automatically rewinds using an optional internal rewind spindle.
 - Value Peel* – liner feeds down the front of the printer and is manually removed.
 - Prepeel* – after each label is manually removed, the printer feeds the next label forward to prepeel a small portion of the label away from the liner material. The printer then backfeeds and prints the label. The prepeel feature assists in the proper peel operation of some media types.
- Rewind — the label and backing are rewound on an (optional) external rewind device. The next label is positioned under the printhead (no backfeed motion).
- Applicator — when used with an application device, the label move far enough forward to be removed by the applicator and applied to an item.

- Cutter — after printing, the media feeds forward and is automatically cut into predetermined lengths.

Comments Be sure to select the appropriate value for the print mode being used to avoid unexpected results.

The Delayed Cut feature can be activated as follows:

- through PRINT MODE on the printer's control panel
- with a ^MMD command



Note • When the printer is in the Delayed Cut PRINT MODE, it will cut the label when it receives the ~JK (Delayed Cut) command. To activate the ~JK command, the printer's PRINT MODE must be set to Delayed Cut and there must be a label waiting to be cut.

When the printer is not in the Delayed Cut PRINT MODE, the printer will not cut the label when it receives the ~JK command.



Media Tracking

Description The ^MN command relays to the printer what type of media is being used (continuous or non-continuous) for purposes of tracking. This bulleted list shows the types of media associated with this command:

- Continuous Media – this media has no physical characteristic (web, notch, perforation, mark, et cetera) to separate labels. Label length is determined by the ^LL command.
- Non-continuous Media – this media has some type of physical characteristic (web, notch, perforation, mark, et cetera) to separate the labels.

Format ^MNa

This table identifies the parameters for this format:

Parameters	Details
a = media being used	<i>Accepted Values:</i> N = continuous media Y = non-continuous media web sensing * W = non-continuous media web sensing * M = non-continuous media mark sensing <i>Default Value:</i> a value must be entered or the command is ignored

* provides the same result.

^ MP

Mode Protection

Description The ^MP command is used to disable the various mode functions on the control panel. Once disabled, the settings for the particular mode function can no longer be changed and the LED associated with the function does not light.

Because this command has only one parameter, each mode must be disabled with an individual ^MP command.

Format ^MPa

This table identifies the parameters for this format:

Parameters	Details
a = mode to protect	<div>Accepted Values:</div> <div><div>D = disable Darkness Mode</div><div>P = disable Position Mode</div><div>C = disable Calibration Mode</div><div>E = enable all modes</div><div>S = disable all mode saves (modes can be adjusted but values are not saved)</div><div>W = disable Pause</div><div>F = disable Feed</div><div>X = disable Cancel</div><div>M = disable menu changes</div></div> <div>Default Value: a value must be entered or the command is ignored</div>



Example • This example shows the ZPL code that disables modes D and C. It also shows the effects on the configuration label before and after the ZPL code is sent:

^XA
^MPD
^MPC
^XZ

Before

DPCSWFXM..... MODES ENABLED
..... MODES DISABLED

After

.P.SWFXM..... MODES ENABLED
D.C..... MODES DISABLED

PRINTER CONFIGURATION	
Zebra Technologies ZTC 110X1111Plus-300dpi ZBR1462777	
10.2.....	DARKNESS
2 IPS.....	PRINT SPEED
+000.....	TEAR OFF
TEAR OFF.....	PRINT MODE
NON-CONTINUOUS.....	MEDIA TYPE
WEB.....	SENSOR TYPE
THERMAL-TRANS.....	PRINT METHOD
105.08/12 MM.....	PRINT WIDTH
1828.....	LABEL LENGTH
39.0IN 988MM.....	MAXIMUM LENGTH
MEDIA DISABLED.....	EARLY WARNING
PRINT OFF.....	EARLY WARNING
NOT CONNECTED.....	USB COMM.
9101RECTIONAL.....	PARALLEL COMM.
RS232.....	SERIAL COMM.
9600.....	BAUD
8 BITS.....	DATA BITS
NONE.....	PARITY
XON/XOFF.....	HOST HANDSHAKE
NONE.....	PROTOCOL
000.....	NETWORK ID
NORMAL.....	COMMUNICATIONS
<=> ZEH.....	CONTROL PREFIX
<=> SEH.....	FORMAT PREFIX
<=> ZCH.....	DELIMITER CHAR
ZPL II.....	ZPL MODE
NO MOTION.....	MEDIA POWER UP
NO MOTION.....	HEAD CLOSE
DEFAULT.....	BACKFEED
+000.....	LABEL TOP
+0000.....	LEFT POSITION
0000.....	HEAD TEST COUNT
1447.....	HEAD RESISTOR
OFF.....	VERIFIER PORT
OFF.....	APPLICATOR PORT
ENABLED.....	ERROR ON PAUSE
PULSE MODE.....	START PRINT SIG
FEED MODE.....	REINCH MODE
DISABLED.....	REPRINT MODE
050.....	WEB S.
079.....	MEDIA S.
072.....	RIBBON S.
012.....	TAKE LABEL
050.....	MARK S.
000.....	MARK RED S.
003.....	MEDIA LED
033.....	RIBBON LED
028.....	MARK LED
+10.....	LCD ADJUST
DPCSWFXM.....	MODES ENABLED
.....	MODES DISABLED
1246 12/MM FULL.....	RESOLUTION
V60.15.12P07 C.....	FIRMWARE
V30 79089 57.....	HARDWARE ID
CUSTOMIZED.....	CONFIGURATION
NONE.....	COMPACT FLASH
11776K.....	RAM
2048K.....	ONBOARD FLASH
NONE.....	FORMAT CONVERT
005 DISPLAY.....	P32 INTERFACE
001 POWER SUPPLY.....	P35 INTERFACE
FW VERSION.....	TWINAX/COAX ID
11/18/06.....	IDLE DISPLAY
16:10.....	RTC DATE
16:10.....	RTC TIME
NONE.....	ZEBRA NET II
NO.....	RFID READY
15940 IN.....	NONRESET CNTR
15940 IN.....	RESET CNTR1
15940 IN.....	RESET CNTR2
39850 CH.....	NONRESET CNTR
39850 CH.....	RESET CNTR1
39850 CH.....	RESET CNTR2
4207 LABELS.....	NONRESET CNTR
4207 LABELS.....	RESET CNTR1
4207 LABELS.....	RESET CNTR2
OK 36850.0 S NYS07015.41008.07-VH1..	
2006-06-14 16:30:23 TIME STAMP	

FIRMWARE IN THIS PRINTER IS COPYRIGHTED

^MT

Media Type

Description The ^MT command selects the type of media being used in the printer. There are two choices for this command:

- Thermal Transfer Media – this media uses a high-carbon black or colored ribbon. The ink on the ribbon is bonded to the media.
- Direct Thermal Media – this media is heat sensitive and requires no ribbon.

Format ^MTa

This table identifies the parameters for this format:

Parameters	Details
a = media type used	<i>Accepted Values:</i> T = thermal transfer media D = direct thermal media <i>Default Value:</i> a value must be entered or the command is ignored

^MU

Set Units of Measurement

Description The ^MU command sets the units of measurement the printer uses. ^MU works on a field-by-field basis. Once the mode of units is set, it carries over from field to field until a new mode of units is entered.

^MU also allows for printing at lower resolutions — 600 dpi printers are capable of printing at 300, 200, and 150 dpi; 300 dpi printers are capable of printing at 150 dpi.

Format ^MUa, b, c

This table identifies the parameters for this format:

Parameters	Details
a = units	<i>Accepted Values:</i> D = dots I = inches M = millimeters <i>Default Value:</i> D
b = format base in dots per inch	<i>Accepted Values:</i> 150, 200, 300 <i>Default Value:</i> a value must be entered or the command is ignored
c = desired dots-per-inch conversion	<i>Accepted Values:</i> 300, 600 <i>Default Value:</i> a value must be entered or the command is ignored



Example • This is an example of Setting Units:

Assume 8 dot/millimeter (203 dot/inch) printer.

Field based on dots:

```
^MUd^FO100,100^GB1024,128,128^FS
```

Field based on millimeters:

```
^MUm^FO12.5,12.5^GB128,16,16^FS
```

Field based on inches:

```
^MUi^FO.493,.493^GB5.044,.631,.631^FS
```



Example • This is an example of Converting dpi Values.

Convert a 150 dpi format to a 300 dpi format with a base in dots:

`^MUd,150,300`

Convert a 150 dpi format to a 600 dpi format with a base in dots:

`^MUd,150,600`

Convert a 200 dpi format to a 600 dpi format with a base in dots:

`^MUd,200,600`

To reset the conversion factor to the original format, enter matching values for parameters b and c:

`^MUd,150,150`

`^MUd,200,200`

`^MUd,300,300`

`^MUd,600,600`

Comments This command should appear at the beginning of the label format to be in proper ZPL II format.

To turn the conversion off, enter matching values for parameter b and c.



Modify Head Cold Warning

Description The ^MW command allows you to set the head cold warning indicator based on the operating environment.

Format ^MWy

This table identifies the parameters for this format:

Parameters	Details
a = enable head cold warning	<i>Accepted Values:</i> y = enable head cold warning n = disable head cold warning



Important • When a parameter is **not** given, the instruction is *ignored*.

~NC

Network Connect

Description The ~NC command is used to connect a particular printer to a network by calling up the printer's network ID number.

Format ~NC###

This table identifies the parameters for this format:

Parameters	Details
### = network ID number assigned (must be a three-digit entry)	<i>Accepted Values:</i> 001 to 999 <i>Default Value:</i> 000 (none)

Comments Use this command at the beginning of any label format to specify which printer on the network is going to be used. Once the printer is established, it continues to be used until it is changed by another ~NC command. This command must be included in the label format to *wake up the printer*.

The commands ^MW, ~NC, ^NI, ~NR, and ~NT are used only with RS-485 printer communications.

^NI

Network ID Number

Description The ^NI command is used to assign a network ID number to the printer. This must be done before the printer can be used in a network.

Format ^NI###

This table identifies the parameters for this format:

Parameters	Details
### = network ID number assigned (must be a three-digit entry)	<i>Accepted Values:</i> 001 to 999 <i>Default Value:</i> 000 (none)

Comments The last network ID number set is the one recognized by the system.

The commands ~NC, ^NI, ~NR, and ~NT are used only with RS-485 printer communications.

~NR

Set All Network Printers Transparent

Description The ~NR command sets all printers in the network to be transparent, regardless of ID or current mode.

Format ~NR

Comments The commands ~NC, ^NI, ~NR, and ~NT are used only with RS-485 printer communications.

^NS

Change Networking Settings

Description The ^NS command is used to change Ethernet network settings.

Format ^NSa,b,c,d

This table identifies the parameters for this format:

Parameters	Details
a = network setting	<i>Accepted Values:</i> IP Resolution. a = all b = BOOTP c = DHCP and BOOTP d = DHCP g = gleaning only r = RARP p = permanent
b = IP Address	<i>Accepted Values:</i> 0 to 255
c = Subnet Mask	<i>Accepted Values:</i> 0 to 255
d = Default Gateway	<i>Accepted Values:</i> 0 to 255

~NT

Set Currently Connected Printer Transparent

Description The ~NT command sets the currently connected network printer to be transparent.

Format ~NT

Comments With Z Series® printers, the ~NT command functions the same as the ~NR command. All Z Series printers on a network receive the transmission.

The commands ~NC, ^NI, ~NR, and ~NT are used only with RS-485 printer communications.

^PA

Advanced Text Properties



This command is available only for printers with firmware version V60.14.x, V50.14.x, or later.

Description The ^PA command is used to configure advanced text layout features.

Format ^PAa,b,c,d

This table identifies the parameters for this format:

Parameters	Details
a = default glyph	<p>This determines whether the default glyph is a space character or the default glyph of the base font, which is typically a hollow box.</p> <p><i>Accepted Values:</i></p> <ul style="list-style-type: none">0 = off (space as default glyph)1 = on (default glyph of font is used, often a hollow box, but depends on the font.) <p><i>Default Value:</i> 0</p>
b = bidirectional text layout	<p>This determines whether the bidirectional text layout is turned on or off.</p> <p><i>Accepted Values:</i></p> <ul style="list-style-type: none">0 = off1 = on <p><i>Default Value:</i> 0</p>
c = character shaping	<p>This determines whether character shaping is turned on or off.</p> <p><i>Accepted Values:</i></p> <ul style="list-style-type: none">0 = off1 = on <p><i>Default Value:</i> 0</p>
d = OpenType table support	<p>This determines whether the OpenType support is turned on or off.</p> <p><i>Accepted Values:</i></p> <ul style="list-style-type: none">0 = off1 = on <p><i>Default Value:</i> 0</p>

^PF

Slew Given Number of Dot Rows

Description The ^PF command causes the printer to slew labels (move labels at a high speed without printing) a specified number of dot rows from the bottom of the label. This allows faster printing when the bottom portion of a label is blank.

Format ^PF#

This table identifies the parameters for this format:

Parameters	Details
# = number of dots rows to slew	<i>Accepted Values:</i> 0 to 32000 <i>Default Value:</i> a value must be entered or the command is ignored

^PH ~PH

Slew to Home Position

Description The ^PH or ~PH command causes the printer to feed one blank label.

The ~PH command feeds one label after the format currently being printed is done or when the printer is placed in pause.

The ^PH command feeds one blank label after the current format prints.

Format ^PH or ~PH

^PM

Printing Mirror Image of Label

Description The ^PM command prints the entire printable area of the label as a mirror image. This command flips the image from left to right.

Format ^PMa

This table identifies the parameters for this format:

Parameters	Details
a = print mirror image of entire label	<i>Accepted Values:</i> N = no Y = yes <i>Default Value:</i> N

➔ **Example** • This is an example of printing a mirror image on a label:

ZPL II CODE	GENERATED LABEL
<pre>^XA^PMY ^FO100,100 ^CFG ^FDMIRROR^FS ^FO100,160 ^FDIMAGE^FS ^XZ</pre>	

Comments If the parameter is missing or invalid, the command is ignored. Once entered, the ^PM command remains active until ^PMN is received or the printer is turned off.

^PO

Print Orientation

Description The ^PO command inverts the label format 180 degrees. The label appears to be printed upside down. If the original label contains commands such as ^LL, ^LS, ^LT and ^PF, the inverted label output is affected differently.

Format ^POa

This table identifies the parameters for this format:

Parameters	Details
a = invert label 180 degrees	<i>Accepted Values:</i> N (normal) or I (invert) <i>Default Value:</i> N



Example • This is an example of printing a label at 180 degrees:

ZPL II CODE	GENERATED LABEL
<pre>^XA^CFD ^POI ^LH330,10 ^FO50,50 ^FDZEBRA TECHNOLOGIES^FS ^FO50,75 ^FDVernon Hills, IL^FS ^XZ</pre>	

The ^POI command inverts the x, y coordinates. All image placement is relative to these inverted coordinates. Therefore, a different ^LH (Label Home) can be used to move the print back onto the label.

Comments If multiple ^PO commands are issued in the same label format, only the last command sent to the printer is used.

Once the ^PO command is sent, the setting is retained until another ^PO command is received or the printer is turned off.

^PP ~PP

Programmable Pause

Description The ~PP command stops printing after the current label is complete (if one is printing) and places the printer in Pause Mode.

The ^PP command is not immediate. Therefore, several labels might print before a pause is performed. This command pauses the printer after the current format prints.

The operation is identical to pressing PAUSE on the control panel of the printer. The printer remains paused until PAUSE is pressed or a ~PS (Print Start) command is sent to the printer.

Format ^PP or ~PP

^PQ

Print Quantity

Description The ^PQ command gives control over several printing operations. It controls the number of labels to print, the number of labels printed before printer pauses, and the number of replications of each serial number.

Format ^PQq,p,r,o

This table identifies the parameters for this format:

Parameters	Details
q = total quantity of labels to print	<i>Accepted Value:</i> 1 to 99,999,999 <i>Default Value:</i> 1
p = pause and cut value (labels between pauses)	<i>Accepted Value:</i> 1 to 99,999,999 <i>Default Value:</i> 0 (no pause)
r = replicates of each serial number	<i>Accepted Value:</i> 0 to 99,999,999 replicates <i>Default Value:</i> 0 (no replicates)
o = override pause count	<i>Accepted Values:</i> N = no Y = yes <i>Default Value:</i> N

If the o parameter is set to Y, the printer cuts but does not pause, and the printer does **not** pause after every group count of labels has been printed. With the o parameter set to N (default), the printer pauses after every group count of labels has been printed.



Example • This example shows the control over print operations:

^PQ50,10,1,Y: This example prints a total of 50 labels with one replicate of each serial number. It prints the total quantity in groups of 10, but does not pause after every group.

^PQ50,10,1,N: This example prints a total of 50 labels with one replicate of each serial number. It prints the total quantity in groups of 10, pausing after every group.

^PR

Print Rate

Description The ^PR command determines the media and slew speed (feeding a blank label) during printing.

The printer operates with the selected speeds until the setting is reissued or the printer is turned off.

The print speed is application-specific. Because print quality is affected by media, ribbon, printing speeds, and printer operating modes, it is very important to run tests for your applications.



Important • Some models go to default print speed when power is turned off.

Format ^PRp,s,b

This table identifies the parameters for this format:

Parameters	Details
p = print speed	<div>Accepted Values:</div> <div>A or 2 = 50.8 mm/sec. (2 inches/sec.)</div> <div>B or 3 = 76.2 mm/sec. (3 inches/sec.)</div> <div>C or 4 = 101.6 mm/sec. (4 inches/sec.)</div> <div>5 = 127 mm/sec.(5 inches/sec.)</div> <div>D or 6 = 152.4 mm/sec. (6 inches/sec.)</div> <div>E or 8 = 203.2 mm/sec. (8 inches/sec.)</div> <div>9 = 220.5 mm/sec. 9 inches/sec.)</div> <div>10 = 245 mm/sec.(10 inches/sec.)</div> <div>11 = 269.5 mm/sec.(11 inches/sec.)</div> <div>12 = 304.8 mm/sec. 12 inches/sec.)</div> <div>Default Value: A</div>

Parameters	Details
s = slew speed	<i>Accepted Values:</i> A or 2 = 50.8 mm/sec. (2 inches/sec.) B or 3 = 76.2 mm/sec. (3 inches/sec.) C or 4 = 101.6 mm/sec. (4 inches/sec.) 5 = 127 mm/sec. 5 inches/sec.) D or 6 = 152.4 mm/sec. (6 inches/sec.) E or 8 = 203.2 mm/sec. (8 inches/sec.) 9 = 220.5 mm/sec. (9 inches/sec.) 10 = 245 mm/sec. (10 inches/sec.) 11 = 269.5 mm/sec. 11 inches/sec.) 12 = 304.8 mm/sec. 12 inches/sec.) <i>Default Value:</i> D
b = backfeed speed	<i>Accepted Values:</i> A or 2 = 50.8 mm/sec. (2 inches/sec.) B or 3 = 76.2 mm/sec. (3 inches/sec.) C or 4 = 101.6 mm/sec. (4 inches/sec.) 5 = 127 mm/sec.(5 inches/sec.) D or 6 = 152.4 mm/sec. (6 inches/sec.) E or 8 = 203.2 mm/sec. (8 inches/sec.) 9 = 220.5 mm/sec. 9 inches/sec.) 10 = 245 mm/sec. 10 inches/sec.) 11 = 269.5 mm/sec. 11 inches/sec.) 12 = 304.8 mm/sec. 12 inches/sec.) <i>Default Value:</i> A

Comments The speed setting for p, s, and b is dependent on the limitations of the printer. If a particular printer is limited to a rate of 6 ips (inches per second), a value of 12 can be entered but the printer performs only at a 6 ips rate. See your printer's User Guide for specifics on performance.

~PR

Applicator Reprint

Description The ~PR command is supported only by the *PAX* and *PAX2* series printers. If the ~PR command is enabled (see [^JJ on page 202](#)), the last label printed reprints, similar to the applicator asserting the Reprint signal on the applicator port.

Format ~PR

Comments Pressing PREVIOUS on the control panel also causes the last label to reprint.

~PS

Print Start

Description The ~PS command causes a printer in Pause Mode to resume printing. The operation is identical to pressing PAUSE on the control panel of the printer when the printer is already in Pause Mode.

Format ~PS

^PW

Print Width

Description The ^PW command allows you set the print width.

Format ^PWa

This table identifies the parameters for this format:

Parameters	Details
a = label width (in dots)	<i>Accepted Values:</i> 2, to the width of the label If the value exceeds the width of the label, the width is set to the label's maximum size. <i>Default Value:</i> last permanently saved value

Limitation Not all Zebra printers support the ^PW command.

~RO

Reset Advanced Counter

Description The ~RO command resets the advanced counters used by the printer to monitor label generation in inches, centimeters, and number of labels. Two resettable counters are available and can be reset.

Format ~ROc

This table identifies the parameters for this format:

Parameters	Details
c = counter number	<p><i>Accepted Values:</i> 1 or 2</p> <p><i>Default Value:</i> a value must be specified or the command is ignored</p>



Example • This is an example of the ~RO command.

Before

```

296862 IN..... NONRESET CNTR
296862 IN..... RESET CNTR1
296862 IN..... RESET CNTR2
753289 CM..... NONRESET CNTR
753289 CM..... RESET CNTR1
753289 CM..... RESET CNTR2
92928 LABLS..... NONRESET CNTR
92928 LABLS..... RESET CNTR1
92928 LABLS..... RESET CNTR2

```

After

```

296876 IN..... NONRESET CNTR
0 IN..... RESET CNTR1
296876 IN..... RESET CNTR2
753323 CM..... NONRESET CNTR
0 CM..... RESET CNTR1
753323 CM..... RESET CNTR2
92930 LABLS..... NONRESET CNTR
0 LABLS..... RESET CNTR1
92930 LABLS..... RESET CNTR2

```

PRINTER CONFIGURATION	
Zebra Technologies ZTC 140XiIIIPlus-200dpi Berry B	
13.5.....	DARKNESS
6 IPS.....	PRINT SPEED
~089.....	TEAR OFF
TEAR OFF.....	PRINT MODE
NON-CONTINUOUS.....	MEDIA TYPE
WEB.....	SENSOR TYPE
THERMAL-TRANS.....	PRINT METHOD
129 0/8 MM.....	PRINT WIDTH
1235.....	LABEL LENGTH
39.0IN 888PM.....	MAXIMUM LENGTH
MEDIA DISABLED.....	EARLY WARNING
MAINT. OFF.....	EARLY WARNING
NOT CONNECTED.....	USB COMM.
PARALLEL.....	PARALLEL COMM.
RS232.....	SERIAL COMM.
38400.....	BAUD
8 BITS.....	DATA BITS
NONE.....	PARITY
XON/XOFF.....	HOST HANDSHAKE
NONE.....	PROTOCOL
000.....	NETWORK ID
NORMAL MODE.....	COMMUNICATIONS
< > 7EH.....	CONTROL PREFIX
< > SEH.....	FORMAT PREFIX
< > 2CH.....	DELIMITER CHAR
ZPL II.....	ZPL MODE
NO MOTION.....	MEDIA POWER UP
NO MOTION.....	HEAD CLOSE
DEFAULT.....	BACKFEED
+000.....	LABEL TOP
+0010.....	LEFT POSITION
0000.....	HEAD TEST COUNT
0526.....	HEAD RESISTOR
OFF.....	VERIFIER PORT
OFF.....	APPLICATOR PORT
PULSE MODE.....	START PRINT SIG
FEED MODE.....	RESYNCH MODE
051.....	WEB S.
079.....	MEDIA S.
071.....	RIBBON S.
050.....	MARK S.
000.....	MARK MED. S.
084.....	MEDIA LED
007.....	RIBBON LED
027.....	MARK LED
+10.....	LCD ADJUST
DPS4XN.....	MODES ENABLED
1024 8/11 FULL.....	MODES DISABLED
V42.11.6 <-.....	FIRMWARE
V16.0.0.30.....	HARDWARE ID
CUSTOMIZED.....	CONFIGURATION
12288.....	R: RAM
NONE.....	B: MEMORY CARD
2048.....	E: ONBOARD FLASH
NONE.....	FORMAT CONVERT
005 DISPLAY.....	P32 INTERFACE
007 POWER SUPPLY.....	P34 INTERFACE
001 ADV. COUNTER.....	P35 INTERFACE
FW VERSION.....	TWINMARK ID
08/11/01.....	IDLE DISPLAY
20:05.....	RTC DATE
PERMANENT.....	RTC TIME
AL.....	IP RESOLUTION
012.107.109.046.....	IP ADDRESS
255.255.255.224.....	SUBNET MASK
012.107.109.033.....	DEFAULT GATEWAY
296862 IN.....	NONRESET CNTR
296862 IN.....	RESET CNTR1
296862 IN.....	RESET CNTR2
753289 CM.....	NONRESET CNTR
753289 CM.....	RESET CNTR1
753289 CM.....	RESET CNTR2
92928 LABLS.....	NONRESET CNTR
92928 LABLS.....	RESET CNTR1
92928 LABLS.....	RESET CNTR2
FW12446.04-26-2002.33008.00.VH1	
FIRMWARE IN THIS PRINTER IS COPYRIGHTED	

^SC

Set Serial Communications

Description The ^SC command allows you to change the serial communications parameters you are using.

Format ^SCa,b,c,d,e,f

This table identifies the parameters for this format:

Parameters	Details
a = baud rate	<i>Accepted Values:</i> 110; 600; 1,200; 2400; 4800; 9600; 14400; 19200; 28800; 38400; or 57600 ; 115200 <i>Default Value:</i> must be specified or the parameter is ignored
b = word length (in data bits)	<i>Accepted Values:</i> 7 or 8 <i>Default Value:</i> must be specified
c = parity	<i>Accepted Values:</i> N (none), E (even), or O (odd) <i>Default Value:</i> must be specified
d = stop bits	<i>Accepted Values:</i> 1 or 2 <i>Default Value:</i> must be specified
e = protocol mode	<i>Accepted Values:</i> X = XON/XOFF D = DTR/DSR R = RTS <i>Default Value:</i> must be specified
f = Zebra protocol	<i>Accepted Values:</i> A = ACK/NAK N = none Z = Zebra <i>Default Value:</i> must be specified

Comments If any of the parameters are missing, out of specification, not supported by a particular printer, or have a ZPL-override DIP switch set, the command is ignored.

A ^JUS command causes the changes in Communications Mode to persist through power-up and software resets.

~SD

Set Darkness

Description The ~SD command allows you to set the darkness of printing. ~SD is the equivalent of the darkness setting parameter on the control panel display.

Format ~SD##

This table identifies the parameters for this format:

Parameters	Details
## = desired darkness setting (two-digit number)	<i>Accepted Values:</i> 00 to 30 <i>Default Value:</i> last permanently saved value



Example • These are examples of the *XiIIIPlus* Darkness Setting:

^MD8.3

~SD8.3

Comments The ^MD command value, if applicable, is added to the ~SD command.

^SE

Select Encoding Table

Description The ^SE command is used to select the desired ZPL or ZPL II encoding table.

Format ^SEd: o . x

This table identifies the parameters for this format:

Parameters	Details
d = location of encoding table	<i>Accepted Values:</i> R:, E:, B:, and A: <i>Default Value:</i> R:
o = name of encoding table	<i>Accepted Value:</i> 1 to 8 alphanumeric characters <i>Default Value:</i> a value must be specified
x = extension	<i>Fixed Value:</i> .DAT

The encoding tables are provided with the font card or downloaded in flash with the font. The table appears as XXXXXXXX.DAT in a directory label printed by the ZPL commands.

The most active encoding table is indicated by the * on the directory label.



Example •

^XA^WD*: *. *^XZ

^SF

Serialization Field (with a Standard ^FD String)

Description The ^SF command allows you to serialize a standard ^FD string. Strings are serialized from the last character in the backing store with regard to the alignment of the mask and increment strings. The maximum size of the mask and increment string is 3K combined. For combining semantic clusters that do not get incremented, the mask character % needs to be added to the increment string.

Format ^SFa,b

This table identifies the parameters for this format:

Parameters	Details
a = mask string	<p>The mask string sets the serialization scheme. The length of the string mask defines the number of combining semantic clusters in the current ^FD string to be serialized. The mask is aligned to the combining semantic clusters in the ^FD string starting with the last in the backing store position.</p> <p><i>Mask String placeholders:</i></p> <ul style="list-style-type: none">D or d – Decimal numeric 0–9H or h – Hexadecimal 0–9 plus a-f or A-FO or o – Octal 0–7A or a – Alphabetic A–Z or a–zN or n – Alphanumeric 0–9 plus A–Z or a–z% – Ignore character or skip
b = increment string	<p>The increment string is the value to be added to the field on each label. The default value is equivalent to a decimal value of one. The string is composed of any combining semantic clusters defined in the serial string. Invalid combining semantic clusters are assumed to be equal to a value of zero in that combining semantic clusters position.</p> <p>The increment value for alphabetic strings start with ‘A’ or ‘a’ as the zero placeholder. This means to increment an alphabetic combining semantic cluster by one, a value of ‘B’ or ‘b’ must be in the increment string.</p>

➔ **Example** • This is an example of serializing a ^FD string. The ZPL II code generates three separate labels as seen in Generated Labels:

ZPL II CODE	GENERATED LABELS
<pre>^XA ^FO100,100 ^CF0,100 ^FD12A^SFnnA,F^FS ^PQ3 ^XZ</pre>	12K
	12F
	12A

This mask has the first combining semantic clusters as alphanumeric (nn = 12) and the last digit as uppercase alphabetic (A). The decimal value of the increment number is equivalent to 5 (F). The number of labels generated depends on the number specified by the ^PQ command.

In a similar instance, the ^FD string could be replaced with either of the ^FD strings below to generate a series of label, determined by ^PQ.

Using this ZPL code:

```
^FDBL0000^SFAAdddd,1
```

The print sequence on this series of labels is:

```
BL0000, BL0001, ...BL0009, BL0010, ...
BL0099, BL0100, ...BL9999, BM0000...
```

Using this ZPL code:

```
^FDBL00-0^SFAAdd%d,1%1
```

The print sequence on this series of labels is:

```
BL00-0, BL01-1, BL02-2, ...BL09-9,
BL11-0, BL12-1...
```



Examples • These examples show the importance of capitalization and location within the mask.

In this example, the printer cycles with every two printed labels and alternates between H (position 18), and then Z (position 36). With n or N, the serial number increments from 0 - 9 and a–z or A–Z (36 positions overall). With each completed cycle, the second cluster (nn) increments one position (from 00, 01, 02 ...) per cycle:

ZPL II CODE	GENERATED LABELS
<div><div>^XA</div><div>^FO100,50^A0N,50,50^FDzzZ^SFnnN,I^FS</div><div>^PQ10</div><div>^XZ</div></div>	<div><div>04H</div><div>03Z</div><div>03H</div><div>02Z</div><div>02H</div><div>01Z</div><div>01H</div><div>00Z</div><div>00H</div><div>zzZ</div></div>

In this example, lower case i increments with a mask string of nnN. Nothing changes because the first cluster (Z) never triggers the second cluster (zz) to change.

ZPL II CODE	GENERATED LABELS
<div><div>^XA</div><div>^FO100,50^A0N,50,50^FDzzZ^SFnnN,i^FS</div><div>^PQ10</div><div>^XZ</div></div>	<div><div>zzZ</div><div>zzZ</div><div>zzZ</div><div>zzZ</div><div>zzZ</div><div>zzZ</div><div>zzZ</div><div>zzZ</div><div>zzZ</div><div>zzZ</div></div>



Important notes about masking for firmware version V60.14.x, V50.14.x, or later:

- A single % masks an entire combining semantic cluster rather than a single code point.
- The mask string and increment string should be aligned at the last code point in their respective backing stores.
- Control and bidirectional characters do not require a mask and are ignored for serialization purposes.

^SL

Set Mode and Language (for Real-Time Clock)

Description The ^SL command is used to specify the Real-Time Clock’s mode of operation and language for printing information.




Important •

- Time is read when the image is created. If the image stays in the queue longer than the specified time the image will be recreated with a new time.
- There are incidents when the same time or a larger space of time may be printed on labels. This is due to the format complexity and print speed.

Format ^SLa,b

This table identifies the parameters for this format:

Parameters	Details
a = mode	<p><i>Accepted Values:</i></p> <p>S = Start Time Mode. This is the time that is read from the Real-Time Clock when label formatting begins (when ^XA is received). The first label has the same time placed on it as the last label.</p> <p>T = Time Now Mode. This is the time that is read from the Real-Time Clock when the label to be printed is placed in print queue. <i>Time Now</i> is similar to a serialized time or date field.</p> <p>Numeric Value = With the Enhanced Real Time Clock (V60.13.0.10 or later) a time accuracy tolerance can be specified. Range = 1 to 999 seconds, 0 = one second tolerance</p> <p>Example: SL30,1 = Accuracy tolerance of 30 seconds and use English.</p> <p><i>Default Value: S</i></p>

Parameters	Details
b = language	<i>Accepted Values:</i> 1 = English 2 = Spanish 3 = French 4 = German 5 = Italian 6 = Norwegian 7 = Portuguese 8 = Swedish 9 = Danish 10 = Spanish 2 11 = Dutch 12 = Finnish 13 = Japanese <i>Default Value:</i> the language selected with ^KL or the control panel
 Value 13 is only supported in firmware version V60.14.x, V50.14.x, or later.	

Comments These are some comments to be aware of:

- The ^SL command must be placed before the first ^FO command.
- As of V60.13.0.10 all supported printers have Enhanced Real Time Clock capabilities the RTC will not print time fields that are more than sixty seconds old, rather it will update the time prior to printing (^SLT or ^SL60). To control time with increments other than sixty seconds the ^SL command can be used with a numeric value (^SL30).
^SLS can keep times longer than sixty seconds.

^SN

Serialization Data

Description The ^SN command allows the printer to index data fields by a selected increment or decrement value, making the data fields increase or decrease by a specified value each time a label is printed. This can be performed on 100 to 150 fields in a given format and can be performed on both alphanumeric and bar code fields. A maximum of 12 of the right-most integers are subject to indexing. The first integer found when scanning from the end of the backing store towards the beginning starts the indexing portion of the data field.

If the backing store of the alphanumeric field to be indexed ends with an alpha character, the data is scanned, character by character, from the end of the backing store until a numeric character is encountered. Serialization takes place using the value of the first number found.

Format ^SNv,n,z

This table identifies the parameters for this format:

Parameters	Details
v = starting value	<i>Accepted Values:</i> 12-digits maximum for the portion to be indexed <i>Default Value:</i> 1
n = increment or decrement value	<i>Accepted Values:</i> 12-digit maximum <i>Default Value:</i> 1 To indicate a decrement value, precede the value with a minus (-) sign.
z = add leading zeros (if needed)	<i>Accepted Values:</i> N = no Y = yes <i>Default Value:</i> N



Example • This example shows incrementing by a specified value:

ZPL II CODE	GENERATED LABELS
<pre>^XA ^FO260,110 ^CFG ^SN001,1,Y^FS ^PQ3 ^XZ</pre>	<div>001</div> <div>002</div> <div>003</div>
<i>Note: The ZPL II code above will generate three separate labels, seen to the right.</i>	

Comments Incrementing and decrementing takes place for each serial-numbered field when all replicates for each serial number have been printed, as specified in parameter *r* of the ^PQ (print quality) command.

If, during the course of printing serialized labels, the printer runs out of either paper or ribbon, the first label printed (after the media or ribbon has been replaced and calibration completed) has the same serial number as the *partial* label printed before the *out* condition occurred. This is done in case the last label before the *out* condition did not fully print. This is controlled by the ^JZ command.

Using Leading Zeros

In the ^SN command, the *z* parameter determines if leading zeros are printed or suppressed. Depending on which value is used (Y = print leading zeros; N = do not print leading zeros), the printer either prints or suppresses the leading zeros.

The default value for this parameter is N (do not print leading zeros).

Print Leading Zeros

The starting value consists of the first number working backwards in the backing store consecutive sequence of digits. The width (number of digits in the sequence) is determined by scanning from right to left until the first non-digit (space or alpha character) is encountered. To create a specific width, manually place leading zeros as necessary.

Suppressing Leading Zeros

The starting value consists of the first number working backwards in the backing store consecutive sequence of digits, including any leading spaces. The width (number of digits in the sequence) is determined by scanning from right to left until the first alpha character (except a space) is encountered. To create a specific width, manually place leading spaces or zeros as necessary. Suppressed zeros are replaced by spaces. During the serialization process, when the entire number contains all zeros, the last zero is not suppressed.

The ^SN command replaces the Field Data (^FD) command within a label formatting program.

^SO

Set Offset (for Real-Time Clock)

Description The ^SO command is used to set the secondary and the tertiary offset from the primary Real-Time Clock.



Note • For each label only one SO2 command can be used. If more than one offset is required, SO3 must be used.

Format ^SOa,b,c,d,e,f,g

This table identifies the parameters for this format:

Parameters	Details
a = clock set	<i>Accepted Values:</i> 2 = secondary 3 = third <i>Default Value:</i> value must be specified
b = months offset	<i>Accepted Values:</i> -32000 to 32000 <i>Default Value:</i> 0
c = days offset	<i>Accepted Values:</i> -32000 to 32000 <i>Default Value:</i> 0
d = years offset	<i>Accepted Values:</i> -32000 to 32000 <i>Default Value:</i> 0
e = hours offset	<i>Accepted Values:</i> -32000 to 32000 <i>Default Value:</i> 0
f = minutes offset	<i>Accepted Values:</i> -32000 to 32000 <i>Default Value:</i> 0
g = seconds offset	<i>Accepted Values:</i> -32000 to 32000 <i>Default Value:</i> 0

^SP

Start Print

Description The ^SP command allows a label to start printing at a specified point before the entire label has been completely formatted. On extremely complex labels, this command can increase the overall throughput of the print.

The command works as follows: Specify the dot row at which the ^SP command is to begin. This creates a label *segment*. Once the ^SP command is processed, all information in that segment prints. During the printing process, all of the commands after the ^SP continue to be received and processed by the printer.

If the segment after the ^SP command (or the remainder of the label) is ready for printing, media motion does not stop. If the next segment is not ready, the printer stops mid-label and wait for the next segment to be completed. Precise positioning of the ^SP command requires a trial-and-error process, as it depends primarily on print speed and label complexity.

The ^SP command can be effectively used to determine the worst possible print quality. You can determine whether using the ^SP command is appropriate for the particular application by using this procedure.

If you send the label format up to the first ^SP command and then wait for printing to stop before sending the next segment, the printed label is a sample of the worst possible print quality. It drops any field that is out of order.

If the procedure above is used, the end of the label format must be:

^SP#^FS


Format ^SPa

This table identifies the parameters for this format:

Parameters	Details
a = dot row to start printing	<i>Accepted Values:</i> 0 to 32000 <i>Default Value:</i> 0



Example • In this example, a label 800 dot rows in length uses ^SP500. Segment 1 prints while commands in Segment 2 are being received and formatted.

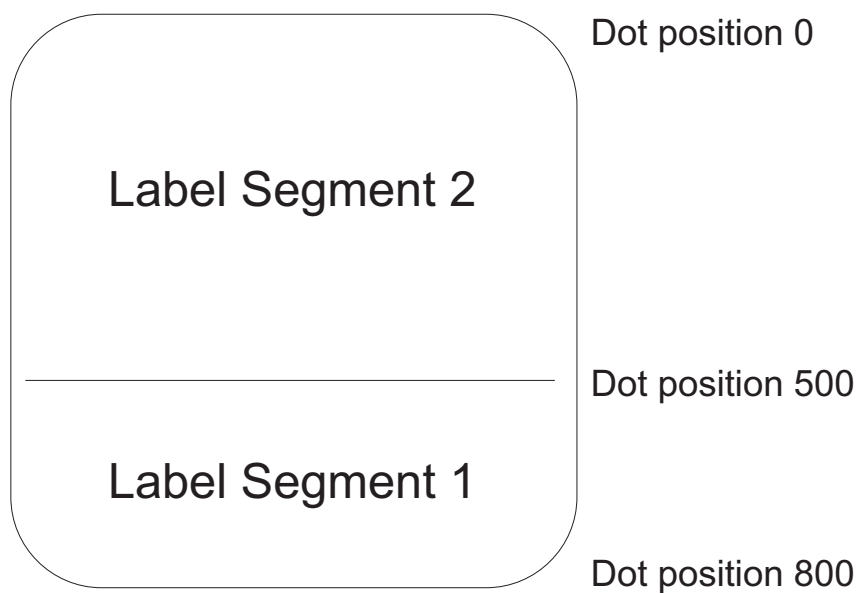

^SQ

Halt ZebraNet Alert

Description The ^SQ command is used to stop the ZebraNet Alert option.

Format ^SQa, b, c

This table identifies the parameters for this format:

Parameters	Details
a = condition type	<i>Accepted Values:</i> A = paper out B = ribbon out C = printhead over-temp D = printhead under-temp E = head open F = power supply over-temp G = ribbon-in warning (Direct Thermal Mode) H = rewind full I = cut error J = printer paused K = PQ job completed L = label ready M = head element out N = reserved O = reserved P = power on Q = clean printhead R = media low S = ribbon low T = replace head U = battery low V = RFID error (in RFID printers only) W = all errors (in RFID printers only) * = all errors (in non-RFID printers)

Parameters	Details
b = destination	<i>Accepted Values:</i> A = serial port B = parallel port C = e-mail address D = TCP/IP E = UDP/IP F = SNMP trap * = wild card to stop alerts for all destinations
c = halt messages	<i>Accepted Values:</i> Y = halt messages N = start messages <i>Default Value:</i> Y

^SR

Set Printhead Resistance

Description The ^SR command allows you to set the printhead resistance.

Format ^SR####

This table identifies the parameters for this format:

Parameters	Details
#### = resistance value (four-digit numeric value)	<i>Accepted Value:</i> 0488 to 1175 <i>Default Value:</i> last permanently saved value

Comments To avoid damaging the printhead, this value should be less than or equal to the value shown on the printhead being used. Setting a higher value could damage the printhead.



Note • New printer models automatically set head resistance.

^SS

Set Media Sensors

Description The ^SS command is used to change the values for media, web, ribbon, and label length set during the media calibration process. The media calibration process is described in your specific printer's user's guide.


Format ^SSw,m,r,l,m2,r2,a,b,c

This table identifies the parameters for this format:

Parameters	Details
w = web (three-digit value)	<i>Accepted Values:</i> 000 to 100 <i>Default Value:</i> value shown on the media sensor profile or configuration label
m = media (three-digit value)	<i>Accepted Values:</i> 000 to 100 <i>Default Value:</i> value shown on the media sensor profile or configuration label
r = ribbon (three-digit value)	<i>Accepted Values:</i> 000 to 100 <i>Default Value:</i> value shown on the media sensor profile or configuration label
l = label length (in dots, four-digit value)	<i>Accepted Values:</i> 0001 to 32000 <i>Default Value:</i> value calculated in the calibration process
m2 = intensity of media LED (three-digit value)	<i>Accepted Values:</i> 000 to 100 <i>Default Value:</i> value calculated in the calibration process
r2 = intensity of ribbon LED (three-digit value)	<i>Accepted Values:</i> 000 to 100 <i>Default Value:</i> value calculated in the calibration process
a = mark sensing (three-digit value)	<i>Accepted Values:</i> 000 to 100 <i>Default Value:</i> value calculated in the calibration process
b = mark media sensing (three-digit value)	<i>Accepted Values:</i> 000 to 100 <i>Default Value:</i> value calculated in the calibration process
c = mark LED sensing (three-digit value)	<i>Accepted Values:</i> 000 to 100 <i>Default Value:</i> value calculated in the calibration process



Example • Below is an example of a media sensor profile. Notice the numbers from 000 to 100 and where the words WEB, MEDIA, and RIBBON appear in relation to those numbers. Also notice the black vertical spike. This represents where the printer sensed the transition from media-to-web-to-media.

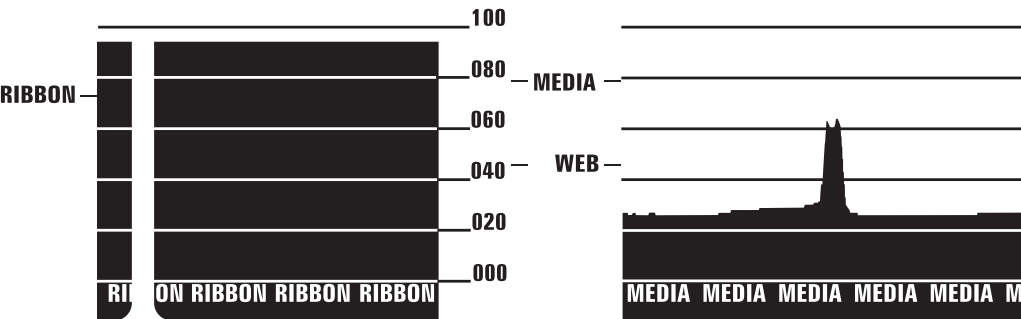

The media and sensor profiles produced vary in appearance from printer to printer.

Comments The `m2` and `r2` parameters have no effect in Stripe® S-300 and S-500 printers. Maximum values for parameters depend on which printer platform is being used.

^ST

Set Date and Time (for Real-Time Clock)

Description The ^ST command sets the date and time of the Real-Time Clock.

Format ^STa,b,c,d,e,f,g

This table identifies the parameters for this format:

Parameters	Details
a = month	<i>Accepted Values:</i> 01 to 12 <i>Default Value:</i> current month
b = day	<i>Accepted Values:</i> 01 to 31 <i>Default Value:</i> current day
c = year	<i>Accepted Values:</i> 1998 to 2097 <i>Default Value:</i> current year
d = hour	<i>Accepted Values:</i> 00 to 23 <i>Default Value:</i> current hour
e = minute	<i>Accepted Values:</i> 00 to 59 <i>Default Value:</i> current minute
f = second	<i>Accepted Values:</i> 00 to 59 <i>Default Value:</i> current second
g = format	<i>Accepted Values:</i> A = a.m. P = p.m. M = 24-hour military <i>Default Value:</i> M

^SX

Set ZebraNet Alert

Description The ^SX command is used to configure the ZebraNet Alert System.

Format ^SXa,b,c,d,e,f

This table identifies the parameters for this format:



Note • The values in this table apply to firmware version v48_12_4 or later.

Parameters	Details
a = condition type	<p><i>Accepted Values:</i></p> <ul style="list-style-type: none">A = paper outB = ribbon outC = printhead over-tempD = printhead under-tempE = head openF = power supply over-tempG = ribbon-in warning (Direct Thermal Mode)H = rewind fullI = cut errorJ = printer pausedK = PQ job completedL = label readyM = head element outN = reservedO = reservedP = power onQ = clean printheadR = media lowS = ribbon lowT = replace headU = battery lowV = RFID error (in RFID printers only)W = all errors (in RFID printers only)* = all errors (in non-RFID printers) <p><i>Default Value:</i> if the parameter is missing or invalid, the command is ignored</p>

Parameters	Details
b = destination for route alert	<p><i>Accepted Values:</i></p> <p>A = serial port B* = parallel port C = e-mail address D = TCP/IP E = UDP/IP F = SNMP trap</p> <p><i>Default Value:</i> if this parameter is missing or invalid, the command is ignored</p> <p>* Requires bidirectional communication.</p>
c = enable <i>condition set</i> alert to this destination	<p><i>Accepted Values:</i></p> <p>N = no Y = yes</p> <p><i>Default Value:</i> Y or previously configured value</p>
d = enable condition clear alert to this destination	<p><i>Accepted Values:</i></p> <p>N = no Y = yes</p> <p><i>Default Value:</i> N or previously configured value</p> <p>Parameters e and f are sub-options based on destination. If the sub-options are missing or invalid, these parameters are ignored.</p>
e = destination setting	<p><i>Accepted Values:</i></p> <p>Internet e-mail address (e.g. user@company.com) IP address (for example, 10.1.2.123) SNMP trap IP or IPX addresses</p>
f = port number	<p><i>Accepted Values:</i></p> <p>TCP port # (0 to 65535) UDP port # (0 to 65535)</p>



Example • This is an example of the different (b) destinations that you can send for the condition type (a):

Serial: ^SXA, A, Y, Y
Parallel: ^SXA, B, Y, Y
E-Mail: ^SXA, C, Y, Y, admin@company.com
TCP: ^SXA, D, Y, Y, 123.45.67.89, 1234
UDP: ^SXA, E, Y, Y, 123.45.67.89, 1234
SNMP Trap: ^SXA, F, Y, Y, 255.255.255.255

Comments In the example above for SNMP Trap, entering 255.255.255.255 broadcasts the notification to every SNMP manager on the network. To route the device to a single SNMP manager, enter a specific address (123.45.67.89).

^SZ

Set ZPL

Description The ^SZ command is used to select the programming language used by the printer. This command gives you the ability to print labels formatted in both ZPL and ZPL II.

This command remains active until another ^SZ command is sent to the printer or the printer is turned off.

Format ^SZa

This table identifies the parameters for this format:

Parameters	Details
a = ZPL version	<i>Accepted Values:</i> 1 = ZPL 2 = ZPL II <i>Default Value:</i> 2

Comments If the parameter is missing or invalid, the command is ignored.

~TA

Tear-off Adjust Position

Description The ~TA command lets you adjust the rest position of the media after a label is printed, which changes the position at which the label is torn or cut.

Format ~TA###



Important • These are some important facts about this command:

- For 600 dpi printers, the step size doubles.
- If the number of characters is **less than** 3, the command is ignored.

This table identifies the parameters for this format:

Parameters	Details
### = change in media rest position (3-digit value in dot rows must be used.)	<i>Accepted Values:</i> -120 to 120 <i>Default Value:</i> last permanent value saved

Comments If the parameter is missing or invalid, the command is ignored.

^TB

Text Blocks



This command is available only for printers with firmware version V60.14.x, V50.14.x, or later.

Description The ^TB command prints a text block with defined width and height. The text block has an automatic word-wrap function. If the text exceeds the block height, the text is truncated. This command supports complex text layout features.



Note • ^TB is the preferred command for printing fields or blocks of text, instead of ^FB.

Format ^TBa , b , c

This table identifies the parameters for this format:

Parameters	Details
a = block rotation	<i>Accepted Values:</i> N = normal R = rotate 90 degrees clockwise I = invert 180 degrees B = read from bottom up-270 degrees <i>Default Value:</i> whatever was specified by the last ^A (which has the default of ^FW)
b = block width in dots	<i>Accepted Values:</i> 1 to the width of the label in dots <i>Default Value:</i> 1 dot
c = block height in dots	<i>Accepted Values:</i> 1 to the length of the label in dots <i>Default Value:</i> 1 dot

Comments Facts about the ^TB command:

- Justification of ^TB command comes from ^FO , ^FT, or ^FN command. If no justification is determined then the default is auto justification.
- Data between < and > is processed as an escape sequence. This is a list of defined escape sequences: <<> prints <.
- The ^TB command has an automatic word-wrap function. Soft hyphens do not print and are not used as a line break position.

^TO

Transfer Object

Description The ^TO command is used to copy an object or group of objects from one storage device to another. It is similar to the copy function used in PCs.

Source and destination devices must be supplied and must be different and valid for the action specified. Invalid parameters cause the command to be ignored.

The asterisk (*) can be used as a wild card for object names and extensions. For instance, ZEBRA.* or *.GRF are acceptable forms for use with the ^TO command.

At least one source parameter (d, o, or x) and one destination parameter (s, o, or x) must be specified. If only ^TO is entered, the command is ignored.

Format ^TOs:o.x,d:o.x

This table identifies the parameters for this format:

Parameters	Details
s = source device of stored object	<i>Accepted Values:</i> R:, E:, B:, and A: <i>Default Value:</i> if a drive is not specified, all objects are transferred to the drive set in parameter s
o = stored object name	<i>Accepted Values:</i> any existing object conforming to Zebra conventions <i>Default Value:</i> if a name is not specified, * is used — all objects are selected
x = extension	<i>Accepted Values:</i> any extension conforming to Zebra conventions <i>Default Value:</i> if an extension is not specified, * is used — all extensions are selected
d = destination device of the stored object	<i>Accepted Values:</i> R:, E:, B:, and A: <i>Default Value:</i> a destination must be specified
o = name of the object at destination	<i>Accepted Values:</i> up to 8 alphanumeric characters <i>Default Value:</i> if a name is not specified, the name of the existing object is used
x = extension	<i>Accepted Values:</i> any extension conforming to Zebra conventions <i>Default Value:</i> if an extension is not specified, the extension of the existing object is used

Comments Parameters o, x, and s support the use of the wild card (*).

If the destination device does not have enough free space to store the object being copied, the command is canceled.

Zebra files (Z:*.*) cannot be transferred. These files are copyrighted by Zebra Technologies.

Transferring Objects

These are some examples of using the ^TO command.



Example • To copy the object **ZLOGO.GRF** from DRAM to an optional Memory Card and rename it **ZLOGO1.GRF**, write the following format:

```
^XA
^TOR:ZLOGO.GRF,B:ZLOGO1.GRF
^XZ
```



Example • To copy the object **SAMPLE.GRF** from an optional Memory Card to DRAM and keep the same name, write this format:

```
^XA
^TOB:SAMPLE.GRF,R:SAMPLE.GRF
^XZ
```

Transferring Multiple Objects

The asterisk (*) can be used to transfer multiple object files (except *.FNT) from DRAM to the Memory Card. For example, assume you have several object files that contain logos. These files are named LOGO1.GRF, LOGO2.GRF, and LOGO3.GRF.

To transfer all these files to the memory card using the name NEW instead of LOGO, place an asterisk after the names NEW and LOGO in the transfer command. This copies all files beginning with LOGO in one command.

```
^XA
^TOR:LOGO*.GRF,B:NEW*.GRF
^XZ
```

During a multiple transfer, if a file is too big to be stored on the memory card, that file is skipped. All remaining files attempt to be transferred. All files that can be stored within the space limitations are transferred, while other files are ignored.

~WC

Print Configuration Label

Description The ~WC command is used to generate a printer configuration label. The printer configuration label contains information about the printer setup, such as sensor type, network ID, ZPL mode, firmware version, and descriptive data on the R:, E:, B:, and A: devices.

Format ~WC

Comments This command works only when the printer is idle.

PRINTER CONFIGURATION	
Zebra Technologies ZTC 170XiIII-300dpi	
+10.....	DARKNESS
+000.....	TEAR OFF
TEAR OFF.....	PRINT MODE
CONTINUOUS.....	MEDIA TYPE
WEB.....	SENSOR TYPE
THERMAL-TRANS.....	PRINT METHOD
168 00/12 MM.....	PRINT WIDTH
1500.....	LABEL LENGTH
39.0IN 988MM.....	MAXIMUM LENGTH
PARALLEL.....	PARALLEL COMM.
RS232.....	SERIAL COMM.
9600.....	BAUD
7 BITS.....	DATA BITS
EVEN.....	PARITY
1 STOP BIT.....	STOP BITS
XON/XOFF.....	HOST HANDSHAKE
NONE.....	PROTOCOL
000.....	NETWORK ID
NORMAL MODE.....	COMMUNICATIONS
< > 7EH.....	CONTROL PREFIX
<^> 5EH.....	FORMAT PREFIX
<,> 2CH.....	DELIMITER CHAR
ZPL II.....	ZPL MODE
FEED.....	MEDIA POWER UP
FEED.....	HEAD CLOSE
DEFAULT.....	BACKFEED
+000.....	LABEL TOP
+0000.....	LEFT POSITION
0000.....	HEAD TEST COUNT
0500.....	HEAD RESISTOR
OFF.....	VERIFIER PORT
OFF.....	APPLICATOR PORT
026.....	WEB S.
075.....	MEDIA S.
072.....	RIBBON S.
000.....	MARK S.
000.....	MARK MED S.
000.....	MEDIA LED
001.....	RIBBON LED
100.....	MARK LED
+10.....	LCD ADJUST
DPSWFXM.....	MODES ENABLED
1984 12/MM FULL.....	MODES DISABLED
1984 12/MM FULL.....	RESOLUTION
V33.10.0PP9 <-.....	SOCKET 1 ID
V33.10.0PP9 <-.....	FIRMWARE
CUSTOMIZED.....	HARDWARE ID
4096.....	CONFIGURATION
4096.....	RAM
NONE.....	B: MEMORY CARD
2048.....	ONBOARD FLASH
NONE.....	FORMAT CONVERT
007 POWER SUPPLY.....	J12 INTERFACE
005 DISPLAY.....	J11 INTERFACE
*** NONE.....	J10 INTERFACE
*** NONE.....	J9 INTERFACE
*** NONE.....	J8 INTERFACE
*** NONE.....	J7 INTERFACE
*** NONE.....	TWINAX/COAX ID
DYNAMIC.....	IP RESOLUTION
ALL.....	IP PROTOCOL
010.003.004.148.....	IP ADDRESS
255.255.255.000.....	SUBNET MASK
010.003.004.001.....	DEFAULT GATEWAY
2000-03-23 15:21:53	TIME STAMP

FIRMWARE IN THIS PRINTER IS COPYRIGHTED

^WD

Print Directory Label

Description The ^WD command is used to print a label listing bar codes, objects stored in DRAM, or fonts.

For bar codes, the list shows the name of the bar code. For fonts, the list shows the name of the font, the number to use with ^A command, and size. For objects stored in DRAM, the list shows the name of the object, extension, size, and option flags. All lists are enclosed in a double-line box.

Format ~WDd:○.x

This table identifies the parameters for this format:

Parameters	Details
d = source device — optional	<i>Accepted Values:</i> R:, E:, B:, A: and Z: <i>Default Value:</i> R:
○ = object name — optional	<i>Accepted Values:</i> 1 to 8 alphanumeric characters <i>Default Value:</i> * The use of a ? (question mark) is also allowed.
x = extension — optional	<i>Accepted Values:</i> any extension conforming to Zebra conventions .FNT = font .BAR = bar code .ZPL = stored ZPL format .GRF = GRF graphic .CO = memory cache .DAT = font encoding .STO = data storage .PNG = PNG graphic * = all objects .TTF = TrueType Font .TTE = True Type Extension <i>Default Value:</i> * The use of a ? (question mark) is also allowed.

.14↑

.TTF and .TTE are only supported in firmware version V60.14.x, V50.14.x, or later.



Example • To print a label listing all objects in DRAM, enter:

```
^XA
^WDR:*.*
^XZ
```



Example • To print a label listing all resident bar codes, enter:

```
^XA  
^WDZ:* .BAR  
^XZ
```



Example • To print a label listing all resident fonts, enter:

```
^XA  
^WDZ:* .FNT  
^XZ
```

^XA

Start Format

Description The ^XA command is used at the beginning of ZPL II code. It is the opening bracket and indicates the start of a new label format. This command is substituted with a single ASCII control character STX.

Format ^XA

Comments Valid ZPL II format requires that label formats should start with the ^XA command and end with the ^XZ command.

^XB

Suppress Backfeed

Description The ^XB command suppresses forward feed of media to tear-off position depending on the current printer mode. Because no forward feed occurs, a backfeed before printing of the next label is not necessary; this improves throughput. When printing a batch of labels, the last label should not contain this command.

Format ^XB

^XB in the Tear-off Mode

Normal Operation: backfeed, print, and feed to rest

^XB Operation: print (Rewind Mode)

^XB in Peel-off Mode

Normal Operation: backfeed, print, and feed to rest

^XB Operation: print (Rewind Mode)



Note • To prevent jamming in cutter mode, ^XB suppresses backfeed and cutting.

^XF

Recall Format

Description The ^XF command recalls a stored format to be merged with variable data. There can be multiple ^XF commands in one format, and they can be located anywhere within the code.

When recalling a stored format and merging data using the ^FN (Field Number) function, the calling format must contain the ^FN command to merge the data properly.

While using stored formats reduces transmission time, no formatting time is saved. The ZPL II format being recalled is saved as text strings that need to be formatted at print time.

Format ^XF \bar{d} : \bar{o} . \bar{x}

This table identifies the parameters for this format:

Parameters	Details
\bar{d} = source device of stored image	<i>Accepted Values:</i> R:, E:, B:, and A: <i>Default Value:</i> search priority (R:, E:, B:, and A:)
\bar{o} = name of stored image	<i>Accepted Values:</i> 1 to 8 alphanumeric characters <i>Default Value:</i> if a name is not specified, UNKNOWN is used
\bar{x} = extension l	<i>Fixed Value:</i> .ZPL

For a complete example of the ^DF and ^XF command, see [^DF and ^XF — Download format and recall format on page 11](#).

^XG

Recall Graphic

Description The ^XG command is used to recall one or more graphic images for printing. This command is used in a label format to merge graphics, such as company logos and piece parts, with text data to form a complete label.

An image can be recalled and resized as many times as needed in each format. Other images and data might be added to the format.

Format ^XGd:○.x, mx, my

This table identifies the parameters for this format:

Parameters	Details
d = source device of stored image	<i>Accepted Values:</i> R:, E:, B:, and A: <i>Default Value:</i> search priority (R:, E:, B:, and A:)
○ = name of stored image	<i>Accepted Values:</i> 1 to 8 alphanumeric characters <i>Default Value:</i> if a name is not specified, UNKNOWN is used
x = extension l	<i>Fixed Value:</i> .GRF
mx = magnification factor on the x-axis	<i>Accepted Values:</i> 1 to 10 <i>Default Value:</i> 1
my = magnification factor on the y-axis	<i>Accepted Values:</i> 1 to 10 <i>Default Value:</i> 1



Example • This is an example of using the ^XG command to recall the image SAMPLE.GRF from DRAM and print it in five different sizes in five different locations on the same label:

```
^XA
^FO100,100^XGR: SAMPLE.GRF,1,1^FS
^FO100,200^XGR: SAMPLE.GRF,2,2^FS
^FO100,300^XGR: SAMPLE.GRF,3,3^FS
^FO100,400^XGR: SAMPLE.GRF,4,4^FS
^FO100,500^XGR: SAMPLE.GRF,5,5^FS
^XZ
```

^XZ

End Format

Description The ^XZ command is the ending (closing) bracket. It indicates the end of a label format. When this command is received, a label prints. This command can also be issued as a single ASCII control character ETX.

Format ^XZ

Comments Label formats must start with the ^XA command and end with the ^XZ command to be in valid ZPL II format.

^ZZ

Printer Sleep

Description The ^ZZ command places the printer in an idle or shutdown mode.

Format ^ZZt,b

This table identifies the parameters for this format:

Parameters	Details
t = number of second (idle time) prior to shutdown	<i>Accepted Values:</i> 0 to 999999 – setting 0 disables automatic shutdown <i>Default Value:</i> last permanently saved value or 0
b = label status at shutdown	<i>Accepted Values:</i> Y = indicates to shutdown when labels are still queued N = indicates all labels must be printed before shutting down <i>Default Value:</i> N

Comments The ^ZZ command is only valid on the PA400 and PT400 battery-powered printers.



Notes •



RFID Commands

This section contains the ZPL II commands for RFID-specific applications.

For more information about the RFID commands, refer to the *RFID Programming Guide*. A copy is available on the User CD provided with your printer and online at <http://www.zebra.com/manuals>.

RFID Command Overview

In addition to reading or encoding RFID tags, the RFID ZPL commands also provide for RFID exception handling, such as setting the number of read/write retries before declaring a transponder defective (set with ^RR, ^RT, and ^WT) or setting the number of labels that will be attempted if an error occurs (set with ^RS).

For example, if an RFID label fails to program correctly or if the transponder cannot be detected, the printer ejects the label and prints VOID across it. The printer will try to print another label with the same data and format for the number of RFID labels specified by the ^RS command. If the problem persists, the printer follows the error handling instructions specified by the ^RS command: the printer may remove the problematic format from the print queue and proceed with the next format (if one exists in the buffer), or it may place the printer in Pause or Error mode.



Important • Consider the following before using any command in this section:

- Before using a particular command, verify that it is compatible with your printer and firmware version. See [Table 13 on page 299](#).
- If a parameter in the following tables is designated as *not applicable* for a particular printer, any value entered for the parameter will be ignored, but the place holder for the field is required.

Printer and Firmware Compatibility

Table 13 shows which RFID ZPL commands you can use with different printers and firmware versions.

Table 13 • Supported Commands Based on Printer and Firmware

Command	Function	UHF Printers						HF Printers	
		R60.13.X	R62.13.X	R63.13.X	SP920X	SP994X, SP999X, SP1027X	SP1056X	R110X/i HF	R2844-Z
		R110X/i R170X/i	R110PAX4		R4Mplus				
^HL or ~HL on page 300	Return RFID Data Log to Host	*	*	*	—	*	*	*	—
^HR on page 301	Calibrate RFID Transponder Position	*	*	*	—	*	*	*	—
^RA on page 304	Read AFI or DSFID Byte	—	—	—	—	—	—	*	—
^RB on page 306	Define EPC Data Structure	*	*	*	—	*	*	*	—
^RE on page 308	Enable/Disable E.A.S. Bit	—	—	—	—	—	—	*	*
^RF on page 309	Read or Write RFID Format	*	*	*	—	*	*	*	—
^RI on page 311	Get RFID Tag ID	*a	—	—	—	*	—	*	*
^RM on page 312	Enable RFID Motion	*	*	*	—	*	*	*	—
^RN on page 313	Detect Multiple RFID Tags in Encoding Field	* b	*	*	—	—	—	*	—
~RO on page 314	Reset Advanced Counters	*	*	*	—	*	*	*	—
^RR on page 316	Specify RFID Retries for a Block	*	*	*	—	*	*	*	—
^RS on page 317	Set Up RFID Parameters	*	*	*	*	*	*	*	*
^RT on page 323	Read RFID Tag	* c	* c	* c	*	* c	* c	* c	*
~RV on page 325	Report RFID Encoding Results	*	*	*	—	—	—	—	—
^RW on page 326	Set RFID Read and Write Power Levels	*	*	*	—	*	*	*	—
^RZ on page 327	Set RFID Tag Password and Lock Tag	*	*	*	—	*	*	—	—
on page 328	Encode AFI or DSFID Byte	—	—	—	—	—	—	*	—
^WT on page 331	Write (Encode) Tag	* d	* d	* d	*	* d	* d	* d	*
^WV on page 333	Verify RFID Encoding Operation	*	*	*	—	*	*	—	—

a. Requires R60.13.0.13ZD or later.

b. Requires R60.13.0.3 or later.

c. Use the ^RF, ^RM, and ^RR commands rather than the ^RT command. The ^RT command is provided only for backward-compatibility with label formats that were developed for older Zebra RFID printers.

d. Use the ^RF, ^RM, ^RR, and ^WV commands rather than the ^WT command. The ^WT command is provided only for backward-compatibility with label formats that were developed for older Zebra RFID printers.

^HL or ~HL

Return RFID Data Log to Host

Description The printer continually logs RFID data and stores it in the printer's RAM. Use this command to request that the RFID data log be returned to the host computer, to clear the current data log, and to restart data recording. The data returned show the status of the RFID read, write, and lock commands and show any resulting error codes.

Format ^HL or ~HL

Comments

- Data is shown in the format sent by the ^RFW command (ASCII, Hex, or EPC).
- In the log, the data displays in this manner:
`C, EEEE, DDDDDDDDDDDDDDDDDDDDDDDDD`
 where
`C` = the RFID operation (R = read, W = write, L = lock)
`EEEE` = the RFID error code
`DDDDDDDDDDDDDDDDDDDDDDDD` = data read or written
- If the log exceeds 64K (approximately 2000 operations), the data log is cleared automatically, and data recording restarts. When this happens, the following appears in the log:
`Logfile automatically reset`
- If the printer loses power, the log is lost. If the log results are important to you, retrieve the log frequently.



Calibrate RFID Transponder Position



Important • This command is not supported by all printers or firmware. See [Table 13 on page 299](#) for the list of printers and firmware with which you can use this command.

Description Use this command to initiate an RFID transponder calibration for a specific RFID label. Results are returned to the host computer. This calibration is used to determine the optimal programming position for RFID media that may not meet the transponder placement specifications for the printer.

Do not perform transponder calibration for RFID media that meets the transponder placement specifications for your printer. Doing so will slow the printer's throughput unnecessarily. To order media that is designed for use with your RFID printer, contact your authorized Zebra reseller.

During transponder calibration, the printer feeds the RFID label one-dot row at a time while taking readings (via the READ TAG command and the WRITE TAG commands) to profile the RFID transponder. Based on the results, the printer determines the optimal programming position for the label and returns a results table to the host. The calibrated value is used as the programming position for the ^RS command, can be overwritten by the ^RS command, and is saved to nonvolatile memory (the value is saved even if the power is turned off).

This calibration takes into account the print mode, backfeed mode, and tear off position. The **RUN** option in the **RFID TAG CALIB** control panel parameter performs the same calibration but does not create a results table.



Important • If a label format specifies a value for parameter p (read/write position of the transponder) in the ^RS command, that value will be used for the programming position for all RFID labels until a new position is specified or until the printer is turned Off (O) and then back On (I).

Format ^HRa , b

This table identifies the parameters for this format.

Parameters	Details
a = start string	User text to appear before the results table. <i>Accepted values:</i> any string less than 65 characters <i>Default value:</i> start
b = end string	User text to appear after the results table. <i>Accepted values:</i> any string less than 65 characters <i>Default value:</i> end

Comments

- Based on the recommended transponder placement position for most RFID labels, the printer's default RFID programming position is zero for the R110PAX4. For other RFID printers, the default programming position is the label length minus 1 mm (0.04 in.). To return to the default programming position at any time, use the RESTORE option in the **RFID TAG CALIB** control panel parameter.
- At the end of calibration, a results table is returned to the host. Each line in the results table appears as:

Row, Read Result, Write Result

where

Row = the dot row where calibration occurred

Read Result = results of calibration (R = read, “ ” = unable to read)

Write Result = results of calibration (W = write, “ ” = unable to write)



Example • If the following command is sent to the printer:

```
^XA^HR^XZ
```

The printer starts the transponder calibration and returns a results table such as the following:

```
start
position=195
215, ,
214, ,
213, ,
212, ,
211, ,
210, ,W
209,R,
208, ,
207, ,
206, ,W
205,R,
204, ,
203, ,
202, ,W
201,R,W
200,R,W
199,R,W
198,R,W
197,R,W
196,R,W
195,R,W <---****
194,R,W
193,R,W
192,R,W
191,R,W
190,R,W
189,R,
188, ,
187, ,
186, ,
185, ,
.
.
.
end
```

In this example, the optimal programming position is 195. This is identified at the top of the table (position=195) and with an the arrow (<---****) in the table.

^RA

Read AFI or DSFID Byte



Important • This command is not supported by all printers or firmware. See [Table 13 on page 299](#) for the list of printers and firmware with which you can use this command.

Description Use this command to read the AFI or DSFID byte. The data can be returned to the host via the ^HV command.

Format ^RA#, f, r, m, b

This table identifies the parameters for this format.

Parameters	Details
# = field number specified with another command	The value assigned to this parameter should be the same as the one used in the ^RT command. <i>Accepted values:</i> 0 to 9999 <i>Default value:</i> 0
f = format	<i>Accepted values:</i> 0 = ASCII 1 = Hexadecimal <i>Default value:</i> 0
r = number of retries	<i>Accepted values:</i> 0 to 10 <i>Default value:</i> 0
m = motion	<i>Accepted values:</i> 0 = Feed label after writing. 1 = No Feed after writing. Other ZPL may cause a feed. <i>Default value:</i> 0
b = type of byte to read	<i>Accepted values:</i> A = AFI byte D = DSFID byte <i>Default value:</i> A



Example 1 • This example reads the AFI byte in ASCII format and returns AFI Byte:x to the host. The printer will retry the command five times if necessary. A voided label is generated if the read is unsuccessful after these retries. The data read will go into the ^FN1 location of the recalled format.

```
^XA
^FO20,120^A0N,60^FN1^FS
^RA1,0,5,0^FS
^HV1,,AFI Byte:^FS
^XZ
```



Example 2 • This example reads the DSFID byte in ASCII format and returns DSFID Byte:x to the host. The printer will retry the command three times if necessary. A voided label is generated if the read is unsuccessful after these retries. The data read will go into the ^FN1 location of the recalled format.

```
^XA
^FO20,120^A0N,60^FN1^FS
^RA1,0,3,0,D^FS
^HV1,,DSFID Byte:^FS
^XZ
```

^RB

Define EPC Data Structure



Important • This command is not supported by all printers or firmware. See [Table 13 on page 299](#) for the list of printers and firmware with which you can use this command.

Description Use this command to define the structure of EPC data, which can be read from or written to an RFID transponder. For more information about EPC specifications, refer to the EPC Global web site. All parameters in this command are persistent and will be used in subsequent formats if not provided. The values are initially set to the default values.

RFID transponders can have different partitions defined. This command specifies the number of partitions and how many bits are in each partition.

Format ^RBn,p0,p1,p2, . . . , p15

This table identifies the parameters for this format.

Parameters	Details
n = total bit size of the partitions	Specify the number of bits to include in the partitions. <i>Accepted values:</i> 1 to n, where n is the bit size of the tag. <i>Default value:</i> 96
p1 . . . p15 = partition sizes	Specify the number of bits to include in the individual partitions. The partition sizes must add up to the bit size specified for the previous parameter. The largest individual partition size is 64 bits. <i>Accepted values:</i> 1 to 64 <i>Default value:</i> 1



Example 1 • The following command specifies that there are 96 bits used with three fields. Fields 1, 2, and 3 contain 10, 26, and 60 bits, respectively.

^RB96,10,26,60

The ZPL code to encode a tag with this format would look like this:

^RFW,E^FD1000.67108000.1122921504606846976^FS

When the tag is being encoded, the tag stores the data in the following way:

- Field 1 contains 1000. This value is stored in the first 10 bits
- Field 2 contains 67108000. This value is stored in the next 26 bits.
- Field 3 contains 1122921504606846976. This value is stored in the remaining 60 bits.



Example 2 • The following command specifies that there are 64 bits used with eight 8-bit fields.

```
^RB64,8,8,8,8,8,8,8,8^FS
```

The ZPL code to encode a tag with this format would look like this:

```
^RFW,E^FD1.123.160.200.249.6.1.0^FS
```

When writing to the tag, each set of data is written in its respective 8-bit field.



Example 3 • This example uses the SGTIN-64 standard, which defines 64-bit structure in the following way:

	Header	Filter Value	Company Prefix Index	Item Reference	Serial Number
SGTIN-64	2 bits	3 bits	14 bits	20 bits	25 bits
	10 (binary value)	8 (decimal capacity)	16,383 (decimal capacity)	9 to 1,048,575 (decimal capacity*)	33,554,431 (decimal capacity)

* Capacity of Item Reference field varies with the length of the company prefix.

The ZPL code to encode a tag with this format would look like this:

```
^XA
^RB64,2,3,14,20,25
^RFW,E^FD0,3,12345,544332,22335221^FS
^XZ
```


These commands would put

- 0 in the header
- 3 as the filter value
- 12345 as the company prefix
- 544332 as the item reference
- 22335221 as the serial number

To read this EPC data and print the results on the label, you would use the following code:

```
^XA
^RB64,2,3,14,20,25
^FO50,50^A0N,40^FN0^FS
^FN0^RFR,E^FS
^XZ
```

The resulting label would look like this:

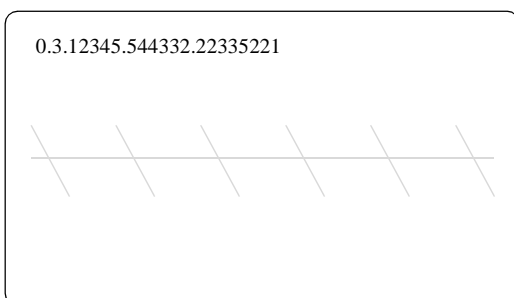

^RE

Enable/Disable E.A.S. Bit



Important • This command is not supported by all printers or firmware. See [Table 13 on page 299](#) for the list of printers and firmware with which you can use this command.

Description Use this command to enable or disable the Electronic Article Surveillance (E.A.S.) bit that is available in some ISO15693 tags (such as Philips). This command works only on those ISO15693 transponders and will be ignored if the tag does not support E.A.S.

Format ^REt,r

The following table identifies the parameters for this format.

Parameters	Details
t = Enable/disable the E.A.S. bit in the ISO15693 transponder	<i>Accepted values:</i> N = Disable E.A.S. Y = Enable E.A.S. <i>Default value:</i> N
r = number of retries	<i>Accepted values:</i> 0 to 10 <i>Default value:</i> 0



Example • This example enables the E.A.S. bit in the transponder. It will retry the command five times if necessary.

```
^XA
^REY,5
^XZ
```



Read or Write RFID Format




Important • This command is not supported by all printers or firmware. See [Table 13 on page 299](#) for the list of printers and firmware with which you can use this command.

Description Use this command to read or write to (encode) an RFID tag. When using this command to read a tag, you may use a field variable to print the tag data on the label or to return the data to the host.

Format ^RF \circ , f, b, n

This table identifies the parameters for this format.

Parameters	Details
\circ = operation	<p>The action to be performed.</p> <p><i>Accepted values:</i></p> <ul style="list-style-type: none"> W = write to (encode) the tag L = write with LOCK (if supported by tag type; Gen 2 does not use this locking function) R = read the tag P = read password (Gen 2 only) <p><i>Default value:</i> W</p>
f = format	<p><i>Accepted values:</i></p> <ul style="list-style-type: none"> A = ASCII H = Hexadecimal E = EPC (ensure proper setup with the ^RB command) <p><i>Default value:</i> H</p>
b = starting block number	<p>Gen 2 tags</p> <p>Which password to read when P is specified for the operation.</p> <p><i>Accepted values:</i></p> <ul style="list-style-type: none"> K = kill password A = access password <p>Other Tag Types</p> <p><i>Accepted values:</i> 0 to n, where n is the maximum number of blocks for the tag.</p> <p><i>Default value:</i> 0</p>
n = number of bytes to read or write	<div>  <p>Note • This parameter is used only by the R4Mplus with firmware version SP994X (R4Mplus European version).</p> </div> <p>This parameter applies only when the starting block number is 1.</p> <p><i>Accepted values:</i> 1 to n, where n is the maximum number of bytes for the tag. For UCODE EPC 1.19, n is 32.</p> <p><i>Default value:</i> 1</p>



Examples •

Encode ASCII

This example encodes 96-bit data.

```
^XA
^RS4
^RFw,a^FD00 my data^FS
^XZ
```

Encode Hex

This example encodes 64-bit data.

```
^XA
^RS3
^RFw,H^FD1122334455667788^FS
^XZ
```

Encode EPC

This example encodes 96-bit data, as specified by the ^RB command.

```
^XA
^RB96,8,3,3,20,24,38
^RFw,e^FD16,3,5,78742,146165,1234567891^FS
^XZ
```


^RI**Get RFID Tag ID**

Important • This command is not supported by all printers or firmware. See [Table 13 on page 299](#) for the list of printers and firmware with which you can use this command.

Description Use this command to get the unique serial number of the tag and return it in hexadecimal format. The data can be sent back to the host via the ^HV command.

Format ^RI#,s,r,m

This table identifies the parameters for this format.

Parameters	Details
# = number to be assigned to the field	<i>Accepted values:</i> 0 to 9999 <i>Default value:</i> 0
s = specify data order	 Note • This parameter applies only to the R110Xi HF and R2844-Z printers. <i>Accepted values:</i> 0 = Most significant byte first for Tag*It and PicoTag. Least significant byte first for I*code and ISO15693. 1 = Reverse the data order <i>Default value:</i> 0
r = number of retries	<i>Accepted values:</i> 0 to 10 <i>Default value:</i> 0
m = motion	<i>Accepted values:</i> 0 = Feed label after writing. 1 = No Feed after writing. Other ZPL may cause a feed. <i>Default value:</i> 0



Example • This example reads a tag ID, prints it on a label, and sends string Tag ID:xxxxxxxxx to the host. The data read will go into the ^FN0 location of the format. The printer will retry the command five times, if necessary.

```
^XA
^FO20,120^A0N,60^FN0^FS
^RI0,,5^FS
^HV0,,Tag ID:^FS
^XZ
```

^ RM

Enable RFID Motion



Important • This command is not supported by all printers or firmware. See [Table 13 on page 299](#) for the list of printers and firmware with which you can use this command.

Description Use this command to enable or disable RFID motion. By default, labels automatically print at the end of the format. This command allows you to inhibit the label from actually moving when it reaches the program position, which is useful for debugging, setup, and custom applications. This parameter is not persistent (carried over from label to label).

Format ^RM`e`

This table identifies the parameters for this format.

Parameters	Details
<code>e</code> = enable	<i>Accepted values:</i> <div><code>Y</code> = Yes, move the label <code>N</code> = No, do not move the label</div> <i>Default value:</i> <code>Y</code>

^RN

Detect Multiple RFID Tags in Encoding Field



Important • This command is not supported by all printers or firmware. See [Table 13 on page 299](#) for the list of printers and firmware with which you can use this command.

Description Use this command to enable or disable detection of multiple RFID tags in the encoding field. By default, the printer checks for more than one tag in the field before attempting to read or write. If more than one tag is found, the label over the antenna support is voided, and the **RFID ERR STATUS** parameter on the control panel displays **MULTIPLE TAGS**. To speed up printing and encoding by up to 200 ms, the check may be disabled. This parameter is persistent (carried over from label to label).

Format ^RNe

The following table identifies the parameters for this format.

Parameters	Details
e = enable	<i>Accepted Values:</i> Y = Yes, check for multiple tags N = No, do not check for multiple tags <i>Default Value:</i> Y

~RO

Reset Advanced Counters



Important • This command is not supported by all printers or firmware. See [Table 13](#) on page 299 for the list of printers and firmware with which you can use this command.

Description Use this command to reset the advanced counters used by the printer to monitor label generation in inches and centimeters, the number of labels printed, and the number of valid and voided RFID labels. Any single error during programming of an RFID tag will result in that label being considered “void” by the counter.

Four resettable counters are available. The values for the counters are displayed on the printer configuration label.



Note • For the R4Mplus, the counter values are not saved, so power cycling the printer resets all counters to zero.

Format ~ROc

This table identifies the parameters for this format:

Parameters	Details
c = counter to reset	<p><i>Accepted Values:</i></p> <ul style="list-style-type: none">1 = counter 12 = counter 23 = valid RFID label counter4 = voided RFID label counter <p><i>Default Value:</i> None. If a value is not specified, the command is ignored.</p>



Example 1 • This example shows how the counter portion of the printer configuration labels looks when counter 1 is reset by sending ~RO1.

Before

```
→ 296862 IN..... NONRESET CNTR
→ 296862 IN..... RESET CNTR1
→ 296862 IN..... RESET CNTR2
→ 753289 CM..... NONRESET CNTR
→ 753289 CM..... RESET CNTR1
→ 753289 CM..... RESET CNTR2
→ 92928 LABLS..... NONRESET CNTR
→ 92928 LABLS..... RESET CNTR1
→ 92928 LABLS..... RESET CNTR2
```



After

```
→ 296876 IN..... NONRESET CNTR
→ 0 IN..... RESET CNTR1
→ 296876 IN..... RESET CNTR2
→ 753323 CM..... NONRESET CNTR
→ 0 CM..... RESET CNTR1
→ 753323 CM..... RESET CNTR2
→ 92930 LABLS..... NONRESET CNTR
→ 0 LABLS..... RESET CNTR1
→ 92930 LABLS..... RESET CNTR2
```





Example 2 • This example shows how the counter portion of the printer configuration labels looks when the RFID counters are reset by sending ~RO3 and ~RO4.

Before



02/10/05..... RTC DATE
07:21..... RTC TIME
507..... RFID VALID CTR
4..... RFID VOID CTR
HIGH..... RFID READ PWR
HIGH..... RFID WRITE PWR
RFID OK..... RFID ERR STATUS
Class 0..... RFID TAG TYPE
TM: 20050201..... RFID VERSION
1950 IN..... NONRESET CNTR
1950 IN..... RESET CNTR1
1950 IN..... RESET CNTR2

After



02/10/05..... RTC DATE
07:21..... RTC TIME
0..... RFID VALID CTR
0..... RFID VOID CTR
HIGH..... RFID READ PWR
HIGH..... RFID WRITE PWR
RFID OK..... RFID ERR STATUS
Class 0..... RFID TAG TYPE
TM: 20050201..... RFID VERSION
1951 IN..... NONRESET CNTR
1951 IN..... RESET CNTR1
1951 IN..... RESET CNTR2

^ RR

Specify RFID Retries for a Block



Important • This command is not supported by all printers or firmware. See [Table 13 on page 299](#) for the list of printers and firmware with which you can use this command.

Description Use this command to change the number of times that the printer attempts to read or write to a particular block of a single RFID tag. By default, the printer will attempt six retries. This command is persistent and will be used in subsequent formats if not provided.



Note • This command’s function is different than the “number of labels” parameter in the ^RS command.

Format ^RRn

This table identifies the parameters for this format.

Parameters	Details
n = number of retries	<i>Accepted values:</i> 0 to 10 <i>Default value:</i> 0



Examples •

Set read block retries to 5

```
^XA
^FN1^RR5^RFR,H^FS
^HV1^FS
^XZ
```

Set write block retries to 2

```
^XA
^RR2^RFW,H^FD1234^FS
^XZ
```

^RS

Set Up RFID Parameters


Description Use this command to set up RFID parameters including tag type, read/write position of the transponder, and error handling.







Important • Use care when using this command in combination with ^RT or ^RF for reading tag data. Problems can occur if the data read from the tag is going to be printed on the label. Any data read from the transponder must be positioned to be printed above the read/write position. Failure to do this will prevent read data from being printed on the label.

Format ^RSt,p,v,n,e,a,c,s

This table identifies the parameters for this format.

Parameters	Details
t = tag type	<p>Tells the printer/print engine which tag type you are using. If you specify a tag type that is not supported by your printer or firmware, the printer uses the default value. For the supported tag types and defaults, see Table 14 on page 320.</p> <p>UHF Printers</p> <ul style="list-style-type: none">0 = None1 = EPC Class 02 = EPC Class 0 Plus3 = EPC Class 1 64-bit4 = EPC Class 1 96-bit5 = UCODE EPC 1.196 = Impinj Class 0 Plus7 = ISO 18000-06A8 = EPC Class 1, Generation 2 (Gen 2)9 = ISO 18000-06B <p>HF Printers</p> <p> Note • Only the R110Xi HF printer (firmware version R65.X.X) supports the use of letters for this parameter. All other printers use the numbers.</p> <ul style="list-style-type: none">A or 0 = NoneB or 1 = Auto detect (query tag to determine)C or 2 = Tag*It (Texas Instruments Tagit tags)D or 3 = I*code (Phillips Icode tags)E or 4 = Pico Tag (Inside Technology's)F or 5 = ISO 15693G or 6 = EPC tag (13.56 MHz)H or 7 = UID TagI or 8 = Mifare UltraLight

Parameters	Details
p = read/write position of the transponder	<p>Sets the read/write position of the transponder in vertical (Y axis) dot rows from the top of the label. Set to 0 (no movement) if the transponder is already in the effective area without moving the media.</p> <p> Important • If a label format specifies a value for this parameter, this value will be used for the programming position for all labels until a new position is specified or until the printer is turned off (O) and then back on (I).</p> <p><i>Accepted values:</i> 0 to label length</p> <p><i>Default value:</i></p> <p>For the R110PAX4 and R2844-Z: 0</p> <p>For all other supported printers: label length minus 1 mm (1/16 in.)</p>
v = length of void printout	<p>Sets the length of the void printout in vertical (Y axis) dot rows.</p> <p><i>Accepted values:</i> 0 to label length</p> <p><i>Default value:</i> label length</p>
n = number of labels	<p>The number of labels that will be attempted in case of read/encode failure.</p> <p><i>Accepted values:</i> 1 to 10</p> <p><i>Default value:</i> 3</p>
e = error handling	<p>If an error persists after the specified number of labels are tried, perform this error handling action.</p> <p><i>Accepted values:</i></p> <ul style="list-style-type: none"> N = No action (printer drops the label format causing the error and moves to the next queued label) P = Place printer in Pause mode (label format stays in the queue until the user cancels) E = Place printer in Error mode (label format stays in the queue until the user cancels) <p><i>Default value:</i> N</p> <p> Note • You can set the printer to send an error message to the host for each failure. To enable or disable this unsolicited error message, refer to the ^SX and ^SQ ZPL commands. Use V for the condition type for an RFID error.</p>

Parameters	Details
a = signals on applicator	 Note • This parameter does not apply to the R2844-Z. For the R4Mplus, this parameter applies only to printers with firmware version SP994X (R4Mplus European version). When the value for parameter p (read/write position of the transponder) is nonzero, this parameter changes the number of start and stop print signals required for printing. In Single mode, one start print command is required. In Double mode, two are required, so the printer will resume printing only after the second start print command is received. <i>Accepted values:</i> S = single signal D = double signal (For the R110PAX4, Double mode will work only if the read/write position is changed from the default of zero.) <i>Default value:</i> S
c = certify tag with a pre-read	Not applicable.
s = void print speed	 Note • This parameter does not apply to the R2844-Z. For the R4Mplus, this parameter applies only to printers with firmware version SP994X (R4Mplus European version). If a label is voided, the speed at which “VOID” will be printed across the label. <i>Accepted values:</i> any valid print speed <i>Default value:</i> the printer’s maximum print speed

Supported Tag Types Table 14 shows the tag types supported by different RFID printers/print engines and firmware versions. Depending on your country or on the firmware version that you are using, your printer may not support all of the tag types listed. If you specify an unsupported tag type in the ^RS command, the printer uses the default value. If a tag type is shown as supported but does not work with your printer, you may need to upgrade the printer's firmware (see <http://www.zebra.com/firmware>).

Table 14 • Supported Tag Types and Default Values

Tag Type	UHF Printers						HF Printers	
	R60.13.X	R62.13.X	R63.13.X	SP920X	SP994X, SP999X, SP1027X	SP1056X	R110X/ HF	R2844-Z
	R110Xi/ R170Xi	R110PAX4		R4Mplus				
UHF Tag Types and Options								
None (no tag type specified)	*	*	—	—	—	—	—	—
EPC Class 0	*	*	—	—	—	—	—	—
EPC Class 0 Plus	*	*	—	—	—	—	—	—
EPC Class 1 64-bit	*	*	—	*	*	—	—	—
EPC Class 1 96-bit	#	#	—	#	*	—	—	—
UCODE EPC 1.19	*a	—	—	—	—	*	—	—
Impinj Class 0 Plus	*	*	—	—	—	—	—	—
ISO 18000-06A	—	*	—	—	*	—	—	—
EPC Class 1, Generation 2 (Gen 2)	*	*	—	—	*	#	—	—
ISO 18000-06B	*	*	—	—	#	—	—	—
HF Tag Types and Options								
Auto-detect the tag type by querying the tag	—	—	—	—	—	—	—	#
Tag*It (Texas Instruments Tagit tags)	—	—	—	—	—	—	—	*
I*code (Phillips Icode tags)	—	—	—	—	—	—	—	*
Pico Tag (Inside Technology's)	—	—	—	—	—	—	—	*
ISO 15693	—	—	—	—	—	—	#	*
EPC tag	—	—	—	—	—	—	—	*
UID Tag	—	—	—	—	—	—	—	—
Mifare UltraLight	—	—	—	—	—	—	*	—

= Default value

* = Accepted value

a. Requires R60.13.0.13ZD or later.




Example 1 • This example sets the printer to move the media to 800 dots from the top of the media [or label length minus 800 from the bottom (leading edge) of the media] and voids the rest of the media in case of an error. The printer will try to print two labels and then will pause if printing and encoding fail.

```
^XA  
^RS,800,,2,P^FS  
^XZ
```

Figure 3 shows the resulting voided label. Note where the void starts. The media has been moved 800 dot rows from the top of the label (label length minus 800 dot rows from the bottom (leading edge) of a label) to bring the transponder into the effective area to read/write a tag. If the printer fails the operation, the rest of the media is voided.

Figure 3 • Sample Void Label, Remainder of Label Voided

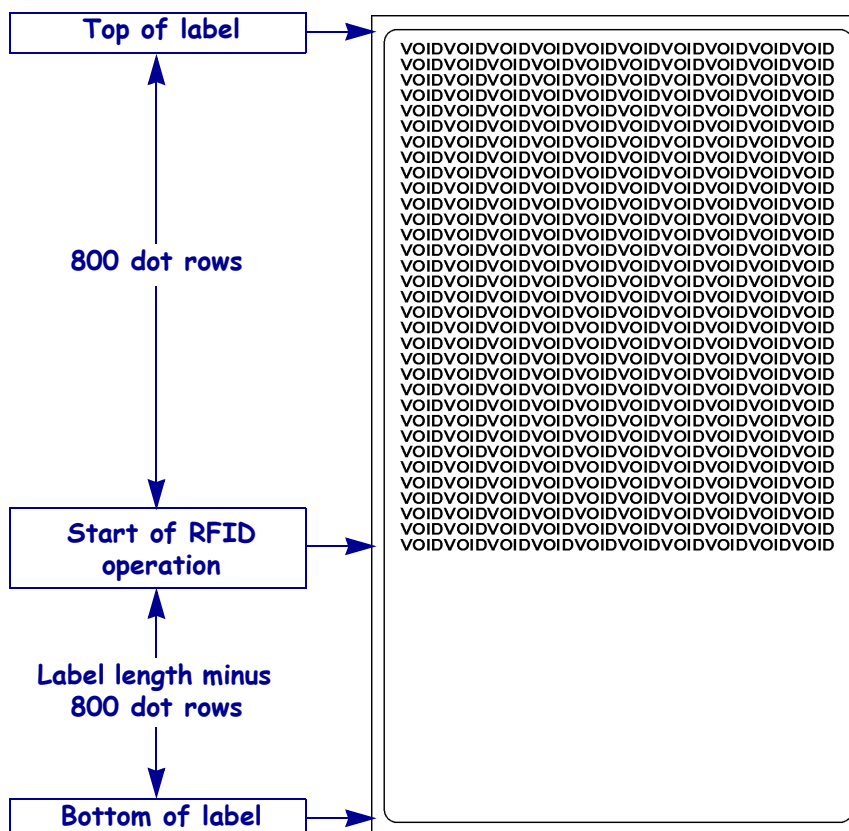



Example 2 • This example sets the printer to move the media to 800 dots from the top of the media [or label length - 500 from the bottom (leading edge) of the media] and prints “VOID” 500 dots in vertical length (Y axis) in case of an error.


```

^XA
^RS,800,500,2,P^FS
^XZ

```

Figure 4 shows the resulting voided label. Note where the void starts. The media has been moved 800 dot rows from the top of the label [label length minus 800 dot rows from the bottom (leading edge) of a label] to bring the transponder into the effective area to read/write a tag. If the printer fails the operation, an area that is 500 dot rows of the media is voided instead of the entire rest of the media.

Figure 4 • Sample Void Label, 500 Dot Row Area Voided

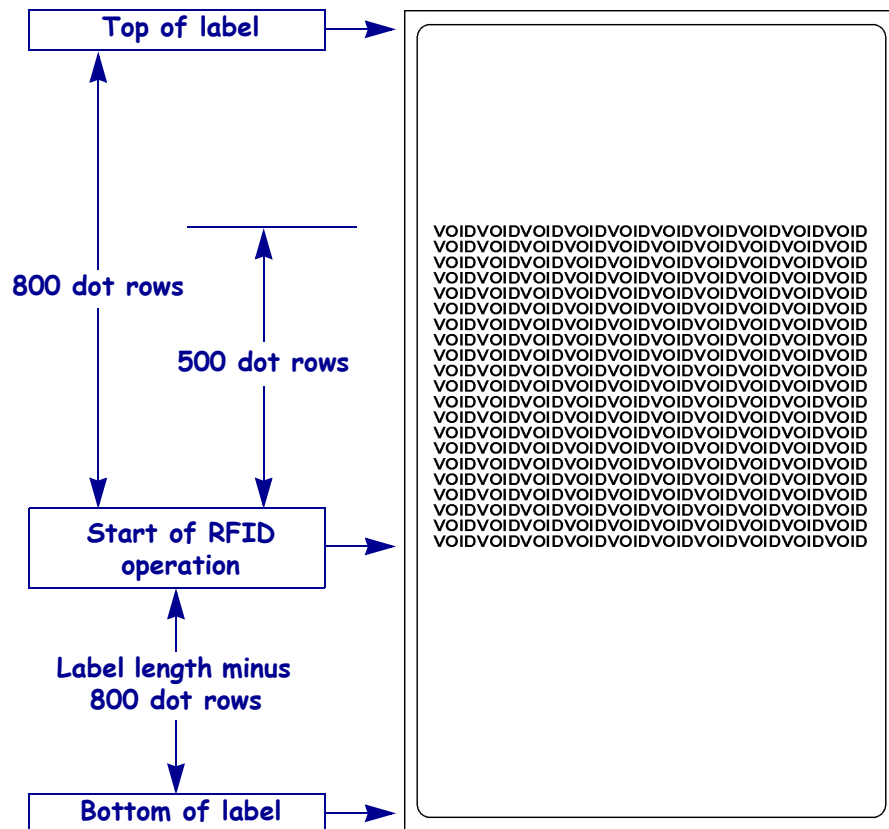

^RT

Read RFID Tag





Note • The ^RT command is provided only for backward-compatibility with label formats that were developed for older Zebra RFID printers. See [Table 13 on page 299](#) for the list of printers and firmware with which you should not use this command.

Description Use this command to tell the printer to read the current RFID tag data. The data can be returned to the host via the ^HV command.

Format ^RT#,b,n,f,r,m,s

This table identifies the parameters for this format.

Parameters	Details
# = number to be assigned to the field	<i>Accepted values:</i> 0 to 9999 <i>Default value:</i> 0
b = starting block number	<i>Accepted values:</i> 0 to <i>n</i> , where <i>n</i> is the maximum number of blocks for the tag. <i>Default value:</i> 0
n = number of blocks/bytes to read	 Note • This parameter does NOT apply to R4Mplus printers with firmware version SP920X (R4Mplus U.S. version). For R4Mplus printers with firmware version SP994X (European version): This parameter applies only when the starting block number (parameter b) is 1. <i>Accepted values:</i> 1 to <i>n</i> , where <i>n</i> is the maximum number of bytes for the tag. For UCODE EPC 1.19, <i>n</i> is 32. <i>Default value:</i> 1 For all other supported printers: <i>Accepted values:</i> 1 to <i>n</i> , where <i>n</i> is the maximum number of blocks for the tag type minus the starting block number. For example, if the tag has 8 blocks (starting with block 0) and you start with block 6, <i>n</i> can be 2. This would return block 6 and block 7 information. <i>Default value:</i> 1
f = format	<i>Accepted values:</i> 0 = ASCII 1 = Hexadecimal <i>Default value:</i> 0
r = number of retries	Changes the number of times that the printer attempts to read a particular block of a single RFID tag. (Same retry rules as the ^RR command.) <i>Accepted values:</i> 0 to 10 <i>Default value:</i> 0

Parameters	Details
m = motion	<p>Enables or disables RFID motion for the current field.</p> <p><i>Accepted values:</i></p> <ul style="list-style-type: none"> 0 = Feed label after writing. 1 = No feed after writing. Other ZPL may cause a feed. <p><i>Default value:</i> 0</p>
s = special mode	<div>  <p>Note • This parameter is used only for the printers referenced here.</p> </div> <p>For R4Mplus printers with firmware version SP920X (U.S. version):</p> <p>Specify actions for mismatched checksums. For EPC Class 1 (Alien reader) only. Not applicable for EPC class 0.</p> <p><i>Default value:</i> 0</p> <p><i>Accepted values:</i></p> <ul style="list-style-type: none"> 0 = Do not read if mismatched checksum 1 = Read even if mismatched checksum <p>For R110Xi HF and R2844-Z printers:</p> <p>Specify data order.</p> <p><i>Default value:</i> 0</p> <p><i>Accepted values:</i></p> <ul style="list-style-type: none"> 0 = least significant byte first 1 = most significant byte first



Example 1 • This example reads a tag, prints the data on a label, and sends the string Tag Data:xxxxxxx back to the host. The data read will go into the ^FN1 location of the format. The printer will retry the command five times, if necessary.

```

^XA
^FO20,120^A0N,60^FN1^FS
^RT1,,,5^FS
^HV1,,Tag Data:^FS
^XZ

```



Example 2 • This example reads from a tag twice and prints the results on a label.

```

^XA
^FO20,120^A0N,60^FN1^FS
^FO20,100^A0N,20^FN2^FS
^RT1,7,3,,5^FS
^RT2,3,2,,5^FS
^XZ

```

The first ^RT command starts at block 7 and reads three blocks of data in ASCII format. The data read will go into the ^FN1 location of the format. The printer will retry the command five times, if necessary.

The second ^RT command starts at block 2 and reads two blocks of data in ASCII format. The data read will go into the ^FN2 location of the format. The printer will retry the command five times, if necessary.

~RV

Report RFID Encoding Results



Important • This command is not supported by all printers or firmware. See [Table 13 on page 299](#) for the list of printers and firmware with which you can use this command.

Description Use this command to tell the printer to send RFID encoding success or failure results to the host computer after each label format completes.

Format ~RVa

This table identifies the parameters for this format:

Parameters	Details
a = enable/disable	<p>Enables or disables the results reporting feature.</p> <p><i>Accepted Values:</i></p> <p>E = Enable</p> <p>D = Disable</p> <p><i>Default Value:</i> E</p>



Example 1 • Assume that the following code is sent and that there is no RFID tag in the field.

```
~RVE
^XA
^RS8,0,,3
^RMY
^RFR,H
^XZ
```

The printer attempts to program a tag three times and then returns the following to the host:

```
_-,3_
```

The minus sign indicates that the programming attempt failed entirely and voided three labels.



Example 2 • Assume that the same code is sent and that the first two attempts at programming a tag are unsuccessful. The third attempt succeeds.

```
~RVE
^XA
^RS8,0,,3
^RMY
^RFR,H
^XZ
```

The printer attempts to program a tag three times and then returns the following to the host:

```
_+,2_
```

The plus sign indicates that the programming attempt was successful and voided two labels.

^RW

Set RFID Read and Write Power Levels





Important • This command is not supported by all printers or firmware. See [Table 13](#) on page 299 for the list of printers and firmware with which you can use this command.

Description Use this command to set the read and write power levels. This function is useful when using different tag types or transponders that require different power levels to obtain the best read and write abilities. If not enough power is applied, the transponder may not have sufficient power for programming, and tag data will fail to encode. If too much power is applied, the extra power may disable the tag may or cause data communication errors.

Format ^RW*r*,*w*

This table identifies the parameters for this format:

Parameters	Details
<i>r</i> = read power	<p>Sets the power level to match the desired output as calibrated in the factory.</p> <p><i>Accepted Values:</i></p> <ul style="list-style-type: none"> H = high M = medium L = low <p><i>Default Value:</i> H</p>
<i>w</i> = write power	<p> Note • This parameter is ignored on the R110Xi HF printer because read and write powers cannot be specified separately. The printer uses the value that you specified for read power for both the read and write power settings.</p> <p>Sets the power level to match the desired output as calibrated in the factory.</p> <p><i>Accepted Values:</i></p> <ul style="list-style-type: none"> H = high M = medium L = low <p><i>Default Value:</i> H</p>
<i>a</i> = RFID antenna selection	<p> Note • This parameter applies only to the R110Xi HF printer.</p> <p>Selects the antenna port that provides the best results for reading and writing.</p> <p><i>Accepted Values:</i></p> <ul style="list-style-type: none"> 1 = antenna port 1 2 = antenna port 2 <p><i>Default Value:</i> 1</p>

^RZ**Set RFID Tag Password and Lock Tag**

Important • This command is not supported by all printers or firmware. See [Table 13 on page 299](#) for the list of printers and firmware with which you can use this command.

Description Use this command to define a password for a tag during writing.

With Gen 2 tags, you can lock a tag's memory bank with an access password or define a kill password that can be used to permanently disable the tag. If you do not set access or kill passwords for a tag, the tag ignores any read or write commands that try to use these functions.



Note • The printer can set a kill password, but the printer cannot kill a tag.

Format ^RZp , m , l

The following table identifies the parameters for this format.

Parameters	Details
p = password	Sets a password. Gen 2 tags use a 32-bit password and specify the memory bank and lock style. Other tags use 8 bits and ignore the memory bank and lock style. Use ^RF on page 309 to read the passwords. <i>Accepted values:</i> 00 to FF (hexadecimal) <i>Default value:</i> 00
m = memory bank	This parameter applies to Gen 2 tags only. <i>Accepted values:</i> K = kill password A = access password E = EPC T = tag identifier (TID) U = user <i>Default value:</i> none
l = lock style	This parameter applies to Gen 2 tags only. <i>Accepted values:</i> U = unlocked L = locked O = permanently unlocked (open) P = permanently locked (protected) W = write value (used only for the kill password memory bank) <i>Default value:</i> none



Example 1 • On a tag that is not Gen 2, this example encodes 5A as the tag password.

```
^XA
^RZ5A^FS
^XZ
```



Example 2 • On a Gen 2 tag, this example encodes EPC data 112233445566778899001122 to the tag in Hex format, write protects the tag's EPC data with password 1234ABCD, and leaves the tag's access password unlocked.

```
^XA
^RFW,H^FD112233445566778899001122^FS
^RZ1234ABCD,E,L^FS
^XZ
```



Example 3 • On a Gen 2 tag, this example encodes EPC data 112233445566778899001122 to the tag in Hex format, write protects the tag's EPC data with password 1234ABCD, and makes the tag's access password unreadable.

```
^XA
^RFW,H^FD112233445566778899001122^FS
^RZ1234ABCD,E,L^FS
^RZ1234ABCD,A,L^FS
^XZ
```

The following code unprotects EPC data 112233445566778899001122 using the password 1234ABCD, encodes EPC data `newdata` to the tag in ASCII format, and then write protects the tag's new EPC data. The access password and its lock state are not changed, so the access password remains unreadable.

```
^XA
^RZ1234ABCD,E,U^FS
^RFW,A^FDnewdata^FS
^RZ1234ABCD,E,L^FS
^XZ
```



Example 4 • On a Gen 2 tag, this example unlocks the locked access password from the previous example.

```
^XA
^RZ1234ABCD,A,U^FS
^XZ
```



Encode AFI or DSFID Byte



Important • This command is not supported by all printers or firmware. See [Table 13 on page 299](#) for the list of printers and firmware with which you can use this command.

Description Use this command to encode the AFI or DSFID byte to a tag. Error handling is set by the ^RS command.

Format ^WFr,m,w,f,b

The following table identifies the parameters for this format.

Parameters	Details
r = number of retries	<i>Accepted values:</i> 0 to 10 <i>Default value:</i> 0
m = motion	<i>Accepted values:</i> 0 = Feed label after writing. 1 = No Feed after writing. Other ZPL may cause a feed. <i>Default value:</i> 0
w = write protect	<i>Accepted values:</i> 0 = Not write protected 1 = Write protect <i>Default value:</i> 0
f = data format	<i>Accepted values:</i> 0 = ASCII 1 = Hexadecimal <i>Default value:</i> 0
b = type of byte to read	<i>Accepted values:</i> A = AFI byte D = DSFID byte <i>Default value:</i> A



Example 1 • This example encodes data “R” (hex 52) as the AFI byte. The printer will try the command up to five times, if necessary.

```
^XA
^WF5^FDR
^XZ
```



Example 2 • This example encodes data hex 66 as the AFI byte. The printer will try the command up to three times, if necessary.

```
^XA
^WF3,,,1^FD66
^XZ
```



Example 3 • This example encodes data hex 77 as the DSFID byte. The printer will try the command up to four times, if necessary.

```
^XA  
^WF4,,,1,D^FD77  
^XZ
```



Write (Encode) Tag



Note • The ^WT command is provided only for backward-compatibility with label formats that were developed for older Zebra RFID printers. See [Table 13 on page 299](#) for the list of printers and firmware with which you should not use this command.

Description Use this command to encode the current RFID tag. Check the amount of data memory available for the tag that you will be using. If you send more data than the memory can hold, the printer truncates the data.

Format ^WTb,r,m,w,f,v

This table identifies the parameters for this format.

Parameters	Details
b = block number	<p>Specifies the block number to encode. This parameter is tag-dependent.</p> <ul style="list-style-type: none"> For most tags, use block 0. For EPC Class 0 Plus, block 0 is EPC data, and block 1 is user data. For the R4Mplus, this parameter does not apply to printers with firmware version SP902X. With other versions of firmware in this printer, you can encode 12 bytes (96 bits) to block 0, but you can encode only the first byte of block 1. <p><i>Accepted values:</i> 0 to <i>n</i>, where <i>n</i> is the maximum number of blocks for the tag.</p> <p><i>Default value:</i> 0</p>
r = number of retries	<p>Changes the number of times that the printer attempts to encode a particular block of a single RFID tag. (Same function as the ^RR command.)</p> <p><i>Accepted values:</i> 0 to 10</p> <p><i>Default value:</i> 0</p>
m = motion	<p>Enables or disables RFID motion. (Same function as the ^RM command.)</p> <p><i>Accepted values:</i></p> <ul style="list-style-type: none"> 0 = Feed label after writing 1 = No feed after writing (other ZPL may cause a feed) <p><i>Default value:</i> 0</p>
w = write protect	<p><i>Accepted values:</i></p> <ul style="list-style-type: none"> 0 = Not write protected 1 = Write protected <p><i>Default value:</i> 0</p>
f = data format	<p><i>Accepted values:</i></p> <ul style="list-style-type: none"> 0 = ASCII 1 = Hexadecimal <p><i>Default value:</i> 0</p>

Parameters	Details
For the R110Xi HF: v = reverse the data order	<p>This parameter is not used in the R2844-Z.</p> <p>For the R110Xi HF: Reverses the data order.</p> <p><i>Accepted values:</i></p> <p>N = Do not reverse the data order (Most significant byte first for Tag*It and PicoTag. Last significant byte first for I*code and ISO 15693)</p> <p>Y = Reverse the data order</p> <p><i>Default value:</i> N</p>
For other supported printers: v = verify valid data	<p>For other supported printers: For reliability, some manufacturers encode tags with known data (such as A5A5). This parameter flags whether the preprogrammed data is verified. (Same function as the ^WV command.)</p> <p><i>Accepted values:</i></p> <p>N = Do not verify</p> <p>Y = Verify valid data before writing</p> <p><i>Default value:</i> N</p>



Example • This sample encodes data “RFIDRFID” and will try writing up to five times, if necessary.

```
^XA
^WT,5^FDRFIDRFID^FS
^XZ
```



Verify RFID Encoding Operation



Important • This command is not supported by all printers or firmware. See [Table 13 on page 299](#) for the list of printers and firmware with which you can use this command.

Description Use this command to enable or disable the write verify function. When write verify is enabled, this command verifies the RFID encoding operation to ensure that the tag about to be programmed contains the hex data “A5A5” in the first two bytes. This parameter is not persistent (carried over from label to label).

Format ^WVe

This table identifies the parameters for this format.

Parameters	Details
e = enable	<i>Accepted values:</i> Y or N <i>Default value:</i> N



Notes •



Wireless Commands

This section contains new or modified ZPL commands for the Wireless and Wireless Plus print servers.

^KC

Set Client Identifier (Option 61)

Description The ^KC command allows the wireless print server to have its own client identifier (CID). The CID is used for the wireless print server.



This command applies to printers with firmware version V60.15.x, V50.15.x, or later.

Format ^KC*a, b, c, d*

The following table identifies the parameters for this format.

Parameters	Details
<i>a</i> = enable or disable	<i>Accepted Values:</i> 0 = disable (default) 1 = enabled, use MAC address 2 = enabled, ASCII value 3 = enabled, HEX value <i>Default Value:</i> 0
<i>b</i> = device	<i>Accepted Values:</i> 1 = wireless device <i>Default Value:</i> 1
<i>c</i> = prefix (optional)	<i>Accepted Values:</i> 11 ASCII characters or 22 hexadecimal values. The prefix can be cleared by defaulting the network settings on the printer.
<i>d</i> = identifier	<i>Accepted Values:</i> 60 ASCII characters or 120 hexadecimal values. Minimum field length is 2 bytes. The suffix can be cleared by defaulting the network settings on the printer.

^NB

Search for Wired Print Server during Network Boot

Description Use this command to tell the printer whether to search for a wired print server at bootup. Table 15 shows the results of this check.

Table 15 • Results of Check for Wired Print Server

Wired Print Server Connected?	Check for Wired Print Server?	Results
Yes	Skip	The printer does not check for or acknowledge the wired print server. The Wireless or Wireless Plus print server is used as the primary print server.
Yes	Check	The printer checks for a wired print server. If the printer detects the wired print server, it uses it as the primary print server. If the printer does not detect the wired print server, the Wireless or Wireless Plus print server is used as the primary print server.
No	Skip	The printer does not check for a wired print server. The Wireless or Wireless Plus print server is used as the primary print server.
No	Check	During bootup, the printer tries for 70 seconds to detect a wired print server. Because a wired print server is not connected, the printer uses the Wireless or Wireless Plus print server as the primary print server.

Format ^NBa

The following table identifies the parameters for this format.

Parameters	Details
a = check for wired print server at boot time	<i>Accepted Values:</i> C (CHECK), S (SKIP CHECK) <i>Default Value:</i> S

^NN

Set SNMP

Description Use this command to set the Simple Network Management Protocol (SNMP) parameters.

Format ^NNa,b,c,d,e,f

The following table identifies the parameters for this format.

Parameters	Details
a = system name	Same as printer name. <i>Accepted Values:</i> Up to 17 alphanumeric characters
b = system contact	Any contact information as desired (such as a name or phrase) <i>Accepted Values:</i> Up to 50 alphanumeric characters
c = system location	The printer's model information. <i>Accepted Values:</i> Up to 50 alphanumeric characters
d = get community name	<i>Accepted Values:</i> Up to 19 alphanumeric characters <i>Default Value:</i> public
e = set community name	<i>Accepted Values:</i> Up to 19 alphanumeric characters <i>Default Value:</i> public
f = trap community name	<i>Accepted Values:</i> Up to 20 alphanumeric characters <i>Default Value:</i> public

^NP

Set Primary/Secondary Device

Description Use this command to specify whether to use the printer's or the print server's LAN/WLAN settings at boot time. The default is to use the printer's settings.

- When the printer is set as the primary device, you can set it up using ZPL commands or the Wireless Setup Wizard utility, and any wired print server inserted into the printer will use those settings.

Format ^NP`a`

The following table identifies the parameters for this format.

Parameters	Details
<code>a</code> = device to use as primary	<i>Accepted Values:</i> P (PRINTER) M (MPS/PRINTSERVER) <i>Default Value:</i> P


^NS

Change Wired Networking Settings

Description Use this command to change the wired print server network settings.

Format ^NSa,b,c,d,e,f,g,h,i

The following table identifies the parameters for this format.

Parameters	Details
a = IP resolution	<p><i>Accepted Values:</i></p> <p>A (ALL) B (BOOTP) C (DHCP AND BOOTP) D (DHCP) G (GLEANNING ONLY) R (RARP) P (PERMANENT)</p> <p> Note • Use of GLEANNING ONLY is not recommended when the Wireless Print Server or Wireless Plus Print Server is installed.</p>
b = IP address	<i>Accepted Values:</i> Any properly formatted IP address in the xxx.xxx.xxx.xxx format.
c = subnet mask	<i>Accepted Values:</i> Any properly formatted subnet mask in the xxx.xxx.xxx.xxx format.
d = default gateway	<i>Accepted Values:</i> Any properly formatted gateway in the xxx.xxx.xxx.xxx format.
e = WINS server address	<i>Accepted Values:</i> Any properly formatted WINS server in the xxx.xxx.xxx.xxx format.
f = connection timeout checking	<i>Accepted Values:</i> Y (YES), N (NO)
g = timeout value	<p>Time, in seconds, before the connection times out.</p> <p><i>Accepted Values:</i> 0 through 9999</p>
h = ARP broadcast interval	Time, in minutes, that the broadcast is sent to update the device's ARP cache.
i = base raw port number	<p>The port number that the printer should use for its RAW data.</p> <p><i>Accepted Values:</i> 0 through 99999</p> <p><i>Default Value:</i> 9100</p>



Example •

```
^XA
^NSa,192.168.0.1,255.255.255.0,192.168.0.2
```

^NT

Set SMTP

Description Use this command to set the Simple Mail Transfer Protocol (SMTP) parameters. This allows you to set the e-mail settings for alerts.

Format ^NTa,b

The following table identifies the parameters for this format.

Parameters	Details
a = SMTP server address	<i>Accepted Values:</i> Any properly formatted server address in the xxx.xxx.xxx.xxx format
b = print server domain	<i>Accepted Values:</i> Any properly formatted print server domain name. A domain name is one or more labels separated by a period (“dot”), and a label consists of letters, numbers, and hyphens. An example of a domain name is zebra.com



Set Web Authentication Timeout Value

Description Use this command to set the timeout value for the printer home page. The printer will prompt for the printer password only the first time that certain screens are accessed until 1) the web authentication timeout value is reached (default value is 5 minutes) or 2) the printer is reset. At that time, the printer will prompt for the password again.

Format ^NWa

The following table identifies the parameters for this format.

Parameters	Details
a = timeout value	<p>The timeout value in minutes for an IP address to be authenticated to the printer web pages.</p> <p><i>Accepted Values:</i> 0 (no secure pages can be accessed without entering the printer password) to 255 minutes</p> <p><i>Default Value:</i> 5</p>



Set Antenna Parameters

Description Use this command to set the values for the receive and transmit antenna.

Format ^WAA , b

The following table identifies the parameters for this format.

Parameters	Details
a = receive antenna	<i>Accepted Values:</i> D (Diversity), L (Left), R (Right) <i>Default Value:</i> D
b = transmit antenna	<i>Accepted Values:</i> D (Diversity), L (Left), R (Right) <i>Default Value:</i> D



Set WEP Mode





Note • The ^WE command is provided only for backward-compatibility with printers using firmware prior to V50.15.x or V60.15.x. For firmware version V50.15.x (for the S4M), V60.15.x (for all other supported printers), and later, use ^WX on page 355 to set the security type and related parameters.

Description Use this command to command enable Wired Equivalent Privacy (WEP) mode and set WEP values. WEP is a security protocol for wireless local area networks (WLANs).

Be careful to include the exact number of commas required for this command when setting encryption keys (parameters e through h). A missing or extra comma will cause the keys to be stored in the wrong slots and can prevent the printer from joining the wireless network.

Format ^WEa,b,c,d,e,f,g,h

The following table identifies the parameters for this format.

Parameters	Details
a = encryption mode	<i>Accepted Values:</i> OFF, 40 (40-bit encryption), 128 (128-bit encryption) <i>Default Value:</i> OFF
b = encryption index	Tells the printer which encryption key to use. <i>Accepted Values:</i> 1 (Key 1), 2 (Key 2), 3 (Key 3), 4 (Key 4) <i>Default Value:</i> 1
c = authentication type	<i>Accepted Values:</i> O (Open System), S (Shared Key) <i>Default Value:</i> O  Note • If you enable Shared Key authentication with Encryption Mode set to OFF, this value resets to Open.
d = encryption key storage	<i>Accepted Values:</i> H (Hex key storage), S (string key storage) <i>Default Value:</i> H
e, f, g, h = encryption keys 1 through 4	<i>Accepted Values:</i> The actual value for the encryption key The encryption mode affects what can be entered for the encryption keys: <ul style="list-style-type: none"> For 40-bit, encryption keys can be set to any 5 hex pairs or any 10 alphanumeric characters. For 128-bit, encryption keys can be set to any 13 hex pairs or any 26 alphanumeric characters.  Note • When using hex storage, do not add a leading 0x on the WEP key.



Example 1 • This example sets encryption to 40-bit, activates encryption key 1, and sets encryption key 1 to the string 12345.

```
^WE40,,,12345
```

In this example, the Encryption Index, Authentication Type, and Encryption Key Storage parameters are left blank with commas as placeholders for the fields. The printer uses the default values for these parameters.



Example 2 • This example sets encryption to 128-bit, activates encryption key 2, and sets encryption keys 1 and 2 to hex values.

```
^WE128,2,,H,12345678901234567890123456,98765432109876543  
210987654
```

The value for encryption key 1 is stored and can be activated in the future by the following command:

```
^WE128,1
```



Example 3 • This example sets encryption to 128-bit, activates encryption key 4, and sets encryption key 4 to a hex value.

```
^WE128,4,,H,,,,98765432109876543210987654
```

Values are not required for encryption keys 1 through 3 when setting encryption key 4. In this example, commas are used as placeholders for the fields for encryption keys 1 through 3. Any previously stored values for these encryption keys do not change.



Important • Make sure that you include the exact number of commas required to get to the slot for encryption key 4 (parameter h).




Change Wireless Network Settings

Description Use this command to change the wireless network settings.

Format ^WIa,b,c,d,e,f,g,h,i

The following table identifies the parameters for this format.

Parameters	Details
a = IP resolution	<p><i>Accepted Values:</i></p> <ul style="list-style-type: none">A (ALL)B (BOOTP)C (DHCP AND BOOTP)D (DHCP)G (GLEANNING ONLY)R (RARP)P (PERMANENT) <p><i>Default Value:</i> A</p> <p> Note • Use of GLEANNING ONLY is not recommended when the Wireless Print Server or Wireless Plus Print Server is installed.</p>
b = IP address	<p><i>Accepted Values:</i> Any properly formatted IP address in the xxx.xxx.xxx.xxx format.</p> <p><i>Default Value:</i> 000.000.000.000</p>
c = subnet mask	<p><i>Accepted Values:</i> Any properly formatted subnet mask in the xxx.xxx.xxx.xxx format.</p> <p><i>Default Value:</i> 000.000.000.000</p>
d = default gateway	<p><i>Accepted Values:</i> Any properly formatted gateway in the xxx.xxx.xxx.xxx format.</p> <p><i>Default Value:</i> 000.000.000.000</p>
e = WINS server address	<p><i>Accepted Values:</i> Any properly formatted WINS server in the xxx.xxx.xxx.xxx format.</p> <p><i>Default Value:</i> 000.000.000.000</p>
f = connection timeout checking	<p><i>Accepted Values:</i> Y (YES), N (NO)</p> <p><i>Default Value:</i> Y</p>
g = timeout value	<p>Time, in seconds, before the connection times out.</p> <p><i>Accepted Values:</i> 0 through 9999</p> <p><i>Default Value:</i> 300</p>

Parameters	Details
h = ARP broadcast interval	Time, in minutes, that the broadcast is sent to update devices ARP cache. <i>Accepted Values:</i> 0 through 30 <i>Default Value:</i> 0 (do not send ARP broadcast)
i = base raw port number	The port number that the printer should use for its RAW data. <i>Accepted Values:</i> 0 through 99999 <i>Default Value:</i> 9100



Set LEAP Parameters



Note • The ^WL command is provided only for backward-compatibility with printers using firmware prior to V50.15.x or V60.15.x. For firmware version V50.15.x (for the S4M), V60.15.x (for all other supported printers), and later, use ^WX on page 355 to set the security type and related parameters.

Description Use this command to enable Cisco® Lightweight Extensible Authentication Protocol (LEAP) mode and set parameters. LEAP is user authentication method that is available with some wireless radio cards.

Format ^WLa, b, c

The following table identifies the parameters for this format.

Parameters	Details
a = mode	<i>Accepted Values:</i> OFF, ON <i>Default Value:</i> OFF
b = user name	<i>Accepted Values:</i> Any 4 to 40 alphanumeric characters <i>Default Value:</i> user
c = password	<i>Accepted Values:</i> Any 4 to 40 alphanumeric characters <i>Default Value:</i> password

~WL

Print Network Configuration Label

Description Use this command to generate a network configuration label (Figure 5).

Format ~WL

Figure 5 • Network Configuration Label

Wireless Print Server		Wireless Plus Print Server	
Network Configuration		Network Configuration	
Zebra Technologies ZTC 140XiIIIPlus-200dpi ZBR3258042		Zebra Technologies ZTC 105SL-200dpi ZBR11506888	
NO..... WIRED PS CHECK? Printer..... LOAD LAN FROM?		1.9.1729 OPTION FIRMWARE NO..... WIRED PS CHECK? Printer..... LOAD LAN FROM?	
Wired ALL..... IP PROTOCOL 000.000.000.000..... IP ADDRESS 000.000.000.000..... SUBNET MASK 000.000.000.000..... DEFAULT GATEWAY 000.000.000.000..... WINS SERVER IP YES..... TIMEOUT CHECKING 0300..... TIMEOUT VALUE 0000..... ARP INTERVAL 9100..... BASE RAW PORT		Wired ALL..... IP PROTOCOL 000.000.000.000..... IP ADDRESS 000.000.000.000..... SUBNET MASK 000.000.000.000..... DEFAULT GATEWAY 000.000.000.000..... WINS SERVER IP YES..... TIMEOUT CHECKING 0300..... TIMEOUT VALUE 0000..... ARP INTERVAL 9100..... BASE RAW PORT	
Wireless* ALL..... IP PROTOCOL 010.003.015.030..... IP ADDRESS 255.255.255.000..... SUBNET MASK 000.000.000.000..... DEFAULT GATEWAY 000.000.000.000..... WINS SERVER IP YES..... TIMEOUT CHECKING 0300..... TIMEOUT VALUE 0000..... ARP INTERVAL 9100..... BASE RAW PORT YES..... CARD INSERTED 015FH..... CARD MFG ID 000AH..... CARD PRODUCT ID 5.02.19..... CARD FIRMWARE 00082131b6ba..... MAC ADDRESS YES..... DRIVER INSTALLED INFRASTRUCTURE..... OPERATING MODE 125..... ESSID 100..... TX POWER ON..... 1 Mb/s ON..... 2 Mb/s ON..... 5.5 Mb/s ON..... 11 Mb/s 11 Mb/s..... CURRENT TX RATE DIVERSITY..... RECEIVE ANTENNA DIVERSITY..... XMIT ANTENNA YES..... ASSOCIATED NONE..... WLAN SECURITY OPEN..... WEP TYPE 1..... WEP INDEX LONG..... PREAMBLE 020..... POOR SIGNAL		Wireless* ALL..... IP PROTOCOL 010.003.015.034..... IP ADDRESS 255.255.255.000..... SUBNET MASK 010.003.015.001..... DEFAULT GATEWAY 010.003.001.098..... WINS SERVER IP YES..... TIMEOUT CHECKING 0300..... TIMEOUT VALUE 0000..... ARP INTERVAL 9100..... BASE RAW PORT YES..... CARD INSERTED 015FH..... CARD MFG ID 000AH..... CARD PRODUCT ID 5.60.21..... CARD FIRMWARE 000e84c4f876..... MAC ADDRESS YES..... DRIVER INSTALLED INFRASTRUCTURE..... OPERATING MODE 125..... ESSID 100..... TX POWER ON..... 1 Mb/s ON..... 2 Mb/s ON..... 5.5 Mb/s ON..... 11 Mb/s 11 Mb/s..... CURRENT TX RATE DIVERSITY..... RECEIVE ANTENNA DIVERSITY..... XMIT ANTENNA YES..... ASSOCIATED NONE..... WLAN SECURITY OPEN..... WEP TYPE 1..... WEP INDEX LONG..... PREAMBLE 020..... POOR SIGNAL	
FIRMWARE IN THIS PRINTER IS COPYRIGHTED		FIRMWARE IN THIS PRINTER IS COPYRIGHTED	

Appears only for
the Wireless Plus
Print Server



Set Wireless Password

Description Use this command to set the four-digit wireless password (not the same as the general printer password). If the wireless password is **0000**, the Wireless and Wireless Plus print servers run in an “unprotected” mode, which means that you do not need to enter the wireless password through the control panel to view or modify wireless settings.

If a wireless password is set, the values for the following parameters will not appear through the control panel until the wireless password is entered:

- MAC Address
- ESSID
- WLAN Security
- WEP Type
- WEP Index
- Reset Network

Format ^WP a, b

The following table identifies the parameters for this format.

Parameters	Details
a = old wireless password	<i>Accepted Values:</i> 0000 through 9999 <i>Default Value:</i> 0000
b = new wireless password	<i>Accepted Values:</i> 0000 through 9999 <i>Default Value:</i> 0000



Set Transmit Rate

Description Use this command to change the transmission parameters.

Format ^WRa,b,c,d,e

The following table identifies the parameters for this format.

Parameters	Details
a = rate 1	Sets the 1 Mb/s transmit rate. <i>Accepted Values:</i> Y (On), N (Off)
b = rate 2	Sets the 2 Mb/s transmit rate. <i>Accepted Values:</i> Y (On), N (Off)
c = rate 5.5	Sets the 5.5 Mb/s transmit rate. <i>Accepted Values:</i> Y (On), N (Off)
d = rate 11	Sets the 11 Mb/s transmit rate. <i>Accepted Values:</i> Y (On), N (Off)
e = transmit power	<i>Accepted Values:</i> 1, 5, 20, 30, 50, 100

~WR

Reset Wireless Radio Card and Print Server

Description Use this command to reinitialize the wireless radio card and the print server (wired or wireless) when the Wireless or Wireless Plus print server is running. The command also causes any wireless radio card in the printer to reassociate to the wireless network. This command has the same function as the **RESET NETWORK** control panel parameter. Refer to the Wireless Print Server and Wireless Plus Print Server User Guide for more information.

Format ~WR





Set Wireless Radio Card Values

Description Use this command to set the wireless radio card values for ESSID, Operating Mode, and Card Preamble.

Format ^WSe,o,p,h,i,j,k

The following table identifies the parameters for this format.

Parameters	Details
e = ESSID value	<i>Accepted Values:</i> Any value up to 32 characters, including all ASCII and Extended ASCII characters, including the space character. When this parameter is left blank, the ESSID is not changed. <i>Default Value:</i> 125
o = operating mode	<i>Accepted Values:</i> I (Infrastructure), A (Adhoc) <i>Default Value:</i> I
p = wireless radio card preamble	<i>Accepted Values:</i> L (Long), S (Short) <i>Default Value:</i> L
h = wireless pulse  This parameter is supported in firmware version V60.15.x, V50.15.x, or later.	Adds a pulse to the network traffic generated by the printer. This pulse is necessary with some network configurations to keep the printer online. <i>Accepted Values:</i> 1 (Enabled), 0 (Disabled) <i>Default Value:</i> 1
i = wireless pulse interval  This parameter is supported in firmware version V60.15.x, V50.15.x, or later.	Sets the interval at which the wireless pulse is sent when the wireless pulse feature is enabled. <i>Accepted Values:</i> 5 to 300 seconds <i>Default Value:</i> 15

Parameters	Details
<div>j = channel mask</div> <div><div>.15↑</div><div>This parameter is supported in firmware version V60.15.x, V50.15.x, or later.</div></div>	<div>For commonly used channel masks, see Table 16.</div> <div><i>Accepted Values:</i> 4 Hexadecimal digits preceded by “0x” (0x0000 to 0xFFFF)</div> <div><i>Default Value:</i> 0x7FF</div>
<div>k = international mode</div> <div><div>.15↑</div><div>This parameter is supported in firmware version V60.15.x, V50.15.x, or later.</div></div>	<div><i>Accepted Values:</i> 0 (Disabled), 1 (Enabled)</div> <div><i>Default Value:</i> 0</div>

Table 16 • Channel Mask Settings

Region	Channel Mask
United States, Canada, Latin America	0x7FF
Europe, Middle East, Africa, other	0x1FFF
Japan	0x3FFF



Configure Wireless Securities

Description Use this command to configure the wireless security settings for your printer. Values entered for this command must match what is configured on your WLAN and must be supported by the wireless radio card that you are using.



- Note** • When using certificate files, your printer supports:
- Using Privacy Enhanced Mail (PEM) formatted certificate files.
 - Using the client certificate and private key as two files, each downloaded separately.
 - Using exportable PAC files for EAP-FAST.

The ^WX command replaces individual ZPL commands for different security types.

Format ^WXa,[zero or more supporting parameters]





Note • The supporting parameters that are required vary based on the security type that you select. See [Supporting Parameters for Different Security Types on page 358](#) for instructions for each security type.

The following table identifies the parameters for this format.

Parameters	Details
a = security type	<div>Enter the two-digit code for the security type that your WLAN uses. For which supporting parameters (b through n) to use with the different security types, see Supporting Parameters for Different Security Types on page 358.</div> <div>Accepted Values: 01 to 15</div> <div><div>01 = No wireless security is active</div><div>02 = WEP 40-bit</div><div>03 = WEP 128-bit</div><div>04 = EAP-TLS</div><div>05 = EAP-TTLS</div><div>06 = EAP-FAST</div><div>07 = PEAP</div><div>08 = LEAP</div><div>09 = WPA PSK</div><div>10 = WPA EAP-TLS</div><div>11 = WPA EAP-TTLS</div><div>12 = WPA EAP-FAST</div><div>13 = WPA PEAP</div><div>14 = WPA LEAP</div><div>15 = Kerberos</div></div> <div>Default Value: 01</div>


* Not used for all security types

Parameters	Details
b = WEP encryption index*	<p>Specifies which encryption key to use for WEP encryption. A value must be specified if using WEP 40-bit or WEP 128-bit.</p> <p><i>Accepted Values:</i> 1, 2, 3, 4</p> <p><i>Default Value:</i> 1</p>
c = WEP authentication type*	<p>Enables the WEP key authentication type. A value must be specified if using WEP 40-bit or WEP 128-bit.</p> <p><i>Accepted Values:</i> O or S</p> <p>O = open system S = shared key</p> <p><i>Default Value:</i> O</p>
d = WEP key type*	<p>Specifies the format of the WEP key. A value must be specified if using WEP 40-bit or WEP 128-bit.</p> <p><i>Accepted Values:</i> H or S</p> <p>H = hex key storage S = string key storage</p> <p><i>Default Value:</i> S</p>
e,f,g,h = WEP encryption keys 1 through 4*	<p>Specifies the actual values of any WEP encryption keys to be used. A value must be specified for at least one WEP encryption key if you specify 40-bit or 128-bit WEP encryption for the security type.</p> <p> Important • Be careful to include the exact number of commas required for this command when setting encryption keys (parameters e through h). A missing or extra comma will cause the keys to be stored in the wrong slots and can prevent the printer from joining the wireless network.</p> <p>The encryption mode affects what can be entered for the encryption keys:</p> <ul style="list-style-type: none"> • For 40-bit, encryption keys can be set to any 5 hex pairs or any 10 alphanumeric characters. • For 128-bit, encryption keys can be set to any 13 hex pairs or any 26 alphanumeric characters. <p> Note • When using hex storage, do not add a leading 0x on the WEP key.</p> <p><i>Accepted Values:</i> The actual value for the encryption key</p> <p><i>Default Value:</i> None</p>

* Not used for all security types

Parameters	Details
i = user ID*	<p>Specifies a user ID for security types that require one. A value must be specified if using the following security types:</p> <ul style="list-style-type: none">• EAP-TTLS• LEAP• WPA LEAP• PEAP• WPA PEAP• WPA EAP-TTLS• Kerberos <p><i>Accepted Values:</i> The actual value for the user ID. <i>Default Value:</i> user</p>
j = password*	<p>Specifies a password for security types that require one. A value must be specified if using the following security types:</p> <ul style="list-style-type: none">• EAP-TTLS• LEAP• WPA LEAP• PEAP• WPA PEAP• WPA EAP-TTLS• Kerberos <p><i>Accepted Values:</i> The actual value for the password. <i>Default Value:</i> password</p>
k = optional private key*	<p>Specifies an optional private key for security types that require one. A value must be specified if using the following security types:</p> <ul style="list-style-type: none">• EAP-TLS• EAP-FAST• WPA EAP-TLS• WPA EAP-FAST <p><i>Accepted Values:</i> The actual value for the optional private key. <i>Default Value:</i> None</p>
l = realm*	<p>Specifies the realm for security types that require it. A value must be specified if using Kerberos.</p> <p><i>Accepted Values:</i> The actual value for the realm. <i>Default Value:</i> kerberos</p>
m = Key Distribution Center (KDC)*	<p>Specifies the KDC for security types that require it. A value must be specified if using Kerberos.</p> <p><i>Accepted Values:</i> The actual value for the KDC. <i>Default Value:</i> krbtgt"</p>

* Not used for all security types

Parameters	Details
n = Pre-Shared Key (PSK) value*	<p>Enter the PSK value. This value is calculated and must be the same for each device on the WLAN. Use ZebraNet Bridge to generate the PSK value. A value must be specified if using WPA PSK.</p> <p> Important • Do not enter a pass phrase for this field in this command. To use a pass phrase, use the ZebraNet Bridge Enterprise Wireless Setup Wizard.</p> <p><i>Accepted Values:</i> a minimum of 64 hexadecimal digits</p> <p><i>Default Value:</i> None</p>

* Not used for all security types

Supporting Parameters for Different Security Types

The supporting parameters required for this command vary based on the security type that you select. You should not use all of the supporting parameters each time that you use this command, nor will you use extra commas to separate unused fields. Follow the example and format for your specific security type in this section, substituting your own data for anything that is shown in *italics*.

Security Type 01: No Wireless Security Active

Format ^WX01



Example • This example turns off all wireless securities controlled under this command, but it does not reset the printer's wireless settings to their defaults.

```
^XA
^WX01
^JUS^XZ
```

Security Type 02: WEP 40-Bit

Format ^WX02,b,c,d,e,f,g,h



Example • This example configures the printer for WEP 40-bit encryption using index key 1, open authentication, and a hexadecimal WEP key.

```
^XA
^WX02,1,O,H,Hexidecimal_Key_1,,,
^JUS
^XZ
```

Security Type 03: WEP 128-Bit

Format ^WX03,b,c,d,e,f,g,h

- **Example** • This example configures the printer for WEP 128-bit encryption using index key 2, open authentication, and four hexadecimal WEP keys.

```
^XA
^WX03,2,O,H,Hexidecimal_Key_1,Hexadecimal_Key_2
Hexadecimal_Key_3,Hexadecimal_Key_4
^JUS
^XZ
```

Security Type 04: EAP-TLS

Format ^WX04,k

- **Example** • This example configures the printer for EAP-TLS authentication with an optional private key.

```
^XA
^WX04,Optional_Private_Key
^JUS
^XZ
```

Security Type 05: EAP-TTLS

Format ^WX05,i,j

- **Example** • This example configures the printer for EAP-TTLS authentication with a user ID and password.

```
^XA
^WX05,User_ID,Password
^JUS
^XZ
```

Security Type 06: EAP-FAST

Format ^WX06,i,j,k

- **Example** • This example configures the printer for EAP-FAST authentication with a user ID, password, and optional private key.

```
^XA
^WX06,User_ID,Password,Optional_Private_Key
^JUS
^XZ
```

Security Type 07: PEAP

Format ^WX07,i,j

- **Example** • This example configures the printer for PEAP authentication using a user ID and password that are set up on the WLAN.

```
^XA
^WX07,User_ID,Password
^JUS
^XZ
```

Security Type 08: LEAP

Format ^WX08,i,j

- **Example** • This example configures the printer for LEAP authentication with a user ID and password.

```
^XA
^WX08,User_ID,Password
^JUS
^XZ
```

Security Type 09: WPA PSK

Format ^WX09,n

- **Example** • This example configures the printer for WPA authentication using a PSK value.

```
^XA
^WX09,64-Character_PSK
^JUS
^XZ
```

Security Type 10: WPA EAP-TLS

Format ^WX10,k

→ **Example** • This example configures the printer for WPA encryption using EAP-TLS authentication with an optional private key.

```
^XA
^WX10,Optional_Private_Key
^JUS
^XZ
```

Security Type 11: WPA EAP-TTLS

Format ^WX11,i,j

→ **Example** • This example configures the printer for WPA encryption using EAP-TTLS authentication with a user ID and password.

```
^XA
^WX11,User_ID,Password
^JUS
^XZ
```

Security Type 12: WPA EAP-FAST

Format ^WX12,i,j,k

→ **Example** • This example configures the printer for WPA encryption using EAP-FAST authentication with a user ID, password, and optional private key.

```
^XA
^WX12,User_ID,Password,Optional_Private_Key
^JUS
^XZ
```

Security Type 13: WPA PEAP

Format ^WX13, i, j

→ **Example** • This example configures the printer for WPA encryption using PEAP authentication with a user ID and password.

```
^XA
^WX13, User_ID, Password
^JUS
^XZ
```

Security Type 14: WPA LEAP

Format ^WX14, i, j

→ **Example** • This example configures the printer for WPA encryption using LEAP authentication with a user ID and password.

```
^XA
^WX14, User_ID, Password
^JUS
^XZ
```

Security Type 15: Kerberos

Format ^WX15, i, j, l, m

→ **Example** • This example configures the printer for Kerberos encryption.

```
^XA
^WX15, User_ID, Password, Realm, KDC_value
^JUS
^XZ
```



Set/Get/Do Commands

This chapter provides a high-level overview of the Set/Get/Do (SGD) commands and details on each SGD command.



SGD commands are available in printers with firmware version V60.15.x, V50.15.x, or later.



Note • The commands listed in this chapter are for use with the Wireless Print Server and Wireless Plus Print Server, when used with firmware version V60.15.x, V50.15.x, or later.



Important • These are important points to note when using ZPL and SGD commands:

- SGD commands are case-sensitive.
- ZPL and SGD commands should be sent to the printer as separate files.
- Certain settings can be controlled by both ZPL and SGD. Configuration changes made in ZPL can affect configuration changes made in SGD.
- Changes made with one command type (ZPL or SGD) will affect the data returned to the host in response to both ZPL and getvar commands. The command type (ZPL or SGD) that was sent last determines the current setting.
- Some RF cards do not support all of the SGD commands.

Overview

This section describes how and why to use the Set/Get/Do (SGD) commands. It also provides an example of a typical command structure.



Note • SGD commands must be terminated by a carriage return or a space and line feed.

SGD commands are commands that allow you to configure all printers with firmware versions V60.15.x, V50.15.x, and later. The printer performs the specified function immediately after receiving the command. The commands are:

- **setvar**
- **getvar**
- **do**

setvar Command

Setvar commands:

- are used to configure printer settings to specific values by setting them in the printer
- must be terminated by a space character or a CR/ LF (0x0D, 0x0A)



Important • The setvar command and attributes must be specified in lower case.

getvar Command

Getvar commands:

- are used to get the current value of the printer settings
- must be terminated by a space character or CR/LF (0x0D, 0x0A)

The printer responds with the printer setting of “?” if:

- the printer setting does not exist (usually due to incorrect spelling of the printer setting)
- it has not been configured yet



Important • The printer settings and attributes must be specified in lower case.

do Command

Do commands:

- are used to instruct the printer to perform predefined actions
- must be terminated by a space character or a CR/LF (0x0D, 0x0A)

Some Do commands require additional settings which must be enclosed in double quotes.




Important • The values must be specified in lower case.

Command Structure

It is important to understand the structure of the command and its components. A command structure illustration is provided for each command in this guide.

➔ **Example •** This is an example of a command structure illustration:

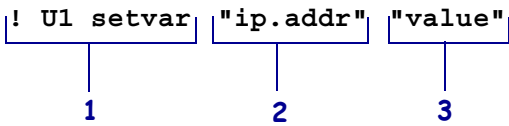

1	Command—always preceded with an exclamation point (!) and must be specified in lower case. A space resides between the ! and U1 and between U1 and the command (setvar or getvar).
2	Attribute—always in double quotes and must be specified in lower case.
3	Chosen value—always in double quotes. Only applicable for setvar and do.

This command must be terminated by a space character or a CR/ LF (0x0D, 0x0A).




Note • Some RF cards do not support all of the SGD commands.

How to Send Multiple SGD Commands

For any getvar, setvar, or do command, if you issue the syntax without the "1" and use the END command followed by a space, multiple SGD commands are sent simultaneously.

➔ **Example •** This syntax shows how you can send multiple getvar commands:

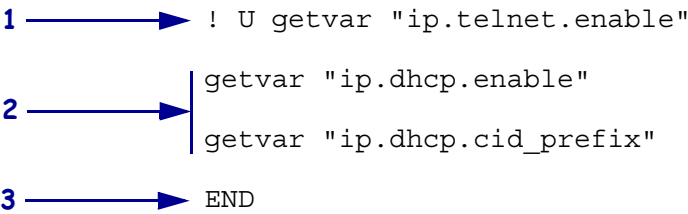

1	The command portion of the string does not use the "1" after the "! U".
2	Commands issued after the first command do not require the "! U".
3	The string of commands is terminated by the word "END" with a space after the word, and by a carriage return/ line feed.


card.inserted

Description This command indicates whether the wireless radio card is or is not inserted.

Type getvar

Command Structure

These are the components of the command structure:

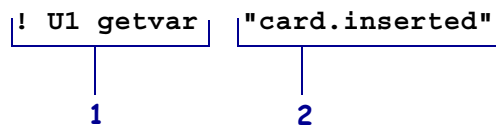

1	Command—always preceded with an exclamation point (!). A space resides between the ! and U1 and between U1 and the command (getvar).
2	Attribute—always in double quotes.



Important • A space resides between command and attribute.

This table identifies the command for this format:

Commands	Details
getvar	This command instructs the printer to respond with the wireless radio card status. It's inserted or it's not inserted. <i>Format:</i> ! U1 getvar "card.inserted"



Example • In this example, the getvar result is "Inserted".

```
! U1 getvar "card.inserted"
```


card.mac_addr

Description This command retrieves the MAC address of the wireless radio card.

Type getvar

Command Structure

These are the components of the command structure:

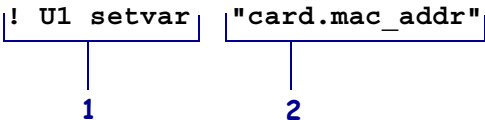

1	Command—always preceded with an exclamation point (!). A space resides between the ! and U1 and between U1 and the command (getvar).
2	Attribute—always in double quotes.



Important • A space resides between command and attribute.

This table identifies the command for this format:

Commands	Details
getvar	This command instructs the printer to respond with the MAC address. <i>Format:</i> ! U1 getvar "card.mac_addr"



Example • In this example, the getvar result is the MAC address for the wireless radio card.

```
! U1 getvar "card.mac_addr"
```

ip.addr

Description This command allows you to get or set the printer's IP address.


Type getvar; setvar



Important • For a set IP address to take affect, the IP protocol must be set to permanent and the print server must be reset.

Command Structure

These are the components of the command structure:

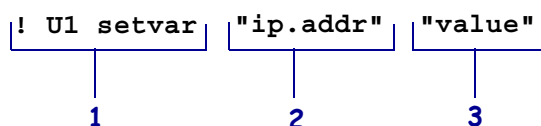

1	Command—always preceded with an exclamation point (!). A space resides between the ! and U1 and between U1 and the command (setvar or getvar).
2	Attribute—always in double quotes.
3	Chosen value—always in double quotes. Only applicable for setvar .



Important • A space resides between command and attribute and between attribute and value.

This table identifies the commands for this format:

Commands	Details
getvar	This command instructs the printer to respond with its current IP address. <i>Format:</i> ! U1 getvar "ip.addr"
setvar	This command instructs the printer to change its current IP address upon powering the printer on. <i>Format:</i> ! U1 setvar "ip.addr" "value" <i>Values:</i> any valid IP address <i>Default:</i> "0.0.0.0"



Note • The setvar value of this command can be affected by the ip.dhcp.enable command.



Example • This setvar example shows the value set to "10.14.4.235".

```
! U1 setvar "ip.addr" "10.14.4.235"
```

What the setvar value is set to is the getvar result. In this example, the getvar result is "10.14.4.235".


ip.arp_interval

Description This printer setting allows you to specify the ARP (Address Resolution Protocol) interval or the ARP cache time out.

Type getvar; setvar

Command Structure

These are the components of the command structure:

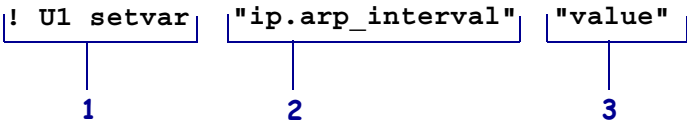

1	Command—always preceded with an exclamation point (!). A space resides between the ! and U1 and between U1 and the command (setvar or getvar).
2	Attribute—always in double quotes.
3	Chosen value—always in double quotes. Only applicable for setvar.



Important • A space resides between command and attribute and between attribute and value.

This table identifies the commands for this format:

Commands	Details
getvar	This command instructs the printer to respond with the ARP interval or the ARP cache time out value. <i>Format:</i> ! U1 getvar "ip.arp_interval"
setvar	This command instructs the printer to change the ARP interval or the ARP cache time out. <i>Format:</i> ! U1 setvar "ip.arp_interval" "value" <i>Values:</i> 0 - 30 <i>Default:</i> "0"



Example • This setvar example shows the value set to "0".

```
! U1 setvar "ip.arp_interval" "0"
```

What the setvar value is set to is the getvar result. In this example, the getvar result is "0".

ip.bootp.enable

Description This printer setting turns BOOTP on or off. BOOTP is a method for acquiring an IP address, netmask, and gateway automatically on printer power-up. It requires a BOOTP server on the local network.

Type getvar; setvar



Note • If you are using static IP addressing, the IP protocol must be set to permanent.

Command Structure

These are the components of the command structure:

<code>! U1 setvar</code>	<code>"ip.bootp.enable"</code>	<code>"value"</code>
1	2	3

1	Command—always preceded with an exclamation point (!). A space resides between the ! and U1 and between U1 and the command (setvar or getvar).
2	Attribute—always resides in double quotes.
3	Chosen value—always resides in double quotes. Only applicable for setvar .



Important • A space resides between command and attribute and between attribute and value.

This table identifies the commands for this format:

Commands	Details
getvar	This command instructs the printer to respond with the current BOOTP setting. <i>Format:</i> ! U1 getvar "ip.bootp.enable"
setvar	This command instructs the printer to turn BOOTP on or off. <i>Format:</i> ! U1 setvar "ip.bootp.enable" "value" <i>Values:</i> "off" = printer does not use BOOTP to get the IP address "on" = printer uses BOOTP to get the IP address <i>Default:</i> "on"



Example • This setvar example shows the value set to "on".

```
! U1 setvar "ip.bootp.enable" "on"
```

When the setvar value is set to "on", the getvar result is "on".


ip.dhcp.cid_all

Description This printer setting defines the entire client identifier (DHCP option 61) if the DHCP is enabled and "ip.dhcp.cid_type" is set to "0", or "2". The MAC address is used if the type is set to "1".

Type getvar; setvar

Command Structure

These are the components of the command structure:

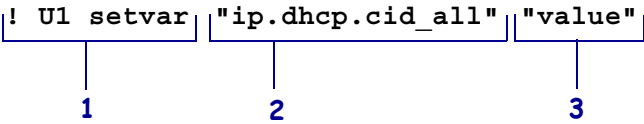

1	Command—always preceded with an exclamation point (!). A space resides between the ! and U1 and between U1 and the command (setvar or getvar).
2	Attribute—always in double quotes.
3	Chosen value—always in double quotes. Only applicable for setvar.



Important • A space resides between command and attribute and between attribute and value.

This table identifies the commands for this format:

Commands	Details
getvar	This command instructs the printer to respond with the client identifier prefix and suffix. <i>Format:</i> ! U1 getvar "ip.dhcp.cid_all"
setvar	This command instructs the printer to change the CID prefix and suffix. <i>Format:</i> ! U1 setvar "ip.dhcp.cid_all" "value" <i>Values:</i> A maximum length of 60 characters if the CID type is ASCII, or 120 characters if the CID type is hexadecimal. <i>Default Value:</i> " "



Example • This setvar example shows the value set to "printer".

```
! U1 setvar "ip.dhcp.cid_all" "printer"
```

What the setvar value is set to is the getvar result. In this example, the getvar result is "printer".


ip.dhcp.cid_enable

Description This command determines if DHCP (option 61) is turned on or off.

Type getvar; setvar

Command Structure

These are the components of the command structure:

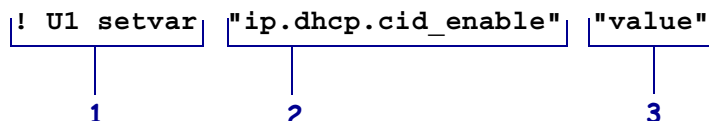

1	Command—always preceded with an exclamation point (!). A space resides between the ! and U1 and between U1 and the command (setvar or getvar).
2	Attribute—always in double quotes.
3	Chosen value—always in double quotes. Only applicable for setvar.



Important • A space resides between command and attribute and between attribute and value.

This table identifies the commands for this format:

Commands	Details
getvar	This command instructs the printer to respond with the status of the client identifier. <i>Format:</i> ! U1 getvar "ip.dhcp.cid_enable"
setvar	This command instructs the printer to set the status of the client identifier. <i>Format:</i> ! U1 setvar "ip.dhcp.cid_enable" "value" <i>Values:</i> "off" = client identifier is turned off "on" = client identifier is turned on <i>Default:</i> "off"



Example • This setvar example shows the value set to "off".

```
! U1 setvar "ip.dhcp.cid_enable" "off"
```

What the setvar value is set to is the getvar result. In this example, the getvar result is "off".


ip.dhcp.cid_prefix

Description This printer setting defines the prefix to be prepended to the DHCP client identifier (option 61) when DHCP is enabled and "ip.dhcp.cid_type" is set to "0" or "2".

Type getvar; setvar

Command Structure

These are the components of the command structure:

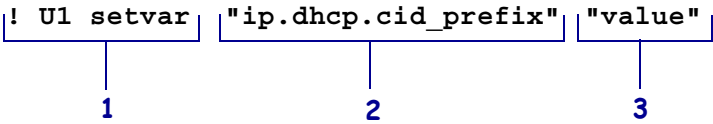

1	Command—always preceded with an exclamation point (!). A space resides between the ! and U1 and between U1 and the command (setvar or getvar).
2	Attribute—always in double quotes.
3	Chosen value—always in double quotes. Only applicable for setvar.



Important • A space resides between command and attribute and between attribute and value.

This table identifies the commands for this format:

Commands	Details
getvar	This command instructs the printer to respond with the client identifier prefix. <i>Format:</i> ! U1 getvar "ip.dhcp.cid_prefix"
setvar	This command instructs the printer to change the CID prefix. <i>Format:</i> ! U1 setvar "ip.dhcp.cid_prefix" "value" <i>Values:</i> Any text string up to 10 characters if the CID type is ASCII, or 20 characters if the CID type is hexadecimal. <i>Default Value:</i> " "



Example • This setvar example shows the value set to "PRT001".

```
! U1 setvar "ip.dhcp.cid_prefix" "PRT001"
```

What the setvar value is set to is the getvar result. In this example, the getvar result is "PRT001".

ip.dhcp.cid_suffix

Description This printer setting defines the unique suffix to be used as the client identifier (DHCP option 61) if DHCP is enabled and "ip.dhcp.cid_type" is set to "0" or "2", not "1".

Type getvar; setvar

Command Structure

These are the components of the command structure:

!	U1	setvar	"ip.dhcp.cid_suffix"	"value"
1			2	3

1	Command—always preceded with an exclamation point (!). A space resides between the ! and U1 and between U1 and the command (setvar or getvar).
2	Attribute—always in double quotes.
3	Chosen value—always in double quotes. Only applicable for setvar .



Important • A space resides between command and attribute and between attribute and value.

This table identifies the commands for this format:

Commands	Details
getvar	This command instructs the printer to respond with the client identifier suffix. <i>Format:</i> ! U1 getvar "ip.dhcp.cid_suffix"
setvar	This command instructs the printer to change the CID value. <i>Format:</i> ! U1 setvar "ip.dhcp.cid_suffix" "value" <i>Values:</i> The maximum length of a value allowed is 60 ASCII characters when the CID type is ASCII, or 120 hexadecimal values when the CID type is hexadecimal. <i>Default Value:</i> " "



Example • This setvar example shows the value set to "printer".

```
! U1 setvar "ip.dhcp.cid_suffix" "printer"
```

What the setvar value is set to is the getvar result. In this example, the getvar result is "printer".


ip.dhcp.cid_type

Description This printer setting defines the type of client identifier (DHCP option 61) that will be sent if DHCP is enabled. A value of "1" means the type of "Ethernet" and the printer's MAC address will be used. A value of "0" or "2" means the client identifier sent will be "ip.dhcp.cid_prefix" concatenated with "ip.dhcp.cid_suffix".

Type getvar; setvar

Command Structure

These are the components of the command structure:

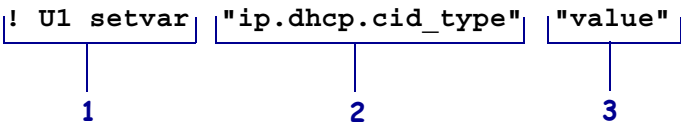

1	Command—always preceded with an exclamation point (!). A space resides between the ! and U1 and between U1 and the command (setvar or getvar).
2	Attribute—always in double quotes.
3	Chosen value—always in double quotes. Only applicable for setvar.



Important • A space resides between command and attribute and between attribute and value.

This table identifies the commands for this format:

Commands	Details
getvar	This command instructs the printer to respond with the client identifier type. <i>Format:</i> ! U1 getvar "ip.dhcp.cid_type"
setvar	This command instructs the printer to enable "synthetic" Client Identifier. <i>Format:</i> ! U1 setvar "ip.dhcp.cid_type" "value" <i>Values:</i> "0" = ASCII string "1" = wireless radio card's MAC address "2" = HEX value <i>Default Value:</i> "1"



Example • This setvar example shows the value set to "1".

```
! U1 setvar "ip.dhcp.cid_type" "1"
```

What the setvar value is set to is the getvar result. In this example, the getvar result is "1".

ip.dhcp.enable

Definition This printer setting turns DHCP on or off. DHCP is a method for acquiring an IP address, netmask, and gateway automatically on printer power-up. It requires a DHCP server on the local network.


Type getvar; setvar



Note • If you are using static IP addressing, the IP protocol must be set to permanent.

Command Structure

These are the components of the command structure:

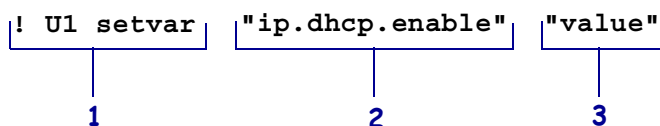

1	Command—always preceded with an exclamation point (!). A space resides between the ! and U1 and between U1 and the command (setvar or getvar).
2	Attribute—always in double quotes.
3	Chosen value—always in double quotes. Only applicable for setvar.



Important • A space resides between command and attribute and between attribute and value.

This table identifies the commands for this format:

Commands	Details
getvar	This command instructs the printer to respond with the DHCP status. <i>Format:</i> ! U1 getvar "ip.dhcp.enable"
setvar	This command instructs the printer to turn DHCP on or off. <i>Format:</i> ! U1 setvar "ip.dhcp.enable" "value" <i>Values:</i> "off" = printer does not use DHCP to get the IP address "on" = printer uses DHCP to get the IP address <i>Default:</i> "on"



Example • This setvar example shows the value set to "on".

```
! U1 setvar "ip.dhcp.enable" "on"
```

When the setvar value is set to "on", the getvar result is "on".


ip.ftp.enable

Description This printer setting refers to the FTP protocol setting. This command tells the printer to turn FTP on or off.

Type getvar; setvar

Command Structure

These are the components of the command structure:

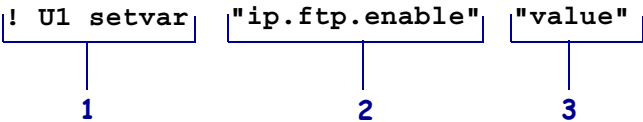

1	Command—always preceded with an exclamation point (!). A space resides between the ! and U1 and between U1 and the command (setvar or getvar).
2	Attribute—always in double quotes.
3	Chosen value—always in double quotes. Only applicable for setvar.



Important • A space resides between command and attribute and between attribute and value.

This table identifies the commands for this format:

Commands	Details
getvar	This command instructs the printer to respond with the FTP status. <i>Format:</i> ! U1 getvar "ip.ftp.enable"
setvar	This command instructs the printer to turn FTP on or off. <i>Format:</i> ! U1 setvar "ip.ftp.enable" "value" <i>Values:</i> "off" = disables FTP "on" = enables FTP <i>Default:</i> "on"



Example • This setvar example shows the FTP status set to "on".

```
! U1 setvar "ip.ftp.enable" "on"
```

When the setvar value is set to "on", the getvar result is that the FTP status is "on".

ip.gateway

Description This command instructs the printer to change the gateway address.


Type getvar; setvar



Note • This setting refers to the gateway address. A set value is ignored if the IP protocol is not set to permanent.

Command Structure

These are the components of the command structure:

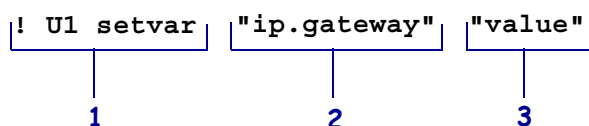

1	Command—always preceded with an exclamation point (!). A space resides between the ! and U1 and between U1 and the command (setvar or getvar).
2	Attribute—always in double quotes.
3	Chosen value—always in double quotes. Only applicable for setvar .



Important • A space resides between command and attribute and between attribute and value.

This table identifies the commands for this format:

Commands	Details
getvar	This command instructs the printer to respond with the gateway address. <i>Format:</i> ! U1 getvar "ip.gateway"
setvar	This command instructs the printer to change the gateway address. <i>Format:</i> ! U1 setvar "ip.gateway" "value" <i>Values:</i> Any valid gateway address <i>Default:</i> "0.0.0.0"



Example • This setvar example shows the value set to "10.3.5.1".

```
! U1 setvar "ip.gateway" "10.3.5.1"
```

When the setvar value is set to "10.3.5.1", the getvar result is "10.3.5.1".


ip.http.enable

Description This printer setting refers to the HTTP protocol/web server setting.

Type getvar; setvar

Command Structure

These are the components of the command structure:

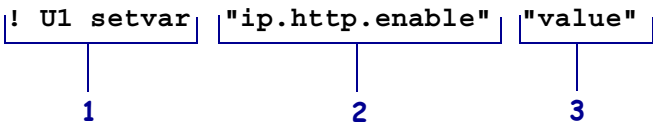

1	Command—always preceded with an exclamation point (!). A space resides between the ! and U1 and between U1 and the command (setvar or getvar).
2	Attribute—always in double quotes.
3	Chosen value—always in double quotes. Only applicable for setvar .



Important • A space resides between command and attribute and between attribute and value.

This table identifies the commands for this format:

Commands	Details
getvar	This command instructs the printer to respond with the HTTP status. <i>Format:</i> ! U1 getvar "ip.http.enable"
setvar	This command instructs the printer to change HTTP to on or off. <i>Format:</i> ! U1 setvar "ip.http.enable" "value" <i>Values:</i> "off" = disables HTTP protocol "on" = enables HTTP protocol <i>Default:</i> "on"



Example • This setvar example shows the value set to "on".

```
! U1 setvar "ip.http.enable" "on"
```

When the setvar value is set to "on", the getvar result is "on".

ip.lpd.enable

Description This printer setting refers to the LPD (Line Printer Daemon) protocol setting.


Type getvar; setvar



Important • LPD communications from the host should be directed to port 515.

Command Structure

These are the components of the command structure:

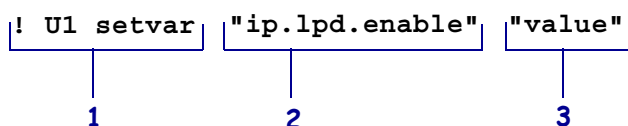

1	Command—always preceded with an exclamation point (!). A space resides between the ! and U1 and between U1 and the command (setvar or getvar).
2	Attribute—always in double quotes.
3	Chosen value—always in double quotes. Only applicable for setvar .



Important • A space resides between command and attribute and between attribute and value.

This table identifies the commands for this format:

Commands	Details
getvar	This command instructs the printer to respond with the LPD status. <i>Format:</i> ! U1 getvar "ip.lpd.enable"
setvar	This command instructs the printer to turn LPD on or off. <i>Format:</i> ! U1 setvar "ip.lpd.enable" "value" <i>Values:</i> "off" = disables LPD protocol "on" = enables LPD protocol <i>Default:</i> "on"



Example • This setvar example shows the value set to "on".

```
! U1 setvar "ip.lpd.enable" "on"
```

When the setvar value is set to "on", the getvar result is "on".


ip.netmask

Description This setting refers to the subnet mask address. This value is ignored if the IP protocol is not set to permanent.

Type getvar; setvar

Command Structure

These are the components of the command structure:

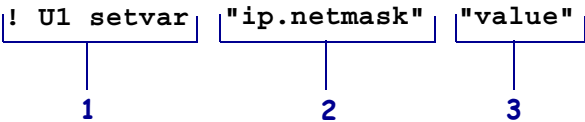

1	Command—always preceded with an exclamation point (!). A space resides between the ! and U1 and between U1 and the command (setvar or getvar).
2	Attribute—always in double quotes.
3	Chosen value—always in double quotes. Only applicable for setvar.



Important • A space resides between command and attribute and between attribute and value.

This table identifies the commands for this format:

Commands	Details
getvar	This command instructs the printer to respond with subnet mask. <i>Format:</i> ! U1 getvar "ip.netmask"
setvar	This command instructs the printer to change the subnet mask. <i>Format:</i> ! U1 setvar "ip.netmask" "value" <i>Values:</i> Any valid subnet mask. <i>Default:</i> "255.255.255.0"



Example • This setvar example shows the value set to "255.255.255.0".

```
! U1 setvar "ip.netmask" "255.255.255.0"
```

When the setvar value is set to "255.255.255.0", the getvar result is "255.255.255.0".


ip.pop3.enable

Description This printer setting determines if the printer queries a POP3 mailbox for mail.

Type getvar; setvar

Command Structure

These are the components of the command structure:

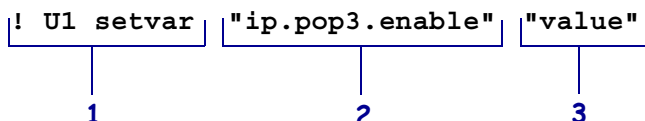

1	Command—always preceded with an exclamation point (!). A space resides between the ! and U1 and between U1 and the command (setvar or getvar).
2	Attribute—always in double quotes.
3	Chosen value—always in double quotes. Only applicable for setvar .



Important • A space resides between command and attribute and between attribute and value.

This table identifies the commands for this format:

Commands	Details
getvar	This command instructs the printer to respond with the POP3 status. <i>Format:</i> ! U1 getvar "ip.pop3.enable"
setvar	This command instructs the printer to turn POP3 on or off. <i>Format:</i> ! U1 setvar "ip.pop3.enable" "value" <i>Values:</i> "off" = disables POP3 "on" = enables POP3 <i>Default:</i> "on"



Example • This setvar example shows the value set to "on".

```
! U1 setvar "ip.pop3.enable" "on"
```

When the setvar value is set to "on", the getvar result is "on".


ip.pop3.password

Description This printer setting refers to the POP3 mailbox password. This only applies if "ip.pop3.enable" is set to on.

Type getvar; setvar

Command Structure

These are the components of the command structure:

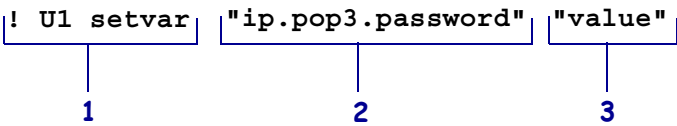

1	Command—always preceded with an exclamation point (!). A space resides between the ! and U1 and between U1 and the command (setvar or getvar).
2	Attribute—always in double quotes.
3	Chosen value—always in double quotes. Only applicable for setvar.



Important • A space resides between command and attribute and between attribute and value.

This table identifies the commands for this format:

Commands	Details
getvar	This command instructs the printer to respond with the POP3 password. <i>Format:</i> ! U1 getvar "ip.pop3.password" For protection a single "*" prints.
setvar	This command instructs the printer to change the POP3 password. <i>Format:</i> ! U1 setvar "ip.pop3.password" "value" <i>Values:</i> A maximum of 20 alphanumeric characters <i>Default:</i> " "



Example • This setvar example shows the value set to "password".

! U1 setvar "ip.pop3.password" "password"

When the setvar value is set to "password", the getvar result is "*".

ip.pop3.poll

Description This printer setting refers to how frequent (in seconds) the printer queries a POP3 mailbox for new mail. This only applies if the "ip.pop3.enable" is set to on.


Type getvar; setvar



Note • A poll value of less than thirty seconds is not recommended. The printer is unresponsive for several seconds when polling for email depending on data transfer time from the server to the printer.

Command Structure

These are the components of the command structure:

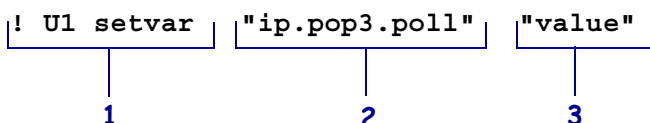

1	Command—always preceded with an exclamation point (!). A space resides between the ! and U1 and between U1 and the command (setvar or getvar).
2	Attribute—always in double quotes.
3	Chosen value—always in double quotes. Only applicable for setvar.



Important • A space resides between command and attribute and between attribute and value.

This table identifies the commands for this format:

Commands	Details
getvar	This command instructs the printer to respond with the POP3 poll frequency (in seconds). <i>Format:</i> ! U1 getvar "ip.pop3.poll"
setvar	This command instructs the printer to change the POP3 poll interval. A value of "0" causes the printer to only query the POP3 mailbox one time, on printer power up, or following a network reset. <i>Format:</i> ! U1 setvar "ip.pop3.poll" "value" <i>Values:</i> "0" through "65535" <i>Default:</i> "0"



Example • This setvar example shows the value set to "0".

```
! U1 setvar "ip.pop3.poll" "0"
```

When the setvar value is set to "0", the getvar result is "0".


ip.pop3.server_addr

Description This printer setting refers to the POP3 server IP address that the printer contacts when checking for new mail. This only applies if "ip.pop3.enable" is set to on.

Type getvar; setvar

Command Structure

These are the components of the command structure:

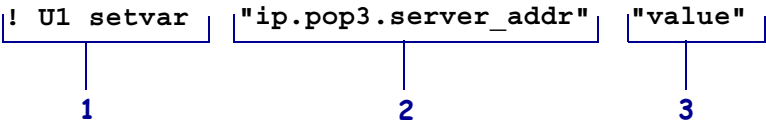

1	Command—always preceded with an exclamation point (!). A space resides between the ! and U1 and between U1 and the command (setvar or getvar).
2	Attribute—always in double quotes.
3	Chosen value—always in double quotes. Only applicable for setvar.



Important • A space resides between command and attribute and between attribute and value.

This table identifies the commands for this format:

Commands	Details
getvar	This command instructs the printer to respond with the POP3 server address. <i>Format:</i> ! U1 getvar "ip.pop3.server_addr"
setvar	This command instructs the printer to change the POP3 server address. <i>Format:</i> ! U1 setvar "ip.pop3.server_addr" "value" <i>Values:</i> Any valid POP3 server address <i>Default:</i> "0.0.0.0"



Example • This setvar example shows the value set to "10.3.5.10".

! U1 setvar "ip.pop3.server_addr" "10.3.5.10"

When the setvar value is set to "10.3.5.10", the getvar result is "10.3.5.10".


ip.pop3.username

Description This printer setting refers to the POP3 user name. This only applies if the "ip.pop3.enable" is set to on.

Type getvar; setvar

Command Structure

These are the components of the command structure:

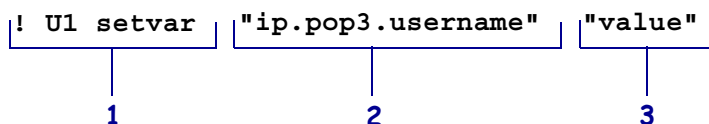

1	Command—always preceded with an exclamation point (!). A space resides between the ! and U1 and between U1 and the command (setvar or getvar).
2	Attribute—always in double quotes.
3	Chosen value—always in double quotes. Only applicable for setvar.



Important • A space resides between command and attribute and between attribute and value.

This table identifies the commands for this format:

Commands	Details
getvar	This command instructs the printer to respond with the POP3 user name. <i>Format:</i> ! U1 getvar "ip.pop3.username"
setvar	This command instructs the printer to change the POP3 user name. <i>Format:</i> ! U1 setvar "ip.pop3.username" "value" <i>Values:</i> A maximum of 20 alphanumeric characters <i>Default:</i> " "



Example • This setvar example shows the value set to "user".

```
! U1 setvar "ip.pop3.username" "user"
```

When the setvar value is set to "user", the getvar result is "user".


ip.port

Description This printer setting refers to the port number that the TCP print service is listening on. Normal TCP communications from the host should be directed to this port.

Type getvar; setvar

Command Structure

These are the components of the command structure:

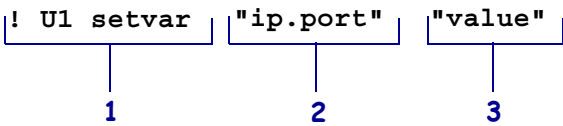

1	Command—always preceded with an exclamation point (!). A space resides between the ! and U1 and between U1 and the command (setvar or getvar).
2	Attribute—always in double quotes.
3	Chosen value—always in double quotes. Only applicable for setvar.



Important • A space resides between command and attribute and between attribute and value.

This table identifies the commands for this format:

Commands	Details
getvar	This command instructs the printer to respond with the TCP/UDP port number. <i>Format:</i> ! U1 getvar "ip.port"
setvar	This command instructs the printer to set the TCP/UDP port number. <i>Format:</i> ! U1 setvar "ip.port" "value" <i>Values:</i> 1 - 65535 (excluding any ports currently used by other services, such as 21, 23, 80, and 515). <i>Default:</i> "9100"



Example • This setvar example shows the value set to "9100".

```
! U1 setvar "ip.port" "9100"
```

When the setvar value is set to "9100", the getvar result is "9100".


ip.smtp.domain

Description This printer setting refers to the domain name used by the printer in sending email with respect to the SMTP server.

Type getvar; setvar

Command Structure

These are the components of the command structure:

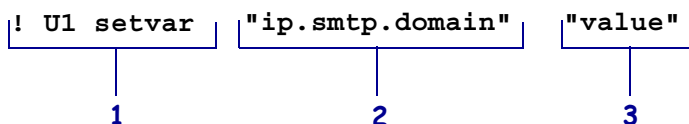

1	Command—always preceded with an exclamation point (!). A space resides between the ! and U1 and between U1 and the command (setvar or getvar).
2	Attribute—always in double quotes.
3	Chosen value—always in double quotes. Only applicable for setvar .



Important • A space resides between command and attribute and between attribute and value.

This table identifies the commands for this format:

Commands	Details
getvar	This command instructs the printer to return the SMTP domain name. <i>Format:</i> ! U1 getvar "ip.smtp.domain"
setvar	This command instructs the printer to change the SMTP domain name. <i>Format:</i> ! U1 setvar "ip.smtp.domain" "value" <i>Values:</i> A maximum of 24 alphanumeric characters <i>Default:</i> "ZBRPrintServer"



Example • This setvar example shows the value set to "ZBRPrintServer.com".

```
! U1 setvar "ip.smtp.domain" "ZBRPrintServer.com"
```

When the setvar value is set to "ZBRPrintServer.com", the getvar result is "ZBRPrintServer.com".


ip.smtp.enable

Description This printer setting refers to the SMTP protocol.

Type getvar; setvar

Command Structure

These are the components of the command structure:

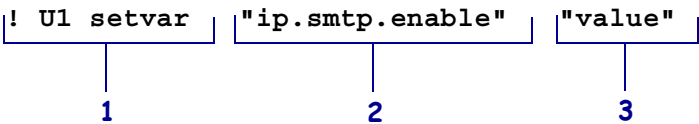

1	Command—always preceded with an exclamation point (!). A space resides between the ! and U1 and between U1 and the command (setvar or getvar).
2	Attribute—always in double quotes.
3	Chosen value—always in double quotes. Only applicable for setvar .



Important • A space resides between command and attribute and between attribute and value.

This table identifies the commands for this format:

Commands	Details
getvar	This command instructs the printer to return the SMTP status. <i>Format:</i> ! U1 getvar "ip.smtp.enable"
setvar	This command instructs the printer to turn SMTP on or off. <i>Format:</i> ! U1 setvar "ip.smtp.enable" "value" <i>Values:</i> "off" = disables SMTP "on" = enables SMTP <i>Default:</i> "on"



Example • This setvar example shows the value set to "on".

```
! U1 setvar "ip.smtp.enable" "on"
```

When the setvar value is set to "on", the getvar result is "on".


ip.smtp.server_addr

Description This printer setting refers to the IP address of the SMTP server used for sending email.

Type getvar; setvar

Command Structure

These are the components of the command structure:

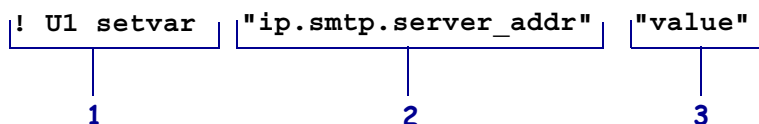

1	Command—always preceded with an exclamation point (!). A space resides between the ! and U1 and between U1 and the command (setvar or getvar).
2	Attribute—always in double quotes.
3	Chosen value—always in double quotes. Only applicable for setvar.



Important • A space resides between command and attribute and between attribute and value.

This table identifies the commands for this format:

Commands	Details
getvar	This command instructs the printer to respond with the current SMTP server address. <i>Format:</i> ! U1 getvar "ip.smtp.server_addr"
setvar	This command instructs the printer to change the SMTP server address. <i>Format:</i> ! U1 setvar "ip.smtp.server_addr" "value" <i>Values:</i> Any valid IP address. <i>Default:</i> 0.0.0.0



Example • This setvar example shows the value set to 10.10.10.10.

```
! U1 setvar "ip.smtp.server_addr" "10.10.10.10"
```

When the setvar value is set to "10.10.10.10", the getvar result is "10.10.10.10".


ip.snmp.enable

Description This printer setting refers to the SNMP protocol.

Type getvar; setvar

Command Structure

These are the components of the command structure:

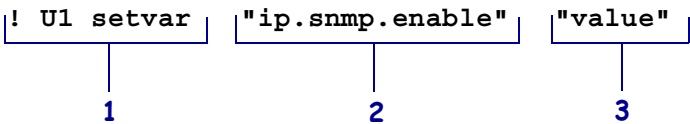

1	Command—always preceded with an exclamation point (!). A space resides between the ! and U1 and between U1 and the command (setvar or getvar).
2	Attribute—always in double quotes.
3	Chosen value—always in double quotes. Only applicable for setvar .



Important • A space resides between command and attribute and between attribute and value.

This table identifies the commands for this format:

Commands	Details
getvar	This command instructs the printer to respond with the SNMP status. <i>Format:</i> ! U1 getvar "ip.snmp.enable"
setvar	This command instructs the printer to enable or disable the SNMP protocol. <i>Format:</i> ! U1 setvar "ip.snmp.enable" "value" <i>Values:</i> "on" = enable the SNMP protocol "off" = disable the SNMP protocol <i>Default:</i> "on"



Example • This setvar example shows the value set to "on".

```
! U1 setvar "ip.snmp.enable" "on"
```

When the setvar value is set to "on", the getvar result is "on".


ip.snmp.get_community_name

Description This printer setting is used when making SNMP queries. The SNMP client must supply the get community name that matches the printer's get community name in order to query any SNMP data.

Type getvar; setvar

Command Structure

These are the components of the command structure:

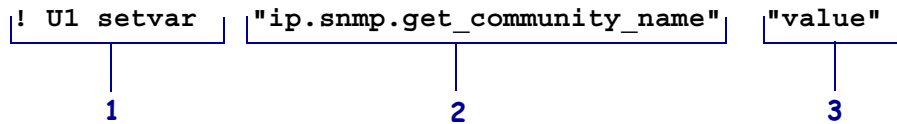

1	Command—always preceded with an exclamation point (!). A space resides between the ! and U1 and between U1 and the command (setvar or getvar).
2	Attribute—always in double quotes.
3	Chosen value—always in double quotes. Only applicable for setvar .



Important • A space resides between command and attribute and between attribute and value.

This table identifies the commands for this format:

Commands	Details
getvar	This command instructs the printer to get the SNMP get community name string. <i>Format:</i> ! U1 getvar "ip.snmp.get_community_name" For protection a single "*" prints.
setvar	This command instructs the printer to set the SNMP get community name string. <i>Format:</i> ! U1 setvar "ip.snmp.get_community_name" "value" <i>Values:</i> A maximum of 19 alphanumeric characters. <i>Default:</i> "public"



Example • This setvar example shows the value set to "public".

```
! U1 setvar "ip.snmp.get_community_name" "public"
```

When the setvar value is set to "public", the getvar result is "*".

ip.snmp.set_community_name

Description This printer setting is used when changing SNMP data remotely. To alter any SNMP data, the SNMP client must supply the set community name that matches the printer's set community name.

Type getvar; setvar

Command Structure

These are the components of the command structure:

! U1 setvar

"ip.snmp.set_community_name"

"value"

1

2

3

1	Command—always preceded with an exclamation point (!). A space resides between the ! and U1 and between U1 and the command (setvar or getvar).
2	Attribute—always in double quotes.
3	Chosen value—always in double quotes. Only applicable for setvar.



Important • A space resides between command and attribute and between attribute and value.

This table identifies the commands for this format:

Commands	Details
getvar	This command instructs the printer to return the printer's SNMP set community name string. <i>Format:</i> ! U1 getvar "ip.snmp.set_community_name" For protection a single "*" returns.
setvar	This command instructs the printer to set the SNMP set community name string. <i>Format:</i> ! U1 setvar "ip.snmp.set_community_name" "value" <i>Values:</i> A maximum of 19 alphanumeric characters <i>Default:</i> "public"



Example • This setvar example shows the value set to "public".
! U1 setvar "ip.snmp.set_community_name" "public"
When the setvar value is set to "public", the getvar result is "*".


ip.tcp.enable

Description This printer setting refers to the TCP socket protocol.

Type getvar; setvar

Command Structure

These are the components of the command structure:

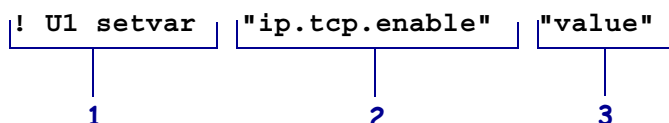

1	Command—always preceded with an exclamation point (!). A space resides between the ! and U1 and between U1 and the command (setvar or getvar).
2	Attribute—always in double quotes.
3	Chosen value—always in double quotes. Only applicable for setvar .



Important • A space resides between command and attribute and between attribute and value.

This table identifies the commands for this format:

Commands	Details
getvar	This command instructs the printer to respond with the TCP status. <i>Format:</i> ! U1 getvar "ip.tcp.enable"
setvar	This command instructs the printer to turn the TCP on or off. <i>Format:</i> ! U1 setvar "ip.tcp.enable" "value" <i>Values:</i> "off" = disables TCP protocol "on" = enables TCP protocol <i>Default:</i> "on"



Example • This setvar example shows the value set to "on".

```
! U1 setvar "ip.tcp.enable" "on"
```

When the setvar value is set to "on", the getvar result is "on".


ip.telnet.enable

Description This printer setting refers to the TELNET (port 23) protocol.

Type getvar; setvar

Command Structure

These are the components of the command structure:

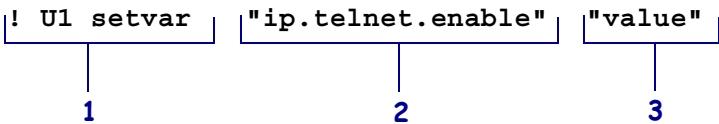

1	Command—always preceded with an exclamation point (!). A space resides between the ! and U1 and between U1 and the command (setvar or getvar).
2	Attribute—always in double quotes.
3	Chosen value—always in double quotes. Only applicable for setvar .



Important • A space resides between command and attribute and between attribute and value.

This table identifies the commands for this format:

Commands	Details
getvar	This command instructs the printer to respond with the TELNET status. <i>Format:</i> ! U1 getvar "ip.telnet.enable"
setvar	This command instructs the printer to turn TELNET on or off. <i>Format:</i> ! U1 setvar "ip.telnet.enable" "value" <i>Values:</i> "off" = disables telnet protocol "on" = enables telnet protocol <i>Default:</i> "on"



Example • This setvar example shows the value set to "on".

```
! U1 setvar "ip.telnet.enable" "on"
```

When the setvar value is set to "on", the getvar result is "on".


ip.udp.enable

Description This printer setting refers to the UDP socket protocol.

Type getvar; setvar

Command Structure

These are the components of the command structure:

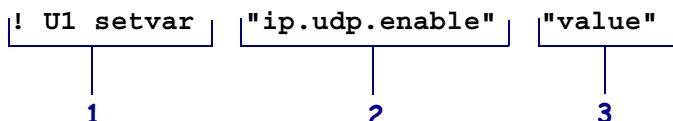

1	Command—always preceded with an exclamation point (!). A space resides between the ! and U1 and between U1 and the command (setvar or getvar).
2	Attribute—always in double quotes.
3	Chosen value—always in double quotes. Only applicable for setvar .



Important • A space resides between command and attribute and between attribute and value.

This table identifies the commands for this format:

Commands	Details
getvar	This command instructs the printer to respond with the UDP status. <i>Format:</i> ! U1 getvar "ip.udp.enable"
setvar	This command instructs the printer to turn UDP on or off. <i>Format:</i> ! U1 setvar "ip.udp.enable" "value" <i>Values:</i> "off" = disables UDP protocol "on" = enables UDP protocol <i>Default:</i> "off"



Example • This setvar example shows the value set to "on".

```
! U1 setvar "ip.udp.enable" "on"
```

When the setvar value is set to "on", the getvar result is "on".


wlan.adhocautomode

Description This printer setting refers to enabling or disabling the adhoc auto mode.

Type getvar; setvar

Command Structure

These are the components of the command structure:

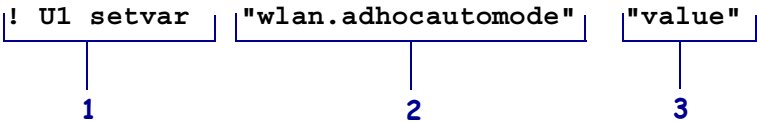

1	Command—always preceded with an exclamation point (!). A space resides between the ! and U1 and between U1 and the command (setvar or getvar).
2	Attribute—always in double quotes.
3	Chosen value—always in double quotes. Only applicable for setvar.



Important • A space resides between command and attribute and between attribute and value.

This table identifies the commands for this format:

Commands	Details
getvar	This command instructs the printer to respond with the adhoc auto mode status. <i>Format:</i> ! U1 getvar "wlan.adhocautomode"
setvar	This command instructs the printer to set the adhoc auto mode. <i>Format:</i> ! U1 setvar "wlan.adhocautomode" "value" <i>Values:</i> "on" = adhoc auto mode enabled "off" = adhoc auto mode disabled <i>Default:</i> "off"



Example • This setvar example shows the value set to "on".

```
! U1 setvar "wlan.adhocautomode" "on"
```

When the setvar value is set to "on", the getvar result is "on".


wlan.adhocchannel

Description This printer setting refers to specifying the wireless channel for adhoc channel.

Type getvar; setvar

Command Structure

These are the components of the command structure:

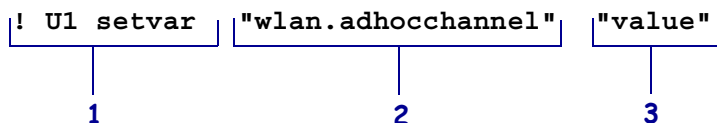

1	Command—always preceded with an exclamation point (!). A space resides between the ! and U1 and between U1 and the command (setvar or getvar).
2	Attribute—always in double quotes.
3	Chosen value—always in double quotes. Only applicable for setvar .



Important • A space resides between command and attribute and between attribute and value.

This table identifies the commands for this format:

Commands	Details
getvar	This command instructs the printer to respond with the wireless channel for adhoc channel mode. <i>Format:</i> ! U1 getvar "wlan.adhocchannel"
setvar	This command instructs the printer to set the wireless channel for adhoc channel mode. <i>Format:</i> ! U1 setvar "wlan.adhocchannel" "value" <i>Values:</i> Decimal value between 1 and 16 inclusive <i>Default:</i> "1"



Example • This **setvar** example shows the value set to "1".

```
! U1 setvar "wlan.adhocchannel" "1"
```

When the **setvar** value is set to "1", the **getvar** result is "1".


wlan.associated

Description This command refers to if the printer is or is not associated with an access point (AP).

Type getvar

Command Structure

These are the components of the command structure:

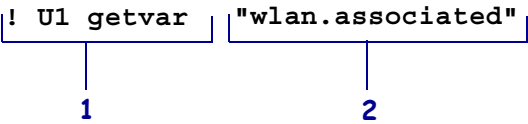

1	Command—always preceded with an exclamation point (!). A space resides between the ! and U1 and between U1 and the command (getvar).
2	Attribute—always in double quotes.



Important • A space resides between command and attribute.

This table identifies the commands for this format:

Commands	Details
getvar	This command instructs the printer to respond with yes or no, which identifies if it is associated with the AP. <i>Format:</i> ! U1 getvar "wlan.associated"



Example • In this example, the getvar result is "yes".

```
! U1 getvar "wlan.associated"
```


wlan.channel_mask

Description This printer setting refers to specifying the wireless channel masks to enable and disable various channels.

Type getvar; setvar

Command Structure

These are the components of the command structure:

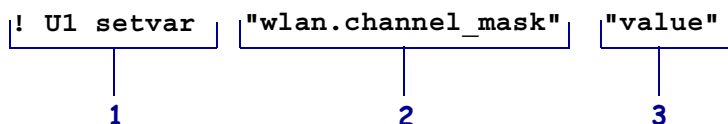

1	Command—always preceded with an exclamation point (!). A space resides between the ! and U1 and between U1 and the command (setvar or getvar).
2	Attribute—always in double quotes.
3	Chosen value—always in double quotes. Only applicable for setvar .



Important • A space resides between command and attribute and between attribute and value.

This table identifies the commands for this format:

Commands	Details
getvar	This command instructs the printer to respond with the wireless channel mask value. <i>Format:</i> ! U1 getvar "wlan.channel_mask"
setvar	This command instructs the printer to set the wireless channel mask value. <i>Format:</i> ! U1 setvar "wlan.channel_mask" "value" <i>Values:</i> 4 Hexadecimal digits preceded by "0x" (0x0000 to 0xFFFF). For commonly used channel masks, see Table 17 on page 401 . <i>Default:</i> "0x7FFF"

Table 17 • Channel Mask Settings

Region	Channel Mask
United States, Canada, Latin America	0x7FFF
Europe, Middle East, Africa, other	0x1FFF
Japan	0x3FFF



Example • This setvar example shows the value set to "0x7FF".

```
! U1 setvar "wlan.channel_mask" "0x7FF"
```

When the setvar value is set to "0x7FF", the getvar result is "0x7FF".


wlan.essid

Description This printer setting refers to the printer's stored ESSID. Setting the ESSID to "" will set the printer in a "broadcast" mode.

Type getvar; setvar

Command Structure

These are the components of the command structure:

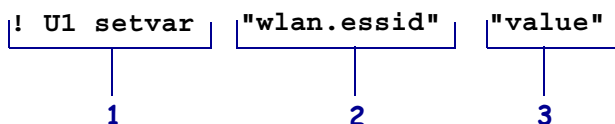

1	Command—always preceded with an exclamation point (!). A space resides between the ! and U1 and between U1 and the command (setvar or getvar).
2	Attribute—always in double quotes.
3	Chosen value—always in double quotes. Only applicable for setvar.



Important • A space resides between command and attribute and between attribute and value.

This table identifies the commands for this format:

Commands	Details
getvar	This command instructs the printer to respond with the stored ESSID value. <i>Format:</i> ! U1 getvar "wlan.essid"
setvar	This command instructs the printer to change the ESSID. <i>Format:</i> ! U1 setvar "wlan.essid" "value" <i>Values:</i> 32 character alphanumeric string <i>Default:</i> "125"



Example • This setvar example shows the value set to "125".

```
! U1 setvar "wlan.essid" "125"
```

When the setvar value is set to "125", the getvar result is "125".


wlan.firmware_version

Description This command refers to the firmware version of the wireless radio card.

Type getvar

Command Structure

These are the components of the command structure:

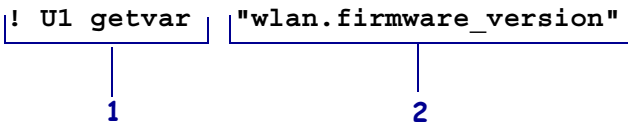

1	Command—always preceded with an exclamation point (!). A space resides between the ! and U1 and between U1 and the command (getvar).
2	Attribute—always in double quotes.



Important • A space resides between command and attribute.

This table identifies the commands for this format:

Commands	Details
getvar	This command instructs the printer to respond with the current version of the wireless radio card firmware. <i>Format:</i> ! U1 getvar "wlan.firmware_version"



Example • In this example, the getvar result is the version of Symbol 4137 card (for example, "F3.91-69").

```
! U1 getvar "wlan.firmware_version"
```


wlan.keep_alive.enable

Description This setting controls the printers ability to send a LSAP (link service access point) packet to the access point on an user controllable interval. This feature is included to accommodate access points that require a regular confirmation that wireless clients are still active.

Type getvar; setvar

Command Structure

These are the components of the command structure:

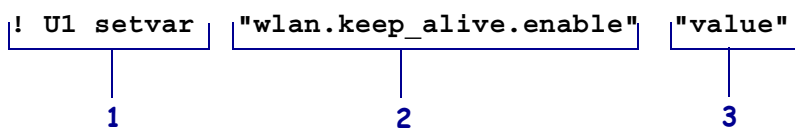

1	Command—always preceded with an exclamation point (!). A space resides between the ! and U1 and between U1 and the command (setvar or getvar).
2	Attribute—always in double quotes.
3	Chosen value—always in double quotes. Only applicable for setvar .



Important • A space resides between command and attribute and between attribute and value.

This table identifies the commands for this format:

Commands	Details
getvar	This command instructs the printer to respond with the wlan.keep_alive.enable setting. <i>Format:</i> ! U1 getvar "wlan.keep_alive.enable"
setvar	This command instructs the printer to send a LSAP (link service access point) packet to the access point on an user controllable interval. <i>Format:</i> ! U1 setvar "wlan.keep_alive.enable" "value" <i>Values:</i> "on" = turns on keep_alive "off" = turns off keep_alive <i>Default:</i> "on"



Example • This setvar example shows the value set to "on".

```
! U1 setvar "wlan.keep_alive.enable" "on"
```

When the setvar value is set to "on", the getvar result is "on".


wlan.keep_alive.timeout

Description This printer setting manages the interval at which the LSAP (link service access point) packet is sent.

Type getvar; setvar

Command Structure

These are the components of the command structure:

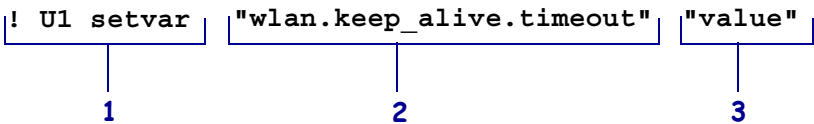

1	Command—always preceded with an exclamation point (!). A space resides between the ! and U1 and between U1 and the command (setvar or getvar).
2	Attribute—always in double quotes.
3	Chosen value—always in double quotes. Only applicable for setvar.



Important • A space resides between command and attribute and between attribute and value.

This table identifies the commands for this format:

Commands	Details
getvar	This command instructs the printer to respond with the wlan.keep_alive.timeout interval value. <i>Format:</i> ! U1 getvar "wlan.keep_alive.timeout"
setvar	This command instructs the printer to configure the frequency at which the printer sends the wlan.keep_alive packet. <i>Format:</i> ! U1 setvar "wlan.keep_alive.timeout" "value" <i>Values:</i> 5 to 300 seconds <i>Default:</i> "15"



Example • This setvar example shows the value set to "15".

```
! U1 setvar "wlan.keep_alive.timeout" "15"
```

When the setvar value is set to "15", the getvar result is "15".


wlan.kerberos.kdc

Description This printer setting refers to the Kerberos Key Distribution Center (KDC). The KDC is a trusted server which maintains a database with account information for all security principals (users) for a particular site or administrative domain (realm).

Type getvar; setvar

Command Structure

These are the components of the command structure:

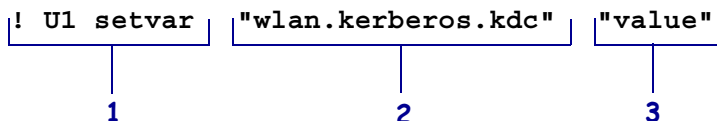

1	Command—always preceded with an exclamation point (!). A space resides between the ! and U1 and between U1 and the command (setvar or getvar).
2	Attribute—always in double quotes.
3	Chosen value—always in double quotes. Only applicable for setvar .



Important • A space resides between command and attribute and between attribute and value.

This table identifies the commands for this format:

Commands	Details
getvar	This command instructs the printer to respond with the current Kerberos KDC. <i>Format:</i> ! U1 getvar "wlan.kerberos.kdc"
setvar	This command instructs the printer to change the Kerberos KDC. <i>Format:</i> ! U1 setvar "wlan.kerberos.kdc" "value" <i>Values:</i> 0-32 ASCII characters <i>Default:</i> "krbtgt"



Example • This setvar example shows the value set to "krbtgt".

```
! U1 setvar "wlan.kerberos.kdc" "krbtgt"
```

When the setvar value is set to "krbtgt", the getvar result is "krbtgt".


wlan.kerberos.password

Description This printer setting refers to the Kerberos password. The password must correspond to a user profile established on the Kerberos KDC server in use.

Type getvar; setvar

Command Structure

These are the components of the command structure:

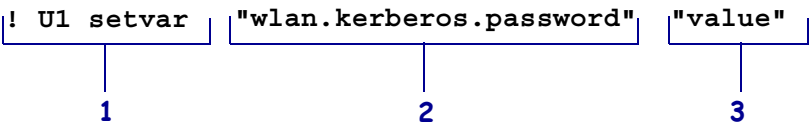

1	Command—always preceded with an exclamation point (!). A space resides between the ! and U1 and between U1 and the command (setvar or getvar).
2	Attribute—always in double quotes.
3	Chosen value—always in double quotes. Only applicable for setvar.



Important • A space resides between command and attribute and between attribute and value.

This table identifies the commands for this format:

Commands	Details
getvar	This command instructs the printer to respond with the current Kerberos password. <i>Format:</i> ! U1 getvar "wlan.kerberos.password" For protection a single "*" prints.
setvar	This command instructs the printer to set the Kerberos password. <i>Format:</i> ! U1 setvar "wlan.kerberos.password" "value" <i>Values:</i> 0-32 alphanumeric characters <i>Default:</i> "password"



Example • This setvar example shows the value set to "password".

```
! U1 setvar "wlan.kerberos.password" "password"
```

When the setvar value is set to "password", the getvar result is "*".

wlan.kerberos.realm

Description This printer setting refers to the Kerberos realm, an administrative domain with its own Kerberos server (KDC).



Important • If you are using a Windows 2000 Server the realm must be all upper-case.

Type getvar; setvar

Command Structure

These are the components of the command structure:

<code>! U1 setvar</code>	<code>"wlan.kerberos.realm"</code>	<code>"value"</code>
1	2	3

1	Command—always preceded with an exclamation point (!). A space resides between the ! and U1 and between U1 and the command (setvar or getvar).
2	Attribute—always in double quotes.
3	Chosen value—always in double quotes. Only applicable for setvar .



Important • A space resides between command and attribute and between attribute and value.

This table identifies the commands for this format:

Commands	Details
getvar	This command instructs the printer to respond with the current Kerberos realm. <i>Format:</i> ! U1 getvar "wlan.kerberos.realm"
setvar	This command instructs the printer to change the Kerberos realm. <i>Format:</i> ! U1 setvar "wlan.kerberos.realm" "value" <i>Values:</i> 0-64 alphanumeric characters <i>Default:</i> "kerberos"



Example • This setvar example shows the value set to "zebra".

```
! U1 setvar "wlan.kerberos.realm" "zebra"
```

When the setvar value is set to "zebra", the getvar result is "zebra".


wlan.kerberos.username

Description This printer setting refers to the Kerberos user name. The user name must correspond to a user profile established on the Kerberos KDC server in use.

Type getvar; setvar

Command Structure

These are the components of the command structure:

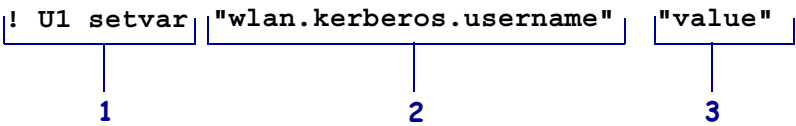

1	Command—always preceded with an exclamation point (!). A space resides between the ! and U1 and between U1 and the command (setvar or getvar).
2	Attribute—always in double quotes.
3	Chosen value—always in double quotes. Only applicable for setvar.



Important • A space resides between command and attribute and between attribute and value.

This table identifies the commands for this format:

Commands	Details
getvar	This command instructs the printer to respond with the current Kerberos user name. <i>Format:</i> ! U1 getvar "wlan.kerberos.username"
setvar	This command instructs the printer to change the Kerberos user name. <i>Format:</i> ! U1 setvar "wlan.kerberos.username" "value" <i>Values:</i> 0-32 alphanumeric characters <i>Default:</i> "user"



Example • This setvar example shows the value set to "user".

! U1 setvar "wlan.kerberos.username" "user"

When the setvar value is set to "user", the getvar result is "user".

wlan.operating_mode

Description This printer setting refers to the network operating mode. Infrastructure mode means that the printer will try to associate with an access point. Ad hoc mode means that the printer will try to associate with a device other than an access point and join a standalone network.


Type getvar; setvar

To use "ad hoc" mode configure the printer as follows:

- Set the ESSID to the new network's ESSID.
- Turn off the DHCP and assign an IP Address to the printer.
- Set the subnet mask on the printer to the new network's subnet mask.
- Change the operating mode on the printer to "ad hoc".

Command Structure

These are the components of the command structure:

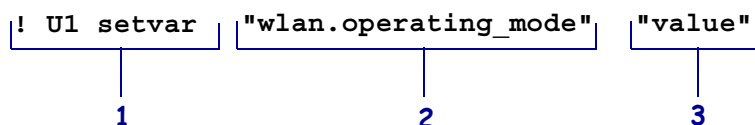

1	Command—always preceded with an exclamation point (!). A space resides between the ! and U1 and between U1 and the command (setvar or getvar).
2	Attribute—always in double quotes.
3	Chosen value—always in double quotes. Only applicable for setvar .



Important • A space resides between command and attribute and between attribute and value.

This table identifies the commands for this format:

Commands	Details
getvar	This command instructs the printer to respond with the network-mode value. <i>Format:</i> ! U1 getvar "wlan.operating_mode"
setvar	This command instructs the printer to set the network operating mode. <i>Format:</i> ! U1 setvar "wlan.operating_mode" "value" <i>Values:</i> "adhoc" = printer will try to associate with a network device "infrastructure" = printer will try to associate with an access point <i>Default:</i> "infrastructure"



Example • This setvar example shows the value set to "infrastructure".

```
! U1 setvar "wlan.operating_mode" "infrastructure"
```

When the setvar value is set to "infrastructure", the getvar result is "infrastructure".

wlan.password

Description This printer setting refers to the generic password that is used by the wireless securities that need a password.


Type getvar; setvar



Important • Kerberos has its own password field

Command Structure

These are the components of the command structure:

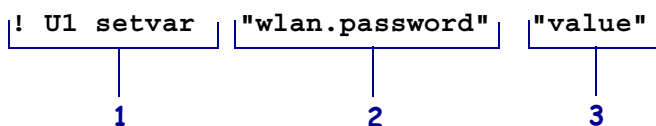

1	Command—always preceded with an exclamation point (!). A space resides between the ! and U1 and between U1 and the command (setvar or getvar).
2	Attribute—always in double quotes.
3	Chosen value—always in double quotes. Only applicable for setvar.



Important • A space resides between command and attribute and between attribute and value.

This table identifies the commands for this format:

Commands	Details
getvar	This command instructs the printer to respond with a generic password for wireless securities. <i>Format:</i> ! U1 getvar "wlan.password" For protection a single "*" prints.
setvar	This command instructs the printer to set a generic password for the wireless securities that need a password. <i>Format:</i> ! U1 setvar "wlan.password" "value" <i>Values:</i> A maximum of 32 alphanumeric characters. <i>Default:</i> "password"



Example • This setvar example shows the value set to "password".

```
! U1 setvar "wlan.password" "password"
```

When the setvar value is set to "password", the getvar result is "*".


wlan.preamble

Description This printer setting selects the radio preamble length to be used.

Type getvar; setvar

Command Structure

These are the components of the command structure:

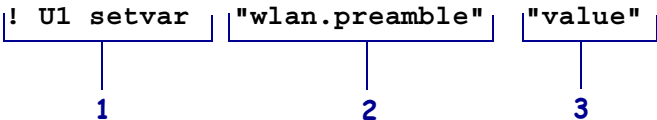

1	Command—always preceded with an exclamation point (!). A space resides between the ! and U1 and between U1 and the command (setvar or getvar).
2	Attribute—always in double quotes.
3	Chosen value—always in double quotes. Only applicable for setvar .



Important • A space resides between command and attribute and between attribute and value.

This table identifies the commands for this format:

Commands	Details
getvar	This command instructs the printer to respond with the current preamble length. <i>Format:</i> ! U1 getvar "wlan.preamble"
setvar	This command instructs the printer to set the preamble length. <i>Format:</i> ! U1 setvar "wlan.preamble" "value" <i>Values:</i> "long" = enables long preamble "short" = enables short preamble <i>Default:</i> "long"



Example • This setvar example shows the value set to "long".

```
! U1 setvar "wlan.preamble" "long"
```

When the setvar value is set to "long", the getvar result is "long".


wlan.private_key_password

Description This printer setting allows the setting of the optional private key password.

Type getvar; setvar

Command Structure

These are the components of the command structure:

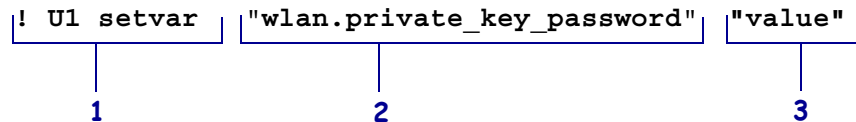

1	Command—always preceded with an exclamation point (!). A space resides between the ! and U1 and between U1 and the command (setvar or getvar).
2	Attribute—always in double quotes.
3	Chosen value—always in double quotes. Only applicable for setvar.



Important • A space resides between command and attribute and between attribute and value.

This table identifies the commands for this format:

Commands	Details
getvar	This command instructs the printer to respond with the value of the private key password. <i>Format:</i> ! U1 getvar "wlan.private_key_password" For protection a single "*" prints.
setvar	This command instructs the printer to set the private key password. <i>Format:</i> ! U1 setvar "wlan.private_key_password" "value" <i>Values:</i> A maximum of 32 alphanumeric characters <i>Default:</i> " "



Example • This setvar example shows the value set to "password".

```
! U1 setvar "wlan.private_key_password" "password"
```

When the setvar value is set to "password", the getvar result is "*".

wlan.roam.interval

Description This printer setting refers to specifying the wireless roam interval.

Type getvar; setvar

Command Structure

These are the components of the command structure:

! U1 setvar

"wlan.roam.interval"

"value"

1

2

3

1	Command—always preceded with an exclamation point (!). A space resides between the ! and U1 and between U1 and the command (setvar or getvar).
2	Attribute—always in double quotes.
3	Chosen value—always in double quotes. Only applicable for setvar.



Important • A space resides between command and attribute and between attribute and value.

This table identifies the commands for this format:

Commands	Details
getvar	This command instructs the printer to respond with the specified roam interval. <i>Format:</i> ! U1 getvar "wlan.roam.interval"
setvar	This command instructs the printer to set the wireless roam interval. <i>Format:</i> ! U1 setvar "wlan.roam.interval" "value" <i>Values:</i> Decimal values between 5 and 255 inclusive <i>Default:</i> "20"



Example • This setvar example shows the value set to "20".

```
! U1 setvar "wlan.roam.interval" "20"
```

When the setvar value is set to "20", the getvar result is "20".


wlan.roam.signal

Description This printer setting refers to specifying the wireless roam signal.

Type getvar; setvar

Command Structure

These are the components of the command structure:

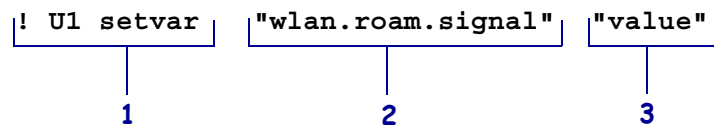

1	Command—always preceded with an exclamation point (!). A space resides between the ! and U1 and between U1 and the command (setvar or getvar).
2	Attribute—always in double quotes.
3	Chosen value—always in double quotes. Only applicable for setvar .



Important • A space resides between command and attribute and between attribute and value.

This table identifies the commands for this format:

Commands	Details
getvar	This command instructs the printer to respond with the specified wireless roam signal. <i>Format:</i> ! U1 getvar "wlan.roam.signal"
setvar	This command instructs the printer to set the wireless roam signal. <i>Format:</i> ! U1 setvar "wlan.roam.signal" "value" <i>Values:</i> Decimal values between 1 and 75 inclusive. <i>Default:</i> "50"



Example • This setvar example shows the value set to "50".

```
! U1 setvar "wlan.roam.signal" "50"
```

When the setvar value is set to "50", the getvar result is "50".


wlan.security

Description This printer setting allows you to specify both the wireless encryption type and authentication type in one command.

Type getvar; setvar

Command Structure

These are the components of the command structure:

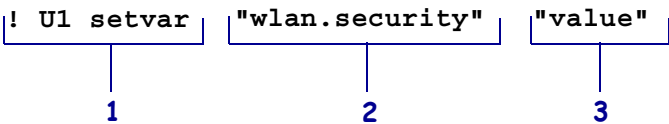

1	Command—always preceded with an exclamation point (!). A space resides between the ! and U1 and between U1 and the command (setvar or getvar).
2	Attribute—always in double quotes.
3	Chosen value—always in double quotes. Only applicable for setvar.



Important • A space resides between command and attribute and between attribute and value.



Note • When using certificate files, Zebra printers support:

- using Privacy Enhanced Mail (PEM) formatted certificate files.
- using the client certificate and private key as two files, each downloaded separately.
- using exportable PAC files for EAP-FAST.

These certificate files can only be sent using ZPL, not SGD. The ZPL command to use when sending these certificate files is the ~DY command.

This table identifies the commands for this format:

Commands	Details
getvar	This command instructs the printer to return the name and not the type. If an invalid security mode is entered the printer returns Invalid Mode. <i>Format:</i> ! U1 getvar "wlan.security" "value"
setvar	This command instructs the printer to set the wireless security value. <i>Format:</i> ! U1 setvar "wlan.security" "value" <i>Values:</i> "1" = No Security or "none" "2" = WEP 40-bit or "wep 40-bit" "3" = WEP 128-bit or "wep 128-bit" "4" = EAP-TLS or "eap-tls" "5" = EAP-TTLS or "eap-ttls" "6" = EAP-FAST or "eap-fast" "7" = PEAP or "peap" "8" = LEAP or "leap" "9" = WPA PSK or "wpa psk" "10" = WPA EAP-TLS or "wpa eap-tls" "11" = WPA EAP-TTLS or "wpa eap-ttls" "12" = WPA EAP-FAST or "wpa eap-fast" "13" = WPA PEAP or "wpa peap" "14" = WPA LEAP or "wpa leap" <i>Default:</i> "1"



Example • This setvar example shows the value set to "1".

```
! U1 setvar "wlan.security" "1"
```

When the setvar value is set to "1", the getvar result is "none".


wlan.signal_noise

Description This command returns the signal noise on the wireless network. Values below 40% represent a very significant noise, and radio communication is not reliable.

Type getvar

Command Structure

These are the components of the command structure:

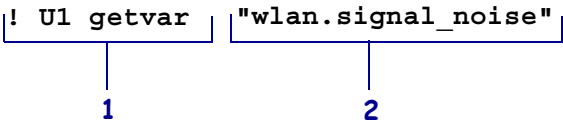

1	Command—always preceded with an exclamation point (!). A space resides between the ! and U1 and between U1 and the command (getvar).
2	Attribute—always in double quotes.



Important • A space resides between command and attribute.

This table identifies the command for this format:

Commands	Details
getvar	This command instructs the printer to return the current signal noise on the wireless network. <i>Format:</i> ! U1 getvar "wlan.signal_noise"



Example • In this example, the getvar result is the current signal_noise value.

```
! U1 getvar "wlan.signal_noise"
```

wlan.signal_quality

Description This command instructs the printer to return the current signal quality of the wireless network. Values below 40% represent a poor signal quality, and radio communication is not reliable.

Type getvar

Command Structure

These are the components of the command structure:

!	U1	getvar	"wlan.signal_quality"
1			2

1	Command—always preceded with an exclamation point (!). A space resides between the ! and U1 and between U1 and the command (getvar).
2	Attribute—always in double quotes.



Important • A space resides between command and attribute.

This table identifies the command for this format:

Commands	Details
getvar	This command instructs the printer to return the current signal quality of the wireless network. <i>Format:</i> ! U1 getvar "wlan.signal_quality"



Example • In this example, the getvar result is the current signal_quality value.

```
! U1 getvar "wlan.signal_quality"
```


wlan.signal_strength

Description This command returns the signal strength of the connection to the access point as a percentage value between zero (not connected) and 100 (strongest signal). Values below 40% represent a very poor signal and radio communication is not reliable.

Type getvar

Command Structure

These are the components of the command structure:

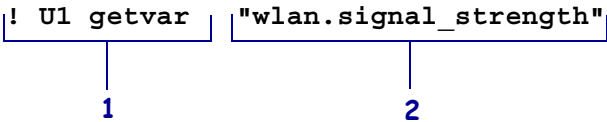

1	Command—always preceded with an exclamation point (!). A space resides between the ! and U1 and between U1 and the command (getvar).
2	Attribute—always in double quotes.



Important • A space resides between command and attribute.

This table identifies the command for this format:

Commands	Details
getvar	This command instructs the printer to respond with the current signal strength. <i>Format:</i> ! U1 getvar "wlan.signal_strength"



Example • In this example, the getvar result is "93".

```
! U1 getvar "wlan.signal_strength"
```


wlan.station_name

Description This printer setting refers to the station name.

Type setvar;getvar

Command Structure

These are the components of the command structure:

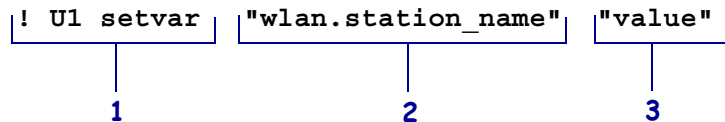

1	Command—always preceded with an exclamation point (!). A space resides between the ! and U1 and between U1 and the command (setvar or getvar).
2	Attribute—always in double quotes.
3	Chosen value—always in double quotes. Only applicable for setvar .



Important • A space resides between command and attribute and between attribute and value.

This table identifies the commands for this format:

Commands	Details
getvar	This command instructs the printer to respond with the station name value. <i>Format:</i> ! U1 getvar "wlan.station_name"
setvar	This command instructs the printer to set the station name. <i>Format:</i> ! U1 setvar "wlan.station_name" "value" <i>Values:</i> A maximum of 32 alphanumeric characters <i>Default:</i> "ZEBRA"



Example • This setvar example shows the value set to "ZEBRA".

```
! U1 setvar "wlan.station_name" "ZEBRA"
```

When the setvar value is set to "ZEBRA", the getvar result is "ZEBRA".


wlan.tx_power

Description This printer setting refers to specifying the wireless transmit power.

Type getvar; setvar

Command Structure

These are the components of the command structure:

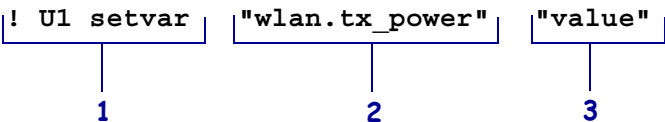

1	Command—always preceded with an exclamation point (!). A space resides between the ! and U1 and between U1 and the command (setvar or getvar).
2	Attribute—always in double quotes.
3	Chosen value—always in double quotes. Only applicable for setvar.



Important • A space resides between command and attribute and between attribute and value.

This table identifies the commands for this format:

Commands	Details
getvar	This command instructs the printer to respond with the wireless transmit power. <i>Format:</i> ! U1 getvar "wlan.tx_power"
setvar	This command instructs the printer to set the wireless transmit power. <i>Format:</i> ! U1 setvar "wlan.tx_power" "value" <i>Values:</i> Decimal values of 1, 5, 20, 30, 50, 100 <i>Default:</i> "100"



Example • This setvar example shows the value set to "100".

```
! U1 setvar "wlan.tx_power" "100"
```

When the setvar value is set to "100", the getvar result is "100".


wlan.tx_rate

Description This printer setting refers to specifying the wireless transmit rate.

Type getvar; setvar

Command Structure

These are the components of the command structure:

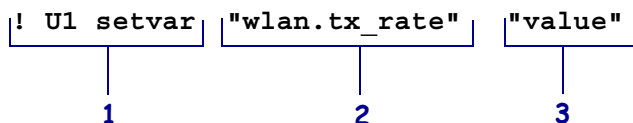

1	Command—always preceded with an exclamation point (!). A space resides between the ! and U1 and between U1 and the command (setvar or getvar).
2	Attribute—always in double quotes.
3	Chosen value—always in double quotes. Only applicable for setvar.



Important • A space resides between command and attribute and between attribute and value.

This table identifies the commands for this format:

Commands	Details
getvar	This command instructs the printer to respond with the wireless transmit rate. <i>Format:</i> ! U1 getvar "wlan.tx_rate"
setvar	This command instructs the printer to set the wireless transmit rate. <i>Format:</i> ! U1 setvar "wlan.tx_rate" "value" <i>Values:</i> 1, 2, 5.5, 11, all <i>Default:</i> "all"



Example • This setvar example shows the value set to "all".

```
! U1 setvar "wlan.tx_rate" "all"
```

When the setvar value is set to "all", the getvar result is "all".

wlan.username

Description This printer setting refers to the generic user name that is used by the wireless securities that need a user name.


Type getvar; setvar



Important • Kerberos has its own user name field.

Command Structure

These are the components of the command structure:

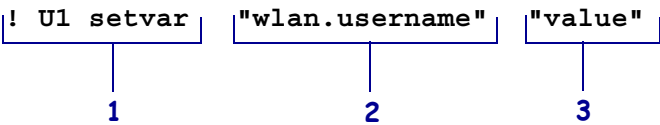

1	Command—always preceded with an exclamation point (!). A space resides between the ! and U1 and between U1 and the command (setvar or getvar).
2	Attribute—always in double quotes.
3	Chosen value—always in double quotes. Only applicable for setvar.



Important • A space resides between command and attribute and between attribute and value.

This table identifies the commands for this format:

Commands	Details
getvar	This command instructs the printer to respond with a generic user name for the wireless securities that need a user name. <i>Format:</i> ! U1 getvar "wlan.username"
setvar	This command instructs the printer to set a generic user name for wireless securities that need a user name. <i>Format:</i> ! U1 setvar "wlan.username" "value" <i>Values:</i> A maximum of 32 alphanumeric characters <i>Default:</i> "user"



Example • This setvar example shows the value set to "user".

```
! U1 setvar "wlan.username" "user"
```

When the setvar value is set to "user", the getvar result is "user".


wlan.wep.auth_type

Description For the WEP security type, this printer setting selects the authentication type to be used between the printer and the access point. The authentication types are open system and shared key.

Type getvar; setvar

Command Structure

These are the components of the command structure:

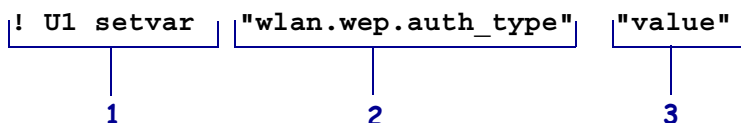

1	Command—always preceded with an exclamation point (!). A space resides between the ! and U1 and between U1 and the command (setvar or getvar).
2	Attribute—always in double quotes.
3	Chosen value—always in double quotes. Only applicable for setvar .



Important • A space resides between command and attribute and between attribute and value.

This table identifies the commands for this format:

Commands	Details
getvar	This command instructs the printer to retrieve the current WEP authentication type. <i>Format:</i> ! U1 getvar "wlan.wep.auth_type"
setvar	This command instructs the printer to set the WEP authentication type. <i>Format:</i> ! U1 setvar "wlan.wep.auth_type" "value" <i>Values:</i> "open" = enables the open authentication type "shared" = enables the shared authentication type <i>Default:</i> "open"



Example • This setvar example shows the value set to "open".

```
! U1 setvar "wlan.wep.auth_type" "open"
```

When the setvar value is set to "open", the getvar result is "open".


wlan.wep.index

Description This printer setting refers to the WEP (Wired Equivalent Privacy) encryption key index. This printer setting determines which one of the four encryption keys is to be used by the client (printer).

Type getvar; setvar

Command Structure

These are the components of the command structure:

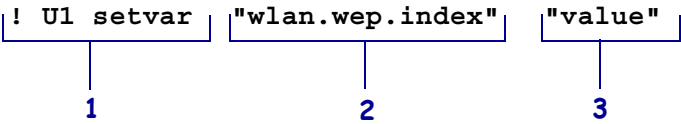

1	Command—always preceded with an exclamation point (!). A space resides between the ! and U1 and between U1 and the command (setvar or getvar).
2	Attribute—always in double quotes.
3	Chosen value—always in double quotes. Only applicable for setvar .



Important • A space resides between command and attribute and between attribute and value.

This table identifies the commands for this format:

Commands	Details
getvar	This command instructs the printer to respond with the encryption key index. <i>Format:</i> ! U1 getvar "wlan.wep.index"
setvar	This command instructs the printer to set the encryption key index. <i>Format:</i> ! U1 setvar "wlan.wep.index" "value" <i>Values:</i> "1 " = enables encryption key 1 "2 " = enables encryption key 2 "3 " = enables encryption key 3 "4 " = enables encryption key 4 <i>Default:</i> "1 "



Example • This setvar example shows the value set to "1".

! U1 setvar "wlan.wep.index" "1"

When the setvar value is set to "1", the getvar result is "1".


wlan.wep.key1

Description This printer setting refers to the first indexed WEP encryption key. The WEP encryption key is a hexadecimal or string value. This key should match the wireless network WEP encryption key 1.

Type getvar; setvar

Command Structure

These are the components of the command structure:

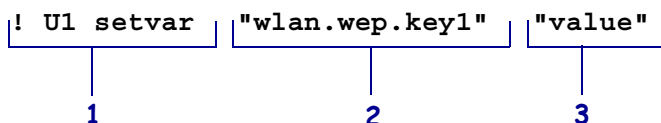

1	Command—always preceded with an exclamation point (!). A space resides between the ! and U1 and between U1 and the command (setvar or getvar).
2	Attribute—always in double quotes.
3	Chosen value—always in double quotes. Only applicable for setvar .



Important • A space resides between command and attribute and between attribute and value.

This table identifies the commands for this format:

Commands	Details
getvar	This command instructs the printer to respond with the encryption key. <i>Format:</i> ! U1 getvar "wlan.wep.key1" For protection a single "*" prints.
setvar	This command instructs the printer to set the encryption key. <i>Format:</i> ! U1 setvar "wlan.wep.key1" "value" <i>Values:</i> 10 hexadecimal characters for 40-bit encryption 26 hexadecimal characters for 128-bit encryption <i>Default:</i> All zeros



Example • This setvar example shows the value set to "A1B2C3D4F5".

```
! U1 setvar "wlan.wep.key1" "A1B2C3D4F5"
```

When the setvar value is set to "A1B2C3D4F5", the getvar result is "*".


wlan.wep.key2

Description This printer setting refers to the second indexed WEP encryption key. The WEP encryption key is a hexadecimal string value. This key should match the wireless network WEP encryption key 2.

Type getvar; setvar

Command Structure

These are the components of the command structure:

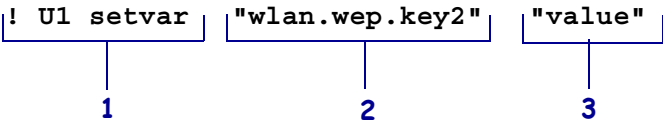

1	Command—always preceded with an exclamation point (!). A space resides between the ! and U1 and between U1 and the command (setvar or getvar).
2	Attribute—always in double quotes.
3	Chosen value—always in double quotes. Only applicable for setvar.



Important • A space resides between command and attribute and between attribute and value.

This table identifies the commands for this format:

Commands	Details
getvar	This command instructs the printer respond with the encryption key. <i>Format:</i> ! U1 getvar "wlan.wep.key2" For protection a single "*" prints.
setvar	This command instructs the printer to set the encryption key. <i>Format:</i> ! U1 setvar "wlan.wep.key2" "value" <i>Values:</i> 10 hexadecimal characters for 40-bit encryption 26 hexadecimal characters for 128-bit encryption <i>Default:</i> All zeros



Example • This setvar example shows the value set to "A1B2C3D4F5".
! U1 setvar "wlan.wep.key2" "A1B2C3D4F5"
When the setvar value is set to "A1B2C3D4F5", the getvar result is "*".


wlan.wep.key3

Description This printer setting refers to the third indexed WEP encryption key. The WEP encryption key is a hexadecimal string value. This key should match the wireless network WEP encryption key 3.

Type getvar; setvar

Command Structure

These are the components of the command structure:

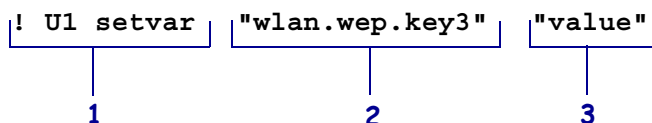

1	Command—always preceded with an exclamation point (!). A space resides between the ! and U1 and between U1 and the command (setvar or getvar).
2	Attribute—always in double quotes.
3	Chosen value—always in double quotes. Only applicable for setvar .



Important • A space resides between command and attribute and between attribute and value.

This table identifies the commands for this format:

Commands	Details
getvar	This command instructs the printer to respond with the encryption key. <i>Format:</i> ! U1 getvar "wlan.wep.key3" For protection a single "*" prints.
setvar	This command instructs the printer to set the encryption key. <i>Format:</i> ! U1 setvar "wlan.wep.key3" "value" <i>Values:</i> 10 hexadecimal characters for 40-bit encryption 26 hexadecimal characters for 128-bit encryption <i>Default:</i> All zeros



Example • This setvar example shows the value set to "A1B2C3D4F5".

```
! U1 setvar "wlan.wep.key3" "A1B2C3D4F5"
```

When the setvar value is set to "A1B2C3D4F5", the getvar result is "*".


wlan.wep.key4

Description This printer setting refers to the fourth indexed WEP encryption key. The WEP encryption key is a hexadecimal string value. This key should match the wireless network WEP encryption key 4.

Type getvar; setvar

Command Structure

These are the components of the command structure:

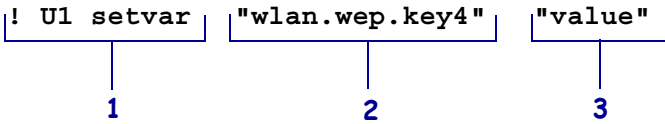

1	Command—always preceded with an exclamation point (!). A space resides between the ! and U1 and between U1 and the command (setvar or getvar).
2	Attribute—always in double quotes.
3	Chosen value—always in double quotes. Only applicable for setvar.



Important • A space resides between command and attribute and between attribute and value.

This table identifies the commands for this format:

Commands	Details
getvar	This command instructs the printer respond with the encryption key. <i>Format:</i> ! U1 getvar "wlan.wep.key4" For protection a single "*" prints.
setvar	This command instructs the printer to set the encryption key. <i>Format:</i> ! U1 setvar "wlan.wep.key4" "value" <i>Values:</i> 10 hexadecimal characters for 40-bit encryption 26 hexadecimal characters for 128-bit encryption <i>Default:</i> All zeros



Example • This setvar example shows the value set to "A1B2C3D4F5".

! U1 setvar "wlan.wep.key4" "A1B2C3D4F5"

When the setvar value is set to "A1B2C3D4F5", the getvar result is "*".

wlan.wep.key_format

Description This printer setting specifies the format for the WEP key.


Type getvar; setvar

!

Important • This printer setting should proceed any of the `wep.key` settings if you select a non-default value.

Command Structure

These are the components of the command structure:

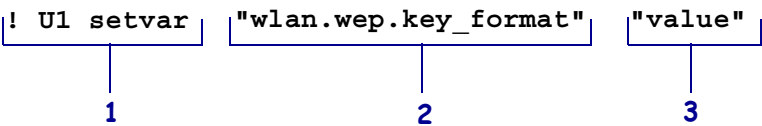

1	Command—always preceded with an exclamation point (!). A space resides between the ! and U1 and between U1 and the command (setvar or getvar).
2	Attribute—always in double quotes.
3	Chosen value—always in double quotes. Only applicable for setvar .

!

Important • A space resides between command and attribute and between attribute and value.

This table identifies the commands for this format:

Commands	Details
getvar	This command instructs the printer to respond with the WEP key format. <i>Format:</i> ! U1 getvar "wep.key_format"
setvar	This command instructs the printer to set the WEP key format. <i>Format:</i> ! U1 setvar "wlan.wep.key_format" "value" <i>Values:</i> <div>"ascii" = WEP key is set by ASCII string</div> <div>"hex" = WEP key is a Hex string</div> <i>Default:</i> "hex"

➔

Example • This `setvar` example shows the value set to "ascii".

```
! U1 setvar "wlan.wep.key_format" "ascii"
```

When the `setvar` value is set to "ascii", the `getvar` result is "ascii".


wlan.wpa.psk

Description This printer setting specifies the pre-shared key (PSK) value to use when the WPA authentication is set to PSK.

Type getvar; setvar

Command Structure

These are the components of the command structure:

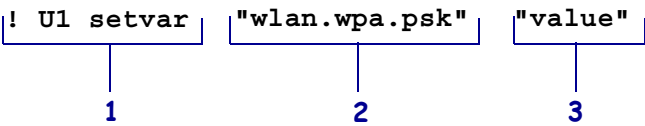

1	Command—always preceded with an exclamation point (!). A space resides between the ! and U1 and between U1 and the command (setvar or getvar).
2	Attribute—always in double quotes.
3	Chosen value—always in double quotes. Only applicable for setvar.



Important • A space resides between command and attribute and between attribute and value.

This table identifies the commands for this format:

Commands	Details
getvar	This command instructs the printer to respond with the pre-shared key. <i>Format:</i> ! U1 getvar "wlan.wpa.psk" For protection a single "*" prints.
setvar	This command instructs the printer to set the pre-shared key. <i>Format:</i> ! U1 setvar "wlan.wpa.psk" "value" <i>Values:</i> 64 hexadecimal digits <i>Default:</i> 64 zeros (00000000...)



Example • This setvar example shows the value set to "00000000...".

```
! U1 setvar "wlan.wpa.psk" "00000000..."
```

When the setvar value is set to "00000000...", the getvar result is "*".



Zebra Code Pages

This section provides you with a visual of the different Zebra Code pages.

Zebra Code Page 850

This is the Zebra Code Page 850:



Note • For hex 5C, a cent sign prints for all printer resident fonts. A backslash prints for downloaded fonts.

CHR	HEX	DEC	CHR	HEX	DEC	CHR	HEX	DEC	CHR	HEX	DEC	CHR	HEX	DEC	CHR	HEX	DEC
	20	32	0	30	48	@	40	64	P	50	80	'	60	96	p	70	112
!	21	33	1	31	49	A	41	65	Q	51	81	a	61	97	q	71	113
"	22	34	2	32	50	B	42	66	R	52	82	b	62	98	r	72	114
#	23	35	3	33	51	C	43	67	S	53	83	c	63	99	s	73	115
\$	24	36	4	34	52	D	44	68	T	54	84	d	64	100	t	74	116
%	25	37	5	35	53	E	45	69	U	55	85	e	65	101	u	75	117
&	26	38	6	36	54	F	46	70	V	56	86	f	66	102	v	76	118
'	27	39	7	37	55	G	47	71	W	57	87	g	67	103	w	77	119
(28	40	8	38	56	H	48	72	X	58	88	h	68	104	x	78	120
)	29	41	9	39	57	I	49	73	Y	59	89	i	69	105	y	79	121
*	2a	42	:	3a	58	J	4a	74	Z	5a	90	j	6a	106	z	7a	122
+	2b	43	;	3b	59	K	4b	75	[5b	91	k	6b	107	{	7b	123
,	2c	44	<	3c	60	L	4c	76	⌂	5c	92	l	6c	108		7c	124
-	2d	45	=	3d	61	M	4d	77]	5d	93	m	6d	109	}	7d	125
.	2e	46	>	3e	62	N	4e	78	^	5e	94	n	6e	110	~	7e	126
/	2f	47	?	3f	63	O	4f	79	_	5f	95	o	6f	111	⌣	7f	127

CHR	HEX	DEC	CHR	HEX	DEC	CHR	HEX	DEC	CHR	HEX	DEC	CHR	HEX	DEC	CHR	HEX	DEC
É	90	144	á	a0	160	⋮	b0	176	┐	c0	192	ð	d0	208	Ó	e0	224
æ	91	145	í	a1	161	⦶	b1	177	└	c1	193	Ð	d1	209	ß	e1	225
Æ	92	146	ó	a2	162	⦹	b2	178	┘	c2	194	È	d2	210	Ô	e2	226
ô	93	147	ú	a3	163		b3	179	┐	c3	195	Ê	d3	211	Õ	e3	227
ö	94	148	ñ	a4	164	└	b4	180	—	c4	196	Ë	d4	212	Ö	e4	228
ò	95	149	Ñ	a5	165	Á	b5	181	+	c5	197	İ	d5	213	Œ	e5	229
û	96	150	ª	a6	166	Â	b6	182	ã	c6	198	Í	d6	214	μ	e6	230
ù	97	151	º	a7	167	Ã	b7	183	Ä	c7	199	Î	d7	215	þ	e7	231
ÿ	98	152	¿	a8	168	©	b8	184	⌌	c8	200	Ï	d8	216	þ	e8	232
Ö	99	153	®	a9	169	≡	b9	185	⌌	c9	201	┘	d9	217	Ú	e9	233
Ü	9a	154	¬	aa	170		ba	186	⌌	ca	202	┐	da	218	Û	ea	234
ø	9b	155	½	ab	171	⌌	bb	187	⌌	cb	203	■	db	219	Ü	eb	235
£	9c	156	¼	ac	172	⌌	bc	188	⌌	cc	204	■	dc	220	Ý	ec	236
Ø	9d	157	¡	ad	173	¢	bd	189	=	cd	205		dd	221	Ý	ed	237
×	9e	158	«	ae	174	¥	be	190	≡	ce	206	ı	de	222	˘	ee	238
f	9f	159	»	af	175	┐	bf	191	⌌	cf	207	■	df	223	˙	ef	239

Zebra Code Page 1252

This is the Zebra Code Page 1252:

CHR	HEX	DEC	CHR	HEX	DEC	CHR	HEX	DEC	CHR	HEX	DEC	CHR	HEX	DEC	CHR	HEX	DEC
	20	32	0	30	48	@	40	64	P	50	80	`	60	96	p	70	112
!	21	33	1	31	49	A	41	65	Q	51	81	a	61	97	q	71	113
"	22	34	2	32	50	B	42	66	R	52	82	b	62	98	r	72	114
#	23	35	3	33	51	C	43	67	S	53	83	c	63	99	s	73	115
\$	24	36	4	34	52	D	44	68	T	54	84	d	64	100	t	74	116
%	25	37	5	35	53	E	45	69	U	55	85	e	65	101	u	75	117
&	26	38	6	36	54	F	46	70	V	56	86	f	66	102	v	76	118
'	27	39	7	37	55	G	47	71	W	57	87	g	67	103	w	77	119
(28	40	8	38	56	H	48	72	X	58	88	h	68	104	x	78	120
)	29	41	9	39	57	I	49	73	Y	59	89	i	69	105	y	79	121
*	2a	42	:	3a	58	J	4a	74	Z	5a	90	j	6a	106	z	7a	122
+	2b	43	;	3b	59	K	4b	75	[5b	91	k	6b	107	{	7b	123
,	2c	44	<	3c	60	L	4c	76	\	5c	92	l	6c	108		7c	124
-	2d	45	=	3d	61	M	4d	77]	5d	93	m	6d	109	}	7d	125
.	2e	46	>	3e	62	N	4e	78	^	5e	94	n	6e	110	~	7e	126
/	2f	47	?	3f	63	O	4f	79	_	5f	95	o	6f	111		7f	127
																8f	143

CHR	HEX	DEC	CHR	HEX	DEC	CHR	HEX	DEC	CHR	HEX	DEC	CHR	HEX	DEC	CHR	HEX	DEC
	90	144		a0	160	°	b0	176	À	c0	192	Đ	d0	208	à	e0	224
‘	91	145	ì	a1	161	±	b1	177	Á	c1	193	Ñ	d1	209	á	e1	225
’	92	146	ç	a2	162	²	b2	178	Â	c2	194	Ò	d2	210	â	e2	226
“	93	147	£	a3	163	³	b3	179	Ã	c3	195	Ó	d3	211	ã	e3	227
”	94	148	¤	a4	164	´	b4	180	Ä	c4	196	Ô	d4	212	ä	e4	228
•	95	149	¥	a5	165	µ	b5	181	Å	c5	197	Õ	d5	213	å	e5	229
—	96	150		a6	166	¶	b6	182	Æ	c6	198	Ö	d6	214	æ	e6	230
—	97	151	§	a7	167	·	b7	183	Ç	c7	199	×	d7	215	ç	e7	231
~	98	152	”	a8	168	¸	b8	184	È	c8	200	Ø	d8	216	è	e8	232
™	99	153	©	a9	169	¹	b9	185	É	c9	201	Ù	d9	217	é	e9	233
š	9a	154	à	aa	170	º	ba	186	Ê	ca	202	Ú	da	218	ê	ea	234
›	9b	155	«	ab	171	»	bb	187	Ë	cb	203	Û	db	219	ë	eb	235
œ	9c	156	¬	ac	172	¼	bc	188	Ì	cc	204	Ü	dc	220	ì	ec	236
	9d	157	-	ad	173	½	bd	189	Í	cd	205	Ý	dd	221	í	ed	237
ž	9e	158	®	ae	174	¾	be	190	Î	ce	206	Þ	de	222	î	ee	238
ÿ	9f	159	¯	af	175	¿	bf	191	Ï	cf	207	ß	df	223	ï	ef	239



Notes • _____

B

ASCII



This section shows the American Standard Code for Information Interchange (ASCII) code used by Zebra printers.

ASCII Code Chart

Shaded areas in [Table 18](#) indicate characters not recommended for command prefix, format prefix, or delimiter characters.

Table 18 • Zebra Used ASCII Code

HEX	Character	HEX	Character	HEX	Character	HEX	Character
00	NUL	20	Space	40	@	60	`
01	SOH	21	!	41	A	61	a
02	STX	22	“	42	B	62	b
03	ETX	23	#	43	C	63	c
04	EOT	24	\$	44	D	64	d
05	ENQ	25	%	45	E	65	e
06	ACK	26	&	46	F	66	f
07	BEL	27	‘	47	G	67	g
08	BS	28	(48	H	68	h
09	HT	29)	49	I	69	i
0A	LF	2A	*	4A	J	6A	j
0B	VT	2B	+	4B	K	6B	k
0C	FF	2C	,	4C	L	6C	l
0D	CR	2D	-	4D	M	6D	m
0E	SO	2E	.	4E	N	6E	n
0F	SI	2F	/	4F	O	6F	o
10	DLE	30	0	50	P	70	p
11	DC1	31	1	51	Q	71	q
12	DC2	32	2	52	R	72	r
13	DC3	33	3	53	S	73	s
14	DC4	34	4	54	T	74	t
15	NAK	35	5	55	U	75	u
16	SYN	36	6	56	V	76	v
17	ETB	37	7	57	W	77	w
18	CAN	38	8	58	X	78	x
19	EM	39	9	59	Y	79	y
1A	SUB	3A	:	5A	Z	7A	z
1B	ESC	3B	;	5B	[7B	{
1C	FS	3C	<	5C	\	7C	
1D	GS	3D	=	5D]	7D	}

Table 18 • Zebra Used ASCII Code (Continued)

HEX	Character	HEX	Character	HEX	Character	HEX	Character
1E	RS	3E	>	5E	^	7E	~
1F	US	3F	?	5F	_	7F	DEL



Notes •



Fonts and Bar Codes

This section provides information about different fonts (type faces) and bar codes that can be used with the printer.

Contents

Standard Printer Fonts	446
Proportional and Fixed Spacing	447
Scalable Versus Bitmapped Fonts	449
Font Matrices	451
Bar Codes	453

Standard Printer Fonts

Most Zebra printers come standard with 15 bitmapped fonts and one scalable font, see [Figure 6](#). Additional downloadable bitmapped and scalable fonts are also available. Character size and density (how dark it appears) depend on the density of the printhead and the media used.

Figure 6 • Examples of the Standard Printer Fonts

FONT A — — ABCDxyz 12345
FONT B — — ABCDXYZ 12345 UPPER CASE ONLY
FONT D — — ABCDwxyz 12345
FONT E — — (OCR-B) ABCDwxyz 12345
FONT F — — ABCDwxyz 12345
FONT G — — ABYz 12
FONT H — — (OCR-A) UPPER CASE ONLY
FONT O — — (Scaleable) ABCDwxyz 12345
FONT GS — — ® © ™ ℒ
FONT P — — ABCDwxyz 12345
FONT Q — — ABCDwxyz 12345
FONT R — — ABCDwxyz 12345
FONT S — — ABCDwxyz 12345
FONT T — — ABCDwxyz 12345
FONT U — — ABCDwxyz 12345
FONT V — — ABCDwxyz 12345

To use one of these fonts, you must either use the change alphanumeric default font command (^CF) or specify an alphanumeric field command (^A).

The standard Zebra character set is Code 850 for character values greater than 20 HEX. There are six HEX character values below 20 HEX that are also recognized. [Figure 7](#) shows how these character values are printed.



Note • Unidentified characters should default to a space.

Figure 7 • Recognized HEX Values below 20 HEX


A HEX	1a	will print a	0 (numeric)
A HEX	1b	will print a	⅓
A HEX	1c	will print a	⅔
A HEX	1d	will print a	U
A HEX	1e	will print a	ij
A HEX	1f	will print a	\

Proportional and Fixed Spacing

Proportional spacing is different than fixed spacing. In [Table 19](#), the intercharacter gap (ICG), the space between characters, is constant for fonts A through H, which means that the spacing between all characters is the same. For example, the spacing between the letters MW is the same as between the letters IE.

[Figure 8](#) is an example of fixed space fonts:

Figure 8 • Fixed Space Fonts Proportion

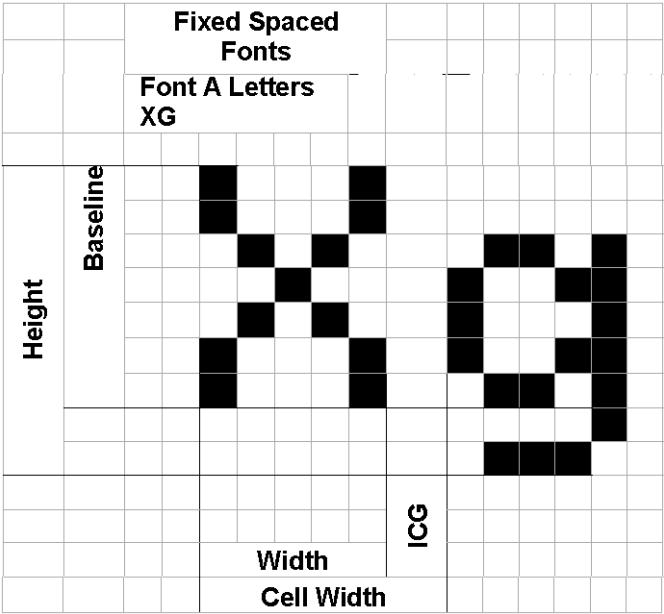

The baseline is the imaginary line on which the bottom (base) of all characters (except any descenders) rest. The area between the baseline and the bottom of the matrix is used for any character “descenders.” Baseline numbers define where the baseline is located in relationship to the top of the matrix. For example, the baseline for font “E” is 23 dots down from the top of the matrix.

Table 19 • Intercharacter Gap and Baseline Parameters

Font	H x W (in dots)	Type	Intercharacter Gap (in dots)	Baseline (in dots)
A	9 x 5	U-L-D	1	7
B	11 x 7	U	2	11
C,D	18 x 10	U-L-D	2	14
E	28 x 15	OCR-B	5	23
F	26 x 13	U-L-D	3	21
G	60 x 40	U-L-D	8	48
H	21 x 13	OCR-A	6	21
GS	24 x 24	SYMBOL	PROPORTIONAL	3 x HEIGHT/4
0	DEFAULT: 15 x 12		PROPORTIONAL	3 x HEIGHT/4

Scalable Versus Bitmapped Fonts

For scalable fonts, setting the height and width equally produces characters that appear the most balanced. Balanced characters are pleasing to the eye because actual height and width are approximately equal to each other. This is achieved through the use of a smooth-scaling algorithm in the printer.

For bitmapped fonts, this balancing is built into the font. In actuality, the height of a bitmap font is slightly larger than the width. Bitmap fonts are always at the maximum size of the character's cell.

Scalable Fonts

All dot parameters used in the commands to create scalable fonts are translated into a point size because scalable fonts are measured in point sizes, not dots. To determine how many dots to enter to obtain a particular point size, use the following formula. The actual point size will be an approximate value.

$$\text{Dots} = \frac{(\text{Point size}) \times (\text{Dots per inch of Printer})}{72}$$

- For printers using a 6 dot/mm printhead the “dots per inch of printer” value is 152.4
- For printers using a 8 dot/mm printhead the “dots per inch of printer” value is 203.2
- For printers using a 12 dot/mm printhead the “dots per inch of printer” value is 304.8
- For printers using a 24 dot/mm printhead the “dots per inch of printer” value is 609.6

The actual height and width of the character in dots will vary, depending on the font style and the particular character. Therefore, some characters will be smaller and some will be larger than the actual dot size requested. The baselines for all scalable fonts are calculated against the dot size of the cell. The baseline is 3/4 down from the top of the cell. For example, if the size of the cell is 80 dots, the baseline will be 60 dots (3/4) down from the top of the cell.

For more information concerning fonts and related commands, see [~DB on page 122](#) and [~DS on page 131](#).

Bitmapped Fonts

Internal bitmapped fonts can be magnified from 1 to 10 times their normal (default) size. The magnification factor is in whole numbers. Therefore, if the normal size of a bitmapped font is 9 dots high and 5 dots wide, a magnification factor of 3 would produce a character of 27 dots high and 15 dots wide. Height and width can be magnified independently.

Magnification Factor

The font commands contain parameters for entering the height and width of printed characters. The values are always entered in dots. When entering these values for bitmapped fonts, use the following formula:

$$\text{Base Height} \times \text{Magnification Factor} = \text{Height Parameter Value}$$

The same principle applies when calculating width.

Example:

Base height = 9 dots
Base width = 5 dots

To magnify a bitmapped character with the above specifics 3 times its size:

Height parameter = 27 [9 x 3]
Width parameter = 15 [5 x 3]

Changing Bitmapped Font Size

Alphanumeric field command (^A) parameters h and w control the magnification and, therefore, the ultimate size of the font. The parameter is specified in dots, but ZPL II actually uses an integer multiplier times the original height/width of the font. For example, if you specify

^AD, 54

you get characters three times their normal size (54 dots high), but if you specify

^AD, 52

you receive the same result, not characters 52 dots high.

Defining only the height or width of a bitmapped font forces the magnification to be proportional to the parameter defined. If neither is defined, the ^CF height and width are used. For example, if the height is twice the standard height, the width will be twice the standard width.



Example • If a ^CF command, with height and width parameters defined, is used to set the first font, any ^A commands (to select a different font) that follow must have the height and width parameter filled in.

If this is not done, the newly selected font will be magnified using values for the ^CF height and width parameters. This is an example of what happens:.

ZPL II CODE	GENERATED LABEL
<pre>^XA^LL1800 ^FO50,50^CFD,26,10^FDZEBRA...^FS ^FO50,100^FD"Bar Code, Bar None"^FS ^FO50,200^AA^FDZEBRA...^FS ^FO50,250^FD"Bar Code, Bar None"^FS ^XZ</pre>	<div><div>ZEBRA...</div><div>"Bar Code, Bar None"</div><div>ZEBRA...</div><div>"Bar Code, Bar None"</div></div>

Font Matrices

Type Key U = Uppercase, L = Lowercase, D = Descenders

6 dot/mm printhead

Font	Matrix	Type	Character Size			
	HxW (in dots)		HxW (in in.)	Char./in.	HxW (in mm)	Char. /mm
A	9 x 5	U-L-D	0.059 x 0.039	25.4	1.50 x 0.99	1.01
B	11 x 7	U	0.072 x 0.059	16.9	1.82 x 1.50	0.066
C, D	18 x 10	U-L-D	0.118 x 0.079	12.7	2.99 x 2.00	0.05
E	21 x 10	OCR-B	0.138 x 0.085	11.7	3.50 x 2.16	0.46
F	26 x 13	U-L-D	0.170 x 0.105	9.53	4.32 x 2.67	0.37
G	60 x 40	U-L-D	0.394 x 0.315	3.18	10.0 x 8.00	0.125
H	17 x 11	OCR-A	0.111 x 0.098	10.2	2.81 x 2.48	0.40
GS	24 x 24	SYMBOL	0.157 x 0.157	6.35	3.98 x 3.98	0.251
0	Default: 15 x 12					

8 dot/mm (203 dpi) printhead

Font	Matrix	Type	Character Size			
	HxW (in dots)		HxW (in in.)	Char./in.	HxW (in mm)	Char. /mm
A	9 X 5	U-L-D	0.044 x 0.030	33.3	1.12 x 0.76	1.31
B	11 X 7	U	0.054 x 0.044	22.7	1.37 x 1.12	0.89
C, D	18 X 10	U-L-D	0.089 x 0.059	16.9	2.26 x 1.12	0.66
E	28 x 15	OCR-B	0.138 x 0.098	10.2	3.50 x 2.49	0.40
F	26 x 13	U-L-D	0.128 x 0.079	12.7	3.25 x 2.00	0.50
G	60 x 40	U-L-D	0.295 x 0.197	4.2	7.49 x 5.00	0.167
H	21 x 13	OCR-A	0.103 x 0.093	10.8	2.61 x 2.36	0.423
GS	24 x 24	SYMBOL	0.118 x 0.118	8.5	2.99 x 2.99	0.334
P	20 x 18	U-L-D	0.098 x 0.089	N/A	2.50 x 2.25	N/A
Q	28 x 24	U-L-D	0.138 x 0.118	N/A	3.50 x 3.00	N/A
R	35 x 31	U-L-D	0.172 x 0.153	N/A	4.38 x 3.88	N/A
S	40 x 35	U-L-D	0.197 x 0.172	N/A	5.00 x 4.38	N/A
T	48 x 42	U-L-D	0.236 x 0.207	N/A	6.00 x 5.25	N/A
U	59 x 53	U-L-D	0.290 x 0.261	N/A	7.38 x 6.63	N/A
V	80 x 71	U-L-D	0.394 x 0.349	N/A	10.00 x 8.88	N/A
0	Default: 15 x 12	U-L-D	Scalable		Scalable	

12 dot/mm (300 dpi) printhead

Font	Matrix	Type	Character Size			
	HxW (in dots)		HxW (in in.)	Char./in.	HxW (in mm)	Char. /mm
A	9 X 5	U-L-D	0.030 x 0.020	50.8	0.75 x 0.50	2.02
B	11 X 7	U	0.036 x 0.030	33.8	0.91 x 0.75	1.32
C, D	18 X 10	U-L-D	0.059 x 0.040	25.4	1.50 x 1.00	1.00
E	42 x 20	OCR-B	0.138 x 0.085	23.4	1.75 x 1.08	0.92
F	26 x 13	U-L-D	0.085 x 0.053	19.06	2.16 x 1.34	0.74
G	60 x 40	U-L-D	0.197 x 0.158	6.36	5.00 x 4.00	0.25
H	34 x 22	OCR-A	0.111 x 0.098	10.20	2.81 x 2.48	0.40
GS	24 x 24	SYMBOL	0.079 x 0.079	12.70	1.99 x 1.99	0.52
P	20 x 18	U-L-D	0.067 x 0.060	N/A	1.69 x 1.52	N/A
Q	28 x 24	U-L-D	0.093 x 0.080	N/A	2.37 x 2.03	N/A
R	35 x 31	U-L-D	0.117 x 0.103	N/A	2.96 x 2.62	N/A
S	40 x 35	U-L-D	0.133 x 0.177	N/A	3.39 x 2.96	N/A
T	48 x 42	U-L-D	0.160 x 0.140	N/A	4.06 x 3.56	N/A
U	59 x 53	U-L-D	0.197 x 0.177	N/A	5.00 x 4.49	N/A
V	80 x 71	U-L-D	0.267 x 0.237	N/A	6.77 x 6.01	N/A
0	Default: 15 x 12	U-L-D	Scalable		Scalable	

24 dot/mm (600 dpi) printhead

Font	Matrix	Type	Character Size			
	HxW (in dots)		HxW (in in.)	Char./in.	HxW (in mm)	Char. /mm
A	9 X 5	U-L-D	0.015 x 0.010	100.00	0.38 x 0.25	4.00
B	11 X 7	U	0.018 x 0.015	66.66	0.46 x 0.38	2.60
C, D	18 X 10	U-L-D	0.030 x 0.020	50.00	0.77 x 0.51	2.0
E	42 x 20	OCR-B	0.137 x 0.087	11.54	3.47 x 2.20	0.45
F	26 x 13	U-L-D	0.043 x 0.027	37.5	1.10 x 0.68	1.50
G	60 x 40	U-L-D	0.100 x 0.080	12.50	2.54 x 2.04	0.50
H	34 x 22	OCR-A	0.100 x 0.093	10.71	2.54 x 2.37	0.42
GS	24 x 24	SYMBOL	0.040 x 0.040	25.00	1.02 x 1.02	1.00
P	20 x 18	U-L-D	0.067 x 0.060	N/A	1.69 x 1.52	N/A
Q	28 x 24	U-L-D	0.093 x 0.080	N/A	2.37 x 2.03	N/A
R	35 x 31	U-L-D	0.117 x 0.103	N/A	2.96 x 2.62	N/A
S	40 x 35	U-L-D	0.133 x 0.117	N/A	3.39 x 2.96	N/A
T	48 x 42	U-L-D	0.160 x 0.140	N/A	4.06 x 3.56	N/A
U	59 x 53	U-L-D	0.197 x 0.177	N/A	5.00 x 4.49	N/A
V	80 x 71	U-L-D	0.267 x 0.237	N/A	6.77 x 6.01	N/A
0	Default: 15 x 12	U-L-D	Scalable		Scalable	

Bar Codes

Every bar code contains data made up of a sequence of light spaces and dark bars that represent letters, numbers, or other graphic characters. The usable characters differ among the various kinds of bar codes. Each bar code section in the [ZPL Commands on page 3](#) provides a table of applicable characters. Start and stop characters and check digits are used by many, but not all, bar codes. These will be indicated in the specific bar code explanations.

Zebra printers can print the following kinds of bar codes:

Bar code modulus “X” dimensions	Linear bar codes
<ul style="list-style-type: none"> Picket fence (non-rotated) orientation: <ul style="list-style-type: none"> 203 dpi = 0.0049 in. mil to 0.049 in. 300 dpi = 0.0033 in. mil to 0.033 in. Ladder (rotated) orientation: <ul style="list-style-type: none"> 203 dpi = 0.0049 in. mil to 0.049 in. 300 dpi = 0.0039 in. mil to 0.039 in. 	<ul style="list-style-type: none"> Codabar Code 11 Code 39 Code 93 Code 128 with subsets A/B C and UCC Case Codes ISBT-128 UPC-A UPC-E EAN-8 EAN-13 UPC and EAN 2 or 5 digit extensions Planet Code Plessey Postnet Standard 2 of 5 Industrial 2 of 5 Interleaved 2 of 5 LOGMARS MSI RSS-14
Two-dimensional bar codes	
<ul style="list-style-type: none"> Aztec Code 49 Maxi Code TLC39 PDF-417 QR Code Codablock DataMatrix Micro-PDF417 	
Bar code ratios	
<ul style="list-style-type: none"> 2:1 7:3 5:2 3:1 	

Basic Format for Bar Codes

The basic format for bar codes is quiet zone, start character, data, check digit, stop character, and quiet zone. Not all bar codes require each of these elements.

Every bar code requires a quiet zone. A quiet zone (sometimes called a “clear area”) is an area adjacent to the machine-readable symbols that ensure proper reading (decoding) of the symbols. No printing is permissible within this area. Preprinted characters, borders, and background color are acceptable if they are invisible to the reading device; these are used in some applications but restrict the type of reading device that can be used. The size of the quiet zone depends on the size of bar widths (usually 10 times the width of the narrow bar).

Figure 9 • Quiet Zone in a Bar Code



Bar Code Field Instructions

To create a bar code, a bar code field command must be contained in the label format. [Table 20](#) shows the bar code field commands. The number in brackets denotes the print ratio. Each command produces a unique bar code.



Important • (*) for Fixed Printing Ratio means that the ratio between the width of the bars in the code is a fixed standard and cannot be changed.

As another reference to the bar code field commands ratio, see [Table 11 on page 104](#).

Table 20 • Bar Code Field Commands

ZPL Command	Command Description	Ratio
^B0	Aztec Bar Code Parameters	[Fixed]
^B1	Code 11 (USD-8)	[2.0 - 3.0]
^B2	Interleaved 2 of 5	[2.0 - 3.0]
^B3	Code 39 (USD-3 and 3 of 9)	[2.0 - 3.0]
^B4	Code 49 (*)	[Fixed]
^B5	Planet Code Bar Code	[Fixed]
^B7	PDF417 (*)	[Fixed]
^B8	EAN-8 (*)	[Fixed]
^B9	UPC-E	[Fixed]
^BA	Code 93 (USS-93)(*)	[Fixed]
^BB	CODABLOCK A, E, F (*)	[Fixed]
^BC	Code 128 (USD-6) (*)	[Fixed]
^BD	UPS MaxiCode (*)	[Fixed]
^BE	EAN-13	[Fixed]
^BF	Micro-PDF417	[Fixed]
^BI	Industrial 2 of 5	[2.0 - 3.0]
^BJ	Standard 2 of 5	[2.0 - 3.0]
^BK	ANSI Codabar (USD-4 and 2 of 7)	[2.0 - 3.0]
^BL	LOGMARS	[2.0 - 3.0]
^BM	MSI	[2.0 - 3.0]
^BO	Aztec Bar Code Parameters	[Fixed]
^BP	Plessey	[2.0 - 3.0]
^BQ	QR Code (*)	[Fixed]
^BR	RSS (reduced Space Symbology Bar Code)	[Fixed]
^BS	UPC/EAN Extensions (*)	[Fixed]
^BU	UPC-A (*)	[Fixed]

Table 20 • Bar Code Field Commands

ZPL Command	Command Description	Ratio
^BX	Data Matrix (*)	[Fixed]
^BZ	PostNet (*)	[Fixed]

Additionally, each bar code field command can be issued with a definition parameter string. The parameter string defines field rotation, height, and interpretation line status for all bar codes. For some bar codes, the parameter string also sets a check digit, start character, and/or stop character. Use the definition parameter string to command the printer to print bar codes of appropriate heights and densities that conform to the specifications of the application.

The use of the parameter string is optional because all parameters have default values. If the default values for all of the bar code parameters suit the application, then only the bar code command needs to be entered.

Parameters in bar code field commands are “position specific.” If a value (other than the default value) is manually entered for one parameter the ZPL II delimiter character (a comma) must be used to mark the position of the preceding parameters in the string.

To change just the third parameter, enter two commas and then the value for the third parameter. The default values will be automatically used for the first and second parameters.

Bar Code Command Groups

Bar code commands are organized into four groups. Each group represents a type of bar code. Table 21 through Table 24 identify the groups and the bar codes they contain:

Table 21 • Numeric Only Bar Codes

ZPL Command	Command Description
^B0	Aztec Bar Code Parameters
^B1	Code 11
^B5	Planet Code Bar Code
^BI	Industrial 2 of 5
^BJ	Standard 2 of 5
^BK	ANSI Codabar (or NW-7)
^BM	MSI
^BO	Aztec Bar Code Parameters
^BP	Plessey
^BZ	POSTNET

Table 22 • Retail Labeling Bar Codes

ZPL Command	Command Description
^B0	Aztec Bar Code Parameters
^B8	EAN-8
^B9	UPC-E
^BE	EAN-13
^BO	Aztec Bar Code Parameters
^BS	UPC/EAN extensions
^BU	UPC-A

Table 23 • Alphanumeric Bar Code

ZPL Command	Command Description
^B0	Aztec Bar Code Parameters
^B3	Code 39
^BA	Code 93
^BC	Code 128
^BL	LOGMARS
^BO	Aztec Bar Code Parameters

Table 24 • Two-Dimensional Bar Codes

ZPL Command	Command Description
^B0	Aztec Bar Code Parameters
^B4	Code 49
^B7	PDF417
^BB	CODABLOCK
^BD	UPS MaxiCode
^BF	MicroPDF417
^BQ	QR Code
^BO	Aztec Bar Code Parameters
^BR	RSS (Reduced Space Symbology) Bar Code
^BT	TLC39
^BX	Data Matrix



Mod 10 and Mod 43 Check Digits

This section provides information about Mod 10 and Mod 43 check digits.

Contents

Mod 10 Check Digit	460
Mod 43 Check Digit	461

Mod 10 Check Digit

The calculations for determining the Mod 10 Check Digit character are as follows:

1. Start at the first position and add the value of every other position together.
 $0 + 2 + 4 + 6 + 8 + 0 = 20$
2. The result of Step 1 is multiplied by 3.
 $20 \times 3 = 60$
3. Start at the second position and add the value of every other position together.
 $1 + 3 + 5 + 7 + 9 = 25$
4. The results of steps 1 and 3 are added together.
 $60 + 25 = 85$
5. The check character (12th character) is the smallest number which, when added to the result in step 4, produces a multiple of 10.
 $85 + X = 90$ (next higher multiple of 10)
 $X = 5$ Check Character

This bar code illustrates the above example. The digit on the right (5) is the check digit.



Mod 43 Check Digit

The calculations for determining the Mod 43 check Digit character are as follows:

Each character in the Code 39 character set has a specific value, as follows:

0=0	B=11	M=22	X=33
1=1	C=12	N=23	Y=34
2=2	D=13	O=24	Z=35
3=3	E=14	P=25	- =36
4=4	F=15	Q=26	. = 37
5=5	G=16	R=27	Space=38
6=6	H=17	S=28	\$=39
7=7	I=18	T=29	/=40
8=8	J=19	U=30	+ =41
9=9	K=20	V=31	% =42
A=10	L=21	W=32	



Example • Data string 2345ABCDE/

1. Add the sum of all the character values in the data string. Using the chart above, the sum of the character values is as follows:

$$1 + 2 + 3 + 4 + 5 + 10 + 11 + 12 + 13 + 14 + 40 = 115$$

2. Divide the total by 43. Keep track of the remainder.

$$115/43 = 2 \text{ Remainder is } 29$$

3. The “check digit” is the character that corresponds to the value of the remainder.

$$\text{Remainder} = 29$$

29 is the value for the letter T.

T is the check digit.

Below is a bar code that illustrates the example. The character on the right, T, is the check digit.



12345ABCDE/T

^F0125,100^B3N,Y,150,Y,N^FD12345ABCDE/^FS



Notes •



ZB64 Encoding and Compression

This section describes the Base 64 MIME (ZB64) encoding and compression. This is the same type of MIME encoding that is used in e-mail.

Contents

Introduction to B64 and Z64.	464
B64 and Z64 Encoding.	466

Introduction to B64 and Z64

The first encoding, known as B64, encodes the data using the MIME Base64 scheme. Base64 is used to encode e-mail attachments and is specifically designed to address communications path limitations, such as control characters and 7-bit data links. It encodes the data using only the printable ASCII characters:

A B C D E F G H I J K L M N O P Q R S T U V W X Y Z
a b c d e f g h i j k l m n o p q r s t u v w x y z
0 1 2 3 4 5 6 7 8 9 + / =

With the use of ZPL, this has the added benefit of avoiding the caret (^) and tilde (~) characters. Base64 encodes six bits to the byte, for an expansion of 33 percent over the unenclosed data. This is much better than the 100 percent expansion given by the existing ASCII hexadecimal encoding.

The second encoding, known as Z64, first compresses the data using the LZ77 algorithm to reduce its size. (This algorithm is used by the PKWARE® compression program PKZIP™ and is integral to the PNG graphics format.) The compressed data is then encoded using the MIME Base64 scheme as described above.

A CRC is calculated across the Base64-encoded data. If the CRC-check fails or the download is aborted, the object can be invalidated by the printer.

The robust encodings can be piggybacked on the existing download commands with full backward compatibility. This is done by prefacing the new encodings with a header that uniquely identifies them. The download routines in the printer firmware can key-off the header to determine whether the data is in the old ASCII hexadecimal encoding or one of the new encodings. This allows existing downloadable objects to be used in their present format, while new objects can be created using the same download commands with the new encodings for increased integrity and reduced download times.

For easy reference, B64 and Z64 are referred to as ZB64. In any reference to the ZB64 encoding, assume that both Base64-only (B64) and LZ77/Base64 (Z64) encodings are accepted.



Example • The following is an example of an existing download command using the new encoding:

```
~DTARIAL,59494,:Z64:H4sICMB8+DMAC0FSSUFMLlRURgDsmnd8VEW7x5+ZO
edsyibZNNJhlyWhbEJIwYSwJDGNkmwghJIgJYEEehQIPSGgKAjEAiIiVaSoIJ
YNBAkIGgGxUBVUUCGU0JQSC0WFnPvBE+SF18+9H+8f973X+3Jm93umzzNznvn
NSSFGRJ6ARAVZvXK7XDaXLyTiR5B7ontuZPQ824I5RKIa6ew+aba8+pUlrVDZ
iciv
```

[multiple lines deleted]

```
/O6DU5wZ7ie2+g4xzDPwCpwm3nqW2GAPcdclxF4fIP66jHjncmKvKzh/ZUNCx
19/QQx2HXHYB4m/PkQcdCdx2G7OYt+mszkMh4iZxoifvkh89BFipo87kwD/Bf
/dOcyCAAEEA:a1b2
```

The parameters are identical to the existing ~DT command:

Table 25 • ~DT Command Parameters

Parameter	Details
o = font name	<i>Accepted Values:</i> any valid TrueType name, up to 8 characters <i>Default Value:</i> if a name is not specified, UNKNOWN is used In this example, Arial is the specified font.
s = font size	<i>Accepted Values:</i> the number of memory bytes required to hold the Zebra-downloadable format of the font <i>Default Value:</i> if an incorrect value or no value is entered, the command is ignored In this example, 59494 is the size. To maintain compatibility with the existing ASCII hexadecimal encoding, this field must contain the size of the un-enclosed and uncompressed object — the number of bytes that are finally placed into the printer's memory, not the number of bytes downloaded.
data = data string	<i>Accepted Values:</i> a string of ASCII hexadecimal values (two hexadecimal digits/byte). The total number of two-digit values must match parameter s. <i>Default Value:</i> if no data is entered, the command is ignored Everything following the size field is data. The new encoding imposes a header with a unique signature. The new encoding must start with the characters :B64: (data encoded in Base-64 only) or :Z64: (data compressed with LZ77, then encoded in Base-64) followed by the encoded data. After the data is presented, another colon (:) and four hexadecimal digits comprise the CRC. The Base64 standard allows new-line characters (carriage returns and line feeds) to be inserted into the encoded data for clarity. These characters are ignored by the printer.

When downloading graphics, the colon is used in the current ASCII hexadecimal encoding indicate “repeat the previous dot row.” Since this shorthand is invalid for the first character of data (no previous dot row has been downloaded), it is safe for the printer to detect the leading colon character as the lead-in for the new encodings.

B64 and Z64 Encoding

These download encodings, B64 and Z64, are created as drop-in replacements for the existing ASCII hexadecimal encoding.

B64 encoding do the following:

- Encode the compressed data using the MIME Base64 algorithm.
- Calculate a CRC across the encoded data.
- Add a unique header to differentiate the new format from the existing ASCII hex encoding.

Z64 encoding do the following:

- Compress the data using the LZ77 algorithm.
- Encode the compressed data using the MIME Base64 algorithm.
- Calculate a CRC across the encoded data.
- Add a unique header to differentiate the new format from the existing ASCII hexadecimal encoding.

The data field have this format:

:id:encoded_data:crc

This table identifies the parameters for this format:

Table 26 • Format Parameters

Parameter	Details
:id	the identifying string B64 or Z64
:iencoded_data	data to download, compressed with LZ77 (if the id parameter is set to Z64) and encoded with Base64.
:crc	four hexadecimal digits representing the CRC calculated over the :encoded_data field.

The printer calculates a CRC across the received data bytes and compare this to the CRC in the header. A CRC mismatch is treated as an aborted download.

The B64 and Z64 encodings can be used in place of the ASCII hexadecimal encoding in any download command. The commands are:

- ~DB – Download Bitmap Font
- ~DE – Download Encoding
- ~DG – Download Graphic
- ~DL – Download Unicode Bitmap Font
- ~DS – Download Scalable Font
- ~DT – Download TrueType Font
- ~DU – Download Unbounded TrueType Font
- ^GF – Graphic Field (with compression type set to “ASCII hex”)

The ~DB (Download Bitmap Font) command can use the new encodings in place of the ASCII hexadecimal encoding in data sub-fields. Each character is encoded individually. However, for small amounts of data, the identifying B64 or Z64 header and trailing CRC may negate any gains made by using the new format.

For backward compatibility, the ^HG (Host Graphic) command uses the ASCII hexadecimal encoding. It does not use the new encodings.



Notes • _____



Field Interactions

This section provides you with examples that show how commands interact with various justification parameters. The examples are in charts for these orientations:

- Normal
- Rotated
- Bottom-up
- Inverted

These charts are designed so that you can identify the location of the field origin and interactions between the rotation, formatting and justification commands.

Normal Orientation

Table 27 shows you the various normal orientation outputs:

	^FPH	^FPV	^FPR
^FO Left Justified	ABCDE	A B C D E	EDCBA
^FT Left Justified	ABCDE	A B C D E	EDCBA
^FO Right Justified	ABCDE	A B C D E	EDCBA
^FT Right Justified	ABCDE	A B C D E	EDCBA

Rotated Orientation

Table 28 shows you the various rotated orientation outputs:

Table 28 • Rotated Orientation Examples

	^FPH	^FPV	^FPR
^FO Left Justified	⊥ABCDE	⊥ A B C D E	EDCBA ⊥
^FT Left Justified	⊥ABCDE	⊥ A B C D E	EDCBA ⊥
^FO Right Justified	⊥ABCDE	⊥ A B C D E	EDCBA ⊥
^FT Right Justified	ABCDE ⊥	⊥ A B C D E	⊥ EDCBA

Bottom Up Orientation

Table 29 shows you the various bottom up orientation outputs:

Table 29 • Bottom Orientation Examples

	^FPH	^FPV	^FPR
^FO Left Justified	ABCDE	A B C D E	EDCBA
^FT Left Justified	ABCDE	A B C D E	EDCBA
^FO Right Justified	ABCDE	A B C D E	EDCBA
^FT Right Justified	ABCDE	A B C D E	EDCBA

Inverted Orientation

Table 30 shows you the various inverted orientation outputs:

Table 30 • Inverted Orientation Examples			
	^FPH	^FPV	^FPR
^FO Left Justified	<div> <div>+</div> <div>ABCDE</div> </div>	<div> <div>+</div> <div>E</div> <div>D</div> <div>C</div> <div>B</div> <div>A</div> </div>	<div> <div>+</div> <div>EDCBA</div> </div>
^FT Left Justified	<div> <div>+</div> <div>ABCDE</div> </div>	<div> <div>E</div> <div>D</div> <div>C</div> <div>B</div> <div>+</div> <div>A</div> </div>	<div> <div>+</div> <div>EDCBA</div> </div>
^FO Right Justified	<div> <div>+</div> <div>ABCDE</div> </div>	<div> <div>+</div> <div>E</div> <div>D</div> <div>C</div> <div>B</div> <div>A</div> </div>	<div> <div>+</div> <div>EDCBA</div> </div>
^FT Right Justified	<div> <div>+</div> <div>ABCDE</div> </div>	<div> <div>E</div> <div>D</div> <div>C</div> <div>B</div> <div>+</div> <div>A</div> </div>	<div> <div>+</div> <div>EDCBA</div> </div>



Notes •

G

Features



This appendix covers features added to major firmware releases.

Firmware x.15



Identifies features that are available in printers with firmware version V60.15.x, V50.15.x, or later.

The following is an overview of the new and enhanced features available in firmware version V60.15.x, V50.15.x, or later. These include:

- Additional wireless securities
- New and updated ZPL commands (including wireless commands)
- Extended SNMP features, providing SNMP based control over commonly-needed printer settings.
- Support for Set/Get/Do (SGD) commands

Wireless Securities

Firmware V60.15.x and V50.15.x offer support for a wider range of wireless securities. These are the supported wireless securities:

- WEP-40-BIT
- WEP-128-BIT
- EAP-TLS
- EAP-TTLS
- EAP-FAST
- PEAP
- LEAP
- WPA-PSK
- WPA EAP-TLS
- WPA EAP-TTLS
- WPA EAP-FAST
- WPA PEAP
- WPA LEAP
- KERBEROS*

* Use of any given wireless security is dependent on the RF card being used.

ZPL and SGD Commands

Table 31 identifies the new commands and updates to existing commands in firmware version V60.15.x, V50.15.x, or later. The bolded items are either new commands or new enhancements to existing commands.

Table 31 • x.14 Features in Detail

Command	Details
^KC	The ^KC command is a new command with firmware version V60.15.x, V50.15.x, or later. It allows wireless print servers to have their own client identifier (CID). When the print server is active it uses the CID on the printer. When both print servers are active they have the option to use the CID on the printer, or their own CID.
~DY	Firmware version V60.15.x, V50.15.x, or later supports .NRD (non readable file) files and .PAC files (protected access credential).
~WS	Firmware version V60.15.x, V50.15.x, or later added these new parameters: <ul style="list-style-type: none"> wireless pulse—adds a pulse to the network traffic generated by the printer. To keep the printer online, a pulse is necessary with some network configurations. wireless pulse interval—when the wireless pulse feature is enabled this sets the interval at which the wireless pulse is sent. channel mask—for commonly used channel masks. international mode—disables or enables International mode
^WX	The ^WX command configures the wireless security settings for printers using the wireless print server.

SNMP

Firmware V60.15.x, V50.15.x, or later feature support for an extended Management Information Base (MIB) file. The extended support now covers many of the printer settings, such as darkness, media type, and other printer specific settings. The MIB file can be downloaded from www.zebra.com for use with SNMP management systems.

Set/Get/Do Support

Printers with firmware V60.15.x and V50.15.x support a new set of commands known as Set/Get/Do (SGD) commands. These commands allow you to configure and get status on the wireless settings in the printer. For details on the supported commands, see [Set/Get/Do Commands on page 363](#).

Firmware x.14



Identifies features that are available in printers with firmware version V60.14.x, V50.14.x, or later.

Table 32 identifies the new commands and enhancements to existing commands in firmware V60.14.x, V50.14.x, or later. The bolded items are either new commands or new enhancements to existing commands.

Table 32 • Features in Detail

Command	Details
^CI	<p>The ^CI command selects the encoding and character set. To identify the encoding, include a ^CI in the ZPL script. These encodings are now supported with the ^CI command:</p> <p>These are new variables that were added to the desired character set or a parameter of the existing ^CI command:</p> <ul style="list-style-type: none"> • Big 5 HKSCS (^CI26) with BIGHK.DAT. This supports the Hong Kong supplementary character set of the Big 5 character set and encoding. You can download the Big 5 HKSCS DAT table from www.zebra.com. • Code Page 1252 (^CI27). The ^CI27 command supports code page 1252. • GB 18030 (^CI26) with GB18030.DAT. This supports the GB 18030 character set and encoding standard. • Unicode Support. These new values were added to the ^CI command: <ul style="list-style-type: none"> 28 = Unicode (UTF-8 encoding) 29 = Unicode (UTF-16 Big-Endian encoding) 30 = Unicode (UTF-16 Little-Endian encoding)
~DY	The ~DY command downloads fonts to the printer. Firmware version V60.14.x, V50.14.x, or later improves support for TrueType fonts and adds support for TrueType Extension fonts. When OpenType fonts can be downloaded as a TrueType font they are supported.
^FH	The ^FH command allows you to enter the hexadecimal value for any character directly into the ^FD statement. It has been updated to function with Unicode encodings.
^FL	The ^FL command provides the ability to link any TrueType font, including private character fonts to associated fonts, such that if the base font does not have a glyph for the required character, the printer looks to the linked fonts for the glyph. The font links are user-definable.
^FO, ^FT, ^FW	In firmware version earlier than V60.15.x, V50.15.x or later, the ^FO and ^FT commands were left-justified. In firmware version V60.14.x, V50.14.x, or later, a new parameter supports right- and auto-justification. Using the ^FW command allows you to set justification options.
^HT	Over a communication port, the ^HT command receives the complete list of the font links.

Table 32 • Features in Detail

Command	Details
^LF	The ^LF command prints out a list of the linked fonts.
^PA	The Advanced Text Layout Options command (^PA) is new in firmware version V60.14.x, V50.14.x, or later. Advanced text layout, such as bidirectional text layout, character shaping, and OpenType support, can be activated with the ^PA command. The glyph displayed when the character is missing from a font (default glyph) can be changed from a space character to the default glyph of a font, which is often a square box.
^SL	A new parameter was added to the ^SL command to support the Japanese language in the Real Time Clock feature set.
^TB	The text block (^TB) command is a new command in firmware version V60.14.x, V50.14.x, or later. The ^FB command allows you to print text into a defined block type format; it does not support complex text layout. In contrast, the ^TB command supports a text block with complex text.

Global Printing Solution

The Global Printing solution greatly simplifies international character label printing by supporting Unicode compatible fonts and encoding (UTF-8, UTF-16BE and UTF-16LE) directly in its printers.

These are new and enhanced features available in firmware version V60.14.x, v50.14.x, or later:

- Advanced text layout options
- Big 5 HKSCS
- GB 18030
- Unicode support (UTF-8 and UTF-16)
- Code Page 1252
- Field hexadecimal
- Field origin justification
- Font linking
- Improved font support
- Real-time clock – Japanese support
- Text block

For details on these new features, see [Table 32 on page 478](#).

Zebra firware V60.14.x, V50.14.x, or later continues to support locale-specific encoding formats. These formats include:

- Code Page 850
- Shift JIS

- GB
- Unified Hangul Code
- Big 5

What Is Unicode?

Unicode is a universal code page (which converts numeric codes into characters) that can be used with many computer platforms and software applications. While ASCII and other traditional code page encoding systems support 256 characters or less, Unicode can support almost 100,000 characters for all major languages. The languages include complex non-Western languages that can be difficult to print.

Unicode encoding and supporting fonts allow the printer to seamlessly output in any language. As a result, you do not have to select the language, font, code page, or configure or adjust the printer. Zebra's printer-resident capabilities provide fast label output and seamless multi-language printing.

You can create private libraries of logos and special characters and include them in labels. The ability to create custom characters is valuable for creating shipping labels for Asia, as many Asian fonts don't support characters for names, street names, and other proper nouns. Firmware V60.14.x, V50.14.x, or later offers features that support bidirectional printing or complex text layout, including:

- Arabic
- Hindi
- Thai
- Vietnamese
- Other languages

Glossary



This is a glossary of terms.

Glossary of Terms

ASCII American Standard Code for Information Interchange. A 7-bit character set that includes Latin characters, as well as control and punctuation characters.

bidirectional text layout The arrangement of characters with mixed directionality on a single line. For example, English and Arabic.

big-endian In the encoding, the most significant byte is stored first.

byte order mark BOM; indicates big-endian (BE) or little-endian (LE).

character The smallest component of a writing system that has understanding, refers to the abstract meaning not the specific shape.

character code Another term for code point.

character set A collection of characters.

character shaping Characters assume different glyphic forms depending on the context. They can be used with a script-based language.

coded character set An ordered collection of characters that are assigned an integral reference number.

code point An integral reference number assigned to a character.

coded character set An ordered collection of characters that are assigned an integral reference number.

combining semantic cluster Consists of an atomic character, a combining character sequence consisting of a base character plus one or more nonspacing marks, enclosing marks, combining word joiner, such as an Indic virama, or a sequence of Hangul jamos equivalent to a Hangul syllable. .

diacritic A mark that is added to a letter or other character to change its value or meaning.

encoding The mapping of a characters code points to a sequence of bytes used to represent the data.

font An electronic collection of glyphs used for the visual representation of characters.

GB18030 A standard required by the People's Republic of China for operating systems of non-handheld computers.

GB 2312 A Chinese character set and encoding.

glyph The visual representation of a character, such as a shape or image.

grapheme cluster Consists of an atomic character, a combining character sequence consisting of a base character plus one or more nonspacing marks or enclosing marks, or a sequence of Hangul jamos equivalent to a Hangul syllable.

ISO 10646 An international standard that defines the Universal Character Set (UCS) and a character encoding. The UCS matches Unicode.

ISO 8859-1 An encoding standard for representing Western European languages using the Latin Alphabet.

language A system of sounds and scripts used to represent and communicate concepts, ideas, meanings, and thoughts.

ligature A glyph representing a combination of two or more characters.

little-endian In the encoding, the least significant byte is stored first.

open type A file format for scalable font files that extends the existing TrueType font file format used by Microsoft Windows and Apple Macintosh operating systems. OpenType tables support advanced layout features.

presentation form A pre-combined character, ligature or variant glyph that has a separate code point; used for compatibility.

script A collection of symbols used to represent textual information in one or more writing systems.

Shift-JIS A shifted encoding of the Japanese character encoding standard, JIS X 0208, heavily deployed in PCs.

True type An outline font format that is scalable without quality loss.

Unicode The universal character set and encoding maintained by the Unicode Consortium.

UTF-8 The Unicode encoding that assigns each character code point to a sequence of one to four bytes.

UTF-16 A Unicode encoding form that represents Unicode code point values in the BMP with 16-bit code units and Unicode code point values in the supplementary planes with pairs of 16-bit code units.

UTF-16BE A Unicode encoding scheme based on UTF-16 that serializes the bytes in each code unit in big-endian order.

UTF-16LE A Unicode encoding scheme based on UTF-16 that serializes the bytes in each code unit in little-endian order.



Notes •

Index



A

- abort download graphic, 130
- access point
 - associated, 400
- adhoc auto mode, 398
- adhoc channel, 399
- advanced counter
 - reset, 259
- advanced counter reset, 314
- AFI byte
 - read command (^RA), 304
 - write command (^WF), 329
- alphanumeric default font
 - change, 109
- antenna parameter setting via ZPL, 343
- antenna port
 - select using ZPL, 326
- applicator reprint, 256
- ARP
 - setting via ^NS, 340
- ARP interval or cache time out, 370
- authentication
 - timeout for printer home page, 342
- auxiliary port
 - set, 202

B

- backfeed sequence
 - change, 210, 211
- bar code field default, 103
- battery
 - set condition, 200
- battery status, 170

- bitmap font
 - download, 122
- bitmapped fonts, 446
- bootp
 - enable or disable, 371
 - selecting via ^NS, 340
- box, 162

C

- cache on, 115
- calibration
 - RFID tag using ZPL (^HR), 301
- cancel all, 194
- cancel format, 208
- card.inserted, 367
- card.mac_addr, 368
- caret
 - change, 107
- change alphanumeric default font, 109
- change backfeed sequence, 210, 211
- change caret, 107
- change delimiter, 108
- change international font, 110
- change memory letter designation, 114
- change network settings, 245
- change tilde, 117
- change wired network settings, 340
- channel mask
 - setting via ^WS, 353
- circle, 164
- client identifier, 336, 376
- client identifier (CID), 336

- CODABLOCK, 44
 - considerations for ^FD character set, 46
 - considerations for the ^BY, 46
- code 11, 19
- code 128
 - subsets, 50
 - subsets A and C, 53
 - subsets a, b, and c, 48
- code 39, 23
- code 49, 27
 - automatic mode, 30
 - field data character set, 30
- code 93, 40
 - full ASCII mode, 41
- code validation, 118
- command compatibility with printers and firmware, 299
- command structure, 366
- comment, 161
- communications diagnostics, 198
 - enable, 198
- concatination, 156
- configuration
 - update, 214
- configuration
 - using ZPL commands, 335, 435, 469
 - wireless securities, 355
- configuration label
 - print, 287
- contacts, xxi
- counter reset (~RO), 314
- current partially input format
 - cancel, 216
- currently connected printer
 - set transparent, 246
- customer service, xxi

D

- darkness
 - set, 261
- data log for RFID, 300
- data matrix, 99
- date for real time clock
 - set, 279
- define EPC data structure (^RB), 306
- define language, 220
- define password, 222
- define printer name, 221
- delete object, 188
- delimiter
 - change, 108

- description information
 - display, 186
- detect multiple RFID tags (^RN), 313
- DHCP
 - selecting via ^NS, 340
- diagnostics
 - disable, 199
- diagonal line, 165
- directory label
 - print, 288
- disable diagnostics, 199
- discharge mode
 - battery, 218
- display description information, 186
- do command, 365
- double signal mode
 - setting, 319
- download bitmap font, 122
- download encoding, 124
- download format, 126
- download graphic
 - abort, 130
- download graphics, 127, 134
- download Intellifont, 131
- download true type font, 132
- download unbounded true type font, 133

E

- E.A.S. bit enable/disable command (^RE), 308
- EAN-13, 64
- EAN-8, 36
- Electronic Product Code (EPC)
 - define EPC data structure (^RB), 306
- ellipse, 166
- enable RFID motion (^RM), 312
- encoding
 - download, 124
 - select, 262
- encoding results, 325
- encryption
 - set LEAP parameters, 348
 - set values via ZPL, 344
- end format, 294
- erase download graphics, 137
- error handling, 318
- ESSID
 - printer, 403
 - setting via ^WS, 353

F

- feedback
 - suppress, 291
- field
 - field reverse, 154
 - orientation, 159
 - parameter, 153
 - separator, 155
 - typeset, 156
 - variable, 158
- field block, 137, 138
- field clock
 - real time clock, 141
- field data, 142
- field hexadecimal indicator, 143
- field number, 151
- field orientation, 159
- field origin, 152
- field parameter, 153
- field reverse print, 154
- field separator, 155
- field typeset, 156
- field variable, 158
- firmware
 - supported tag types for each version, 320
 - ZPL command compatibility, 299
- flash memory
 - initialize, 195
- font identifier, 120
- font linking, 145
- font name
 - to call font, 15
- fonts
 - font matrices, 451
 - standard printer fonts, 446
- format
 - cancel, 208
 - download, 126
 - end, 294
 - pause, 208
 - recall, 292
 - set, 290
- FTP protocol setting, 378

G

- gateway address
 - change, 379
- Gen 2
 - printers and firmware that support Gen 2, 320
 - setting password or locking tag, 327
 - specify tag type using ZPL, 317

- getvar
 - arp_interval, 370
 - card.inserted, 367
 - card.mac_addr, 368
 - ip.addr, 369
 - ip.bootp.enable, 371
 - ip.dhcp.cid_all, 372
 - ip.dhcp.cid_enable, 373
 - ip.dhcp.cid_prefix, 374
 - ip.dhcp.cid_suffix, 375
 - ip.dhcp.cid_type, 376
 - ip.dhcp.enable, 377
 - ip.ftp.enable, 378
 - ip.gateway, 379
 - ip.http.enable, 380
 - ip.lpd.enable, 381
 - ip.netmask, 382
 - ip.pop3.enable, 383
 - ip.pop3.password, 384
 - ip.pop3.poll, 385
 - ip.pop3.server_addr, 386
 - ip.pop3.username, 387
 - ip.port, 388
 - ip.smtp.domain, 389
 - ip.smtp.enable, 390
 - ip.smtp.server_addr, 391
 - ip.snmp.enable, 392
 - ip.snmp.get_community_name, 393
 - ip.snmp.set_community_name, 394
 - ip.tcp.enable, 395
 - ip.telnet.enable, 396
 - ip.udp.enable, 397
 - wlan.adhocautomode, 398
 - wlan.adhocchannel, 399
 - wlan.associated, 400
 - wlan.channel_mask, 401
 - wlan.essid, 403
 - wlan.firmware_version, 404
 - wlan.keep_alive.enable, 405
 - wlan.keep_alive.timeout, 406
 - wlan.kerberos.kdc, 407
 - wlan.kerberos.password, 408
 - wlan.kerberos.realm, 409
 - wlan.kerberos.username, 410
 - wlan.operating_mode, 411
 - wlan.password, 413
 - wlan.preamble, 414
 - wlan.private_key_password, 415

- getvar (continued)
 - wlan.roam.interval, 416
 - wlan.roam.signal, 417
 - wlan.security, 418
 - wlan.signal_noise, 420
 - wlan.signal_quality, 421
 - wlan.signal_strength, 422
 - wlan.station_name, 423
 - wlan.tx_power, 424
 - wlan.tx_rate, 425
 - wlan.username, 426
 - wlan.wep.auth_type, 427
 - wlan.wep.index, 428
 - wlan.wep.key_format, 433
 - wlan.wep.key1, 429
 - wlan.wep.key2, 430
 - wlan.wep.key3, 431
 - wlan.wep.key4, 432
 - wlan.wpa.psk, 434
- getvar command, 364
- graphic
 - box, 162
 - circle, 164
 - diagonal line, 165
 - ellipse, 166
 - field, 167
 - recall, 293
 - symbol, 169
- graphic field, 167
- graphics
 - download, 127, 134
 - erase download, 137
 - upload, 185
- graphing sensor calibration, 201

H

- head test
 - fatal, 206
 - interval, 213
 - non-fatal, 207
- head test fatal, 206
- head test interval, 213
- head test non-fatal, 207
- host
 - directory list, 183
 - graphic, 173
 - identification, 175
 - RAM status, 176
 - status return, 177
- host directory list, 183
- host graphic, 173
- host identification, 175
- host linked font list, 180
- host RAM status, 176
- host status return, 177
- host verification command (^HV), 182
- HTTP protocol, 380

I

- image
 - load, 190
 - move, 191
 - save, 192
- image load, 190
- image move, 191
- image save, 192
- industrial 2 of 5, 68
- initialize Flash memory, 195
- interleaved
 - 2 of 5, 21
- international font
 - change, 110
- international mode
 - setting via ^WS, 353
- IP address
 - printer, 369
 - setting via ^NS, 340
- ip.addr, 369
- ip.arp_interval, 370
- ip.bootp.enable, 371
- ip.dhcp.cid_all, 372
- ip.dhcp.cid_enable, 373
- ip.dhcp.cid_prefix, 374
- ip.dhcp.cid_suffix, 375
- ip.dhcp.cid_type, 376
- ip.dhcp.enable, 377
- ip.ftp.enable, 378
- ip.gateway, 379
- ip.http.enable, 380
- ip.lpd.enable, 381
- ip.netmask, 382
- ip.pop3.enable, 383
- ip.pop3.password, 384
- ip.pop3.poll, 385
- ip.pop3.server_addr, 386
- ip.pop3.username, 387
- ip.port, 388
- ip.smtp.domain, 389
- ip.smtp.enable, 390
- ip.smtp.server_addr, 391
- ip.snmp.get_community_name, 393
- ip.snmp.server_addr, 392
- ip.snmp.set_community_name, 393, 394
- ip.tcp.enable, 395

ip.telnet.enable, 396
ip.udp.enable, 397

K

Kerberos
 configuring print server for Kerberos, 355
 password, 408
 realm, 409
 username, 410
key distribution center (KDC), 407
kill battery, 218
kill password, 327

L

label
 maximum length, 232
 reverse print, 226
 shift, 227
 top, 228
label home, 223, 224
label length, 225
 set, 204
language
 define, 220
LDP protocol setting, 381
LEAP mode
 setting using ZPL, 348
 setting via ^WX, 355
liability, ii
linked font
 host list, 180
lock RFID tag
 Gen 2, 327
 not Gen 2, 309
log file for RFID, 300
LOGMARS, 74

M

map clear, 229
maximum label length, 232
media
 darkness, 230
 feed, 231
 ordering, xxi
 tracking, 235
 type, 238
media darkness, 230
media sensor
 set, 277
media sensor calibration, 197
 set, 197

media tracking, 235
media type, 238
memory letter designation
 change, 114
mirror image
 printing, 250
mode protection, 236
modify head warning, 241
motion in RFID label, 312
MSI, 76
multiple field origin locations, 148

N

network
 change settings, 245
 connect, 242
 ID number, 243
network boot command, 337
network configuration label
 print via ZPL, 349
network connect, 242
network ID number, 243
network operating mode, 411
network printers
 set all transparent, 244
network settings
 setting via ZPL, 346
number of retries for block (^RR), 316

O

object delete, 188
offset for real time clock
 set, 271
option 61, 376
 ip.dhcp.cid_enable, 373
 ip.dhcp.cid_prefix, 374
optional memory
 reset, 196
ordering ribbon and media, xxi

P

password
 define, 222
 set wireless password via ^WP, 350
password for RFID tag, 327
pause
 programmable, 252
pause format, 208
PDF417, 32
 consideration for ^FD, 35
permanently lock Gen 2 tag data, 327

- POP3
 - mailbox, 383
 - mailbox password, 384
 - poll interval, 385
 - username, 387
- POP3 server
 - IP address, 386
- POSTNET, 105
- power on
 - reset, 209
- preamble length
 - radio, 414
- pre-shared key value, 434
- primary/secondary device
 - setting via ZPL, 339
- print
 - start, 257
 - width, 258
- print mode, 233
- print network configuration label
 - via ZPL command, 349
- print orientation, 251
- print quantity, 253
- print rate, 254
- print start, 257
- print width, 258
- printer
 - sleep, 295
- printer IP address, 369
- printer name
 - define, 221
- printer sleep, 295
- printer web pages
 - set timeout value, 342
- printhead resistance
 - set, 276
- printing mirror image of label, 250
- private key password, 415
- programmable pause, 252
- programming position
 - set using ZPL, 318

Q

- QR code
 - normal mode, 85
- quantity
 - print, 253

R

- read power
 - change using ZPL, 326

- read RFID tag
 - read or write RFID format (^RF), 309
 - read RFID tag (^RT), 323
- read/write position
 - set using ZPL, 318
- real time clock
 - set language, 267
 - set mode, 267
- real time clock date format
 - select, 219
- real time clock time format
 - select, 219, 336
- recall format, 292
- recall graphic, 293
- report RFID encoding results, 325
- reprint
 - after error, 217
 - applicator, 256
- reset
 - power on, 209
- reset advanced counter, 259
- reset advanced counters (~RO), 314
- reset optional memory, 196
- reset wireless radio card and print server, 352
- return data to host computer (^HV), 182
- return RFID data log to host, 300
- RFID
 - calibrate RFID tag using ZPL (^HR), 301
 - change read power using ZPL, 326
 - change write power using ZPL, 326
 - detect multiple tags (^RN), 313
 - enable motion (^RM), 312
 - number of retries for block (^RR), 316
 - RFID setup command (^RS), 317
 - verify write operation (^WV), 333
- RFID tag ID command (^RI), 311
- ribbon
 - ordering, xxi
- ribbon tension
 - set, 215

S

- sales, xxi
- scalable font, 13, 446
 - download Intellifont, 131
- security type
 - setting via ^WX, 355
- select encoding, 262
- sensor calibration
 - graphing, 201
- serial communications
 - set, 260

- serialization data, 269
- serialization field
 - standard ^FD string, 263
- set all network printers transparent, 244
- set auxiliary port, 202
- set battery condition, 200
- set darkness, 261
- set dots
 - millimeter, 205
- set dots per millimeter, 205
- set label length, 204
- set RFID tag or kill password (^RZ), 327
- set serial communications, 260
- set units of measurements, 239
- set up RFID information (^RS), 317
- setvar
 - ip.addr, 369
 - ip.arp_interval, 370
 - ip.bootp.enable, 371
 - ip.dhcp.cid_all, 372
 - ip.dhcp.cid_enable, 373
 - ip.dhcp.cid_prefix, 374
 - ip.dhcp.cid_suffix, 375
 - ip.dhcp.cid_type, 376
 - ip.dhcp.enable, 377
 - ip.ftp.enable, 378
 - ip.gateway, 379
 - ip.http.enable, 380
 - ip.lpd.enable, 381
 - ip.netmask, 382
 - ip.pop3.enable, 383
 - ip.pop3.password, 384
 - ip.pop3.poll, 385
 - ip.pop3.server_addr, 386
 - ip.pop3.username, 387
 - ip.port, 388
 - ip.smtp.domain, 389
 - ip.smtp.enable, 390
 - ip.smtp.server_addr, 391
 - ip.snmp.enable, 392
 - ip.snmp.get_community_name, 393
 - ip.snmp.set_community_name, 394
 - ip.tcp.enable, 395
 - ip.telnet.enable, 396
 - ip.udp.enable, 397
 - wlan.adhocautomode, 398
 - wlan.adhocchannel, 399
 - wlan.channel_mask, 401
 - wlan.essid, 403
 - wlan.keep_alive.enable, 405
 - wlan.keep_alive.timeout, 406
 - wlan.kerberos.kdc, 407
 - wlan.kerberos.password, 408
 - wlan.kerberos.realm, 409
 - wlan.kerberos.username, 410
 - wlan.operating_mode, 411
 - wlan.password, 413
 - wlan.preamble, 414
 - wlan.private_key_password, 415
 - wlan.roam.interval, 416
 - wlan.roam.signal, 417
 - wlan.security, 418
 - wlan.station_name, 423
 - wlan.tx_power, 424

- setvar (continued)
 - wlan.tx_rate, 425
 - wlan.username, 426
 - wlan.wep.auth_type, 427
 - wlan.wep.index, 428
 - wlan.wep.key_format, 433
 - wlan.wep.key1, 429
 - wlan.wep.key2, 430
 - wlan.wep.key3, 431
 - wlan.wep.key4, 432
 - wlan.wpa.psk, 434
- setvar command, 364
- SGD command structure, 366
- SGTIN-64 standard programming example, 307
- single signal mode
 - setting, 319
- slew
 - home position, 249
- slew given number
 - dot rows, 248
- slew to home position, 249
- SMTP IP address, 391
- SMTP parameters
 - setting via ZPL, 341
- SMTP protocol, 389, 390
- SNMP
 - get community, 393
 - set community, 394
- SNMP parameters
 - setting via ZPL, 338
- SNMP protocol, 392
- SNMP query, 393
- specify number of retries for block (^RR), 316
- standard printer fonts, 446
- start print, 272
- subnet mask address
 - enable or disable, 382
- symbol, 169, 172

T

- tag type
 - specify using ZPL, 317
- TCP communication, 388
- TCP socket protocol, 395
- tear-off adjust position, 283
- technical support, xxi
- TELNET protocol, 396
- text blocks, 284
- text properties
 - advanced, 247
- tilde
 - change, 117

- time for real time clock
 - set, 279
- timeout value for printer home page, 342
- transfer object, 285
- transmit rate
 - setting via ^WR, 351
- transponders
 - calibration using ZPL (^HR), 301
- true type font
 - download, 132

U

- UDP communication, 388
- UDP socket protocol, 397
- unbounded true type font
 - download, 133
- units of measurement
 - set, 239
- UPC/EAN extensions, 92
- UPC-A, 97
- UPC-E, 38
- update configuration, 214
- upload graphics, 185
- UPS maxicode, 61
 - considerations for ^FD, 62
- use font name to call font, 15

V

- verify RFID write operation (^WV), 333
- void handling, 318

W

- web authentication timeout value, 342
- web server setting, 380
- WEP key format, 433
- WEP mode
 - configuring print server for WEP, 355
 - setting encryption index via ^WX, 356
- width
 - print, 258
- wired equivalent privacy, 428
- wired print server
 - ^NB to set check for, 337
 - change network settings, 340
- wireless password
 - setting via ^WP, 350
- Wireless Print Server
 - ZPL commands, 435, 469
- wireless print server
 - change network settings, 346

- wireless pulse and interval
 - setting via ^WS, 353
- wireless radio card
 - reset via ZPL, 352
 - setting values via ^WS, 353
- wlan.adhocautomode, 398
- wlan.adhocchannel, 399
- wlan.associated, 400
- wlan.channel_mask, 401
- wlan.essid, 403
- wlan.firmware_version, 404
- wlan.keep_alive.enable, 405
- wlan.keep_alive.timeout, 406
- wlan.kerberos.kdc, 407
- wlan.kerberos.password, 408
- wlan.kerberos.realm, 409
- wlan.kerberos.username, 410
- wlan.operating_mode, 411
- wlan.password, 413
- wlan.preamble, 414
- wlan.private_key_password, 415
- wlan.roam.interval, 416
- wlan.roam.signal, 417
- wlan.security, 418
- wlan.signal_noise, 420
- wlan.signal_quality, 421
- wlan.signal_strength, 422
- wlan.station_name, 423
- wlan.tx_power, 424
- wlan.tx_rate, 425
- wlan.username, 426
- wlan.wep.auth_type, 427
- wlan.wep.index, 428
- wlan.wep.key_format, 433
- wlan.wep.key1, 429
- wlan.wep.key2, 430
- wlan.wep.key3, 431
- wlan.wep.key4, 432
- wlan.wpa.psk, 434
- write AFI byte command (^WF), 329
- write power
 - change using ZPL, 326
- write RFID format (^RF), 309
- write RFID tag (^WT), 331
 - or ~HL), 300
- ^HR, Calibrate RFID Transponder, 301
- ^RA, Read AFI Byte, 304
- ^RB, Define EPC Data Structure, 306
- ^RE, Enable/Disable E.A.S. Bit, 308
- ^RF, Read or Write RFID Format, 309
- ^RI, Get RFID Tag ID, 311
- ^RM, Enable RFID Motion, 312
- ^RN, Detect Multiple RFID Tags, 313
- ^RR, Specify RFID Retries for a Block, 316
- ^RS, RFID Setup, 317
- ^RT, Read RFID Tag, 323
- ^RW, Set RFID Read and Write Power, 326
- ^RZ, Set RFID Tag Password and Lock Tag, 327
- ^WF, Write AFI Byte, 329
- ^WT, Write Tag, 331
- ^WV, Verify RFID Write Operation, 333
- ~RO, Reset Advanced Counters, 314
- ~RV, Report RFID Encoding Results, 325
- command compatibility with printers and
 - firmware, 299
- ZebraNet Alert
 - halt, 274
 - set, 280
- ZPL
 - set, 282
- ZPL commands, 335
 - ^B7, 32
 - Wireless Print Server commands, 435, 469

Z

Zebra Programming Language (ZPL II)

- ^HL or ~HL, Return RFID Data Log to Host (^HL



Zebra Technologies Corporation

333 Corporate Woods Parkway
Vernon Hills, Illinois 60061.3109 U.S.A.
Telephone: +1 847 793 2600
Facsimile: +1 847 913 8766

Zebra Technologies Europe Limited

Zebra House
The Valley Centre, Gordon Road
High Wycombe
Buckinghamshire HP13 6EQ, UK
Telephone: +44 (0) 1494 472872
Facsimile: +44 (0) 1494 450103

Zebra Technologies Asia Pacific, LLC

16 New Industrial Road
#05-03 Hudson TechnoCentre
Singapore 536204
Telephone: +65 6858 0722
Facsimile: +65 6885 0838